



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting battery	4
4.1 Disconnecting battery	4
4.2 Reconnecting battery	4
5 Removing and installing battery	6
5.1 Vehicles with a petrol engine	6
5.2 Vehicles with a diesel engine	7
6 Specified torques: battery	9
7 Starter	10
7.1 Removing and installing starter, automatic gearbox	10
7.2 Removing and installing starter, manual gearbox	19
7.3 Removing and installing starter, dual clutch gearbox (DSG)	37
8 Specified torques: starter	47
9 Alternator	48
9.1 Securing B+ (battery positive) wire to alternator	48
9.2 Checking poly V-belt	48
9.3 Alternator, 1.4 l TSI engine	48
9.4 Alternator, 1.6 l injection engine	54
9.5 Alternator, 1.6 l FSI engine	60
9.6 Alternator, 2.0 l FSI engine	64
9.7 Alternator, 2.0 l natural gas engine	72
9.8 Alternator, 1.9 l and 2.0 l TDI engine (with no dual clutch gearbox "DSG")	79
9.9 Alternator, 1.9 l and 2.0 l TDI engine (with dual clutch gearbox "DSG")	89
9.10 Removing and installing poly V-belt pulley on alternator	96
9.11 Voltage regulator for alternator	101
10 Cruise control system (CCS)	104
90 - Gauges, instruments	105
1 Dash panel insert	105
1.1 Renewing dash panel insert	105
1.2 Removing and installing dash panel insert	106
1.3 Description of back of dash panel insert	106
1.4 Warning lamp symbols in dash panel insert, vehicles to 09/06	107
1.5 Warning lamp symbols in dash panel insert, vehicles from 10/06	109
2 Service interval display	111
2.1 Resetting service interval display	111
92 - Windscreen wash/wipe system	112
1 Windscreen wiper system (opposing action system)	112
1.1 General description	112
1.2 Deactivating APP function of wiper motors	113
1.3 Removing and installing windscreen wiper system	113
1.4 Removing and installing wiper arms	117
1.5 Adjusting wiper blade park position	118
1.6 Removing and installing joint-free wipers	119



1.7	Removing and installing wiper blade of joint-free wiper	119
1.8	Removing and installing rain and light sensor G397	121
2	Windscreen wiper system (parallel action system)	124
2.1	General description	124
2.2	Deactivating APP function of wiper motor	124
2.3	Removing and installing windscreen wiper system	125
2.4	Removing and installing wiper arms	128
2.5	Adjusting windscreen wiper park position	129
2.6	Removing and installing joint-free wipers	130
2.7	Removing and installing wiper blade of joint-free wiper	131
2.8	Removing and installing rain and light sensor G397	133
3	Windscreen washer system	136
3.1	Assembly overview - windscreen washer system	136
3.2	Removing and installing reservoir for window washer and headlight washer systems	137
3.3	Removing and installing windscreen and rear window washer pump V59	142
3.4	Removing and installing windscreen washer fluid level sender G33	142
3.5	Removing and installing windscreen washer system spray jets	143
3.6	Adjusting windscreen washer system spray jets	144
4	Rear window wiper system	145
4.1	Removing rear window wiper	145
4.2	Adjusting rear window wiper park position	147
4.3	Renewing wiper rubber blade	147
4.4	Removing and installing joint-free wiper	148
5	Rear window washer system	150
5.1	Assembly overview - rear window washer system	150
5.2	Renewing spray jet	151
5.3	Adjusting spray jet	151
6	Headlight washer system	152
6.1	Assembly overview - headlight washer system	152
6.2	Removing and installing headlight washer system pump V11	154
6.3	Removing and installing spray jet pop-up cylinders	154
6.4	Removing and installing spray jet assembly	155
6.5	Adjusting headlight washer system spray jets	156
6.6	Bleeding headlight washer system	156
7	Washer fluid line hose couplings	157
8	Hose repair	158
9	Specified torques: window wash/wipe system	159
94	Lights, bulbs, switches - exterior	160
1	Headlights with halogen bulbs, vehicles to 09/06	160
1.1	General description	160
1.2	Assembly overview - headlights with halogen bulbs	160
1.3	Removing and installing headlight	162
1.4	Adjusting headlight installation position	163
1.5	Renewing headlight bulbs	164
1.6	Removing and installing headlight range control motor	169
1.7	Repairing headlight retaining tabs	171
1.8	Converting headlights for use when driving on the left or right	172
1.9	Adjusting headlights	175
2	Headlights with halogen bulbs, vehicles from 10/06	176
2.1	General description	176
2.2	Assembly overview - headlights with halogen bulbs, vehicles from 10/06	176
2.3	Removing and installing headlight	178
2.4	Adjusting headlight installation position	179



2.5	Renewing headlight bulbs	180
2.6	Headlight range control motor	186
2.7	Repairing headlight retaining tabs	188
2.8	Converting headlights for use when driving on the left or right	190
3	Headlights with gas discharge bulbs	193
3.1	General description	193
3.2	Assembly overview - gas discharge headlights	193
3.3	Removing and installing headlight	195
3.4	Adjusting headlight installation position	195
3.5	Renewing headlight bulbs	195
3.6	Removing and installing headlight range control motor	197
3.7	Removing and installing gas discharge bulb control unit	199
3.8	Headlight range control unit J431	200
3.9	Vehicle level sender	200
3.10	Repairing headlight retaining tabs	203
3.11	Converting headlights for use when driving on the left or right	203
3.12	Adjusting headlights	204
4	Headlights with gas discharge bulbs and cornering lights	205
4.1	General description	205
4.2	Assembly overview - headlights with gas discharge bulbs and cornering lights	206
4.3	Removing and installing headlight with gas discharge bulb and cornering light	208
4.4	Adjusting headlight installation position	209
4.5	Renewing headlight bulbs	210
4.6	Headlight range control motor	217
4.7	Control motor for dynamic cornering light	217
4.8	Static cornering light	218
4.9	Swivel module position sensor	218
4.10	Dipped beam screen	219
4.11	Electronic starter unit with AFS output module	219
4.12	Headlight range control unit	220
4.13	Vehicle level sender	221
4.14	Converting headlights for use when driving on the left or right	223
4.15	Adjusting headlights	225
4.16	Operation and safety notes for gas discharge bulbs	225
5	Fog lights	228
5.1	Removing and installing fog light	228
5.2	Removing and installing left fog light bulb L22 or right fog light bulb L23	228
5.3	Adjusting fog lights	229
6	Turn signal in exterior mirror	230
6.1	Removing and installing turn signal in exterior mirror	230
7	Tail lights (tail light cluster)	231
7.1	Assembly overview - tail light	231
7.2	Removing and installing tail light	231
7.3	Removing and installing tail light bulb carrier	233
7.4	Adjusting installation position of tail light	234
8	Number plate light	235
8.1	Removing and installing number plate light X	235
9	Additional brake light	236
9.1	Removing and installing additional brake light M25	236
10	Steering column switch	238
10.1	Assembly overview - steering column switch	238
10.2	Removing and installing steering column switch	240
10.3	Steering column electronics control unit J527	246
10.4	Steering angle sender G85	246



11	Ignition/starter switch and lock cylinder	247
11.1	Removing and installing steering lock housing	247
11.2	Removing and installing lock cylinder	247
11.3	Removing and installing ignition/starter switch	249
11.4	Removing and installing ignition key withdrawal lock solenoid N376	250
12	Rear parking aid (PDC)	252
12.1	General description	252
12.2	Assembly overview - rear parking aid (PDC)	252
12.3	Rear parking aid control unit	254
12.4	Removing and installing rear parking aid sender	256
12.5	Removing and installing rear parking aid warning buzzer H15	257
12.6	Rear parking aid final control diagnosis	258
13	Front parking aid (PDC)	259
13.1	General description	259
13.2	Assembly overview - front parking aid (PDC)	259
13.3	Control unit for front parking aid	259
13.4	Front parking aid senders	259
13.5	Front parking aid button E266	259
13.6	Front parking aid warning buzzer H22	260
14	Park assist steering (PAS)	261
14.1	General description	261
14.2	Assembly overview of park assist steering	262
14.3	Park assist steering control unit J791	264
14.4	Front parking aid sender and park assist steering sender	265
14.5	New park assist steering and front parking aid senders and sender retainers, in case of repair	267
14.6	Park assist steering button E581	271
14.7	Front parking aid warning buzzer H22	271
14.8	Rear parking aid warning buzzer H15 (vehicles with park assist steering)	272
15	Specified torques: lights, bulbs, switches - exterior	274
15.1	Specified torques: headlights	274
15.2	Specified torques: fog lights	274
15.3	Specified torques: tail light cluster	274
15.4	Specified torques: vehicle level sender	274
96	Lights, bulbs, switches - interior	275
1	Interior lights and switches	275
1.1	Vehicles up to 09/06, removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	275
1.2	Vehicles from 10/06, removing and installing interior monitoring deactivation switch and deactivation button for vehicle inclination sender	276
2	Lights and switches in engine compartment	278
2.1	Removing and installing bonnet contact switch F266	278
3	Lights and switches in dash panel	279
3.1	Removing and installing light switch E1	279
3.2	Removing and installing glove compartment light W6 and glove compartment light switch E26	280
3.3	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	281
3.4	Removing and installing key-operated switch to deactivate front passenger side airbag E224	283
3.5	Removing and installing front passenger side airbag deactivated warning lamp K145	283
3.6	Removing and installing hazard warning light switch E3	284
4	Lights and switches in front doors	286
4.1	Front left entry light W31 and front right entry light W32	286
4.2	Removing and installing window regulator switch in front passenger door E107	288



4.3	Removing and installing switch element for mirror adjustment on driver side	289
4.4	Removing and installing driver side interior locking button for central locking system E308	290
4.5	Components - front door locks	291
4.6	Removing and installing driver side window regulator switch element	291
4.7	Removing and installing fuel tank flap release button E319	293
5	Lights and switches in rear doors	295
5.1	Rear left entry light W33 and rear right entry light W34	295
5.2	Components - rear door locks	295
5.3	Installing and removing rear left window regulator switch E52 and rear right window regulator switch E54	295
6	Lights and switches in luggage compartment	297
6.1	Removing and installing luggage compartment light W3	297
6.2	Removing and installing rear lid locking unit F256	298
7	Lights and switches in roof trim	299
7.1	Front interior and reading lights	299
7.2	Removing and installing sliding sunroof switch E8	303
7.3	Rear interior and reading lights	304
7.4	Removing and installing light for vanity mirror	308
8	Lights and switches in centre console	310
8.1	Removing and installing buttons in centre console storage compartment	310
9	12 V socket	312
10	Cigarette lighter U1	313
11	Horn	314
11.1	Removing and installing treble horn H2 and bass horn H7	314
11.2	Checking treble horn H2 and bass horn H7	316
11.3	Horn plate H	316
12	Immobiliser, vehicles up to 09.06	317
12.1	Immobiliser control unit J362	317
12.2	Immobiliser reader coil D2	317
12.3	Ignition key	318
12.4	Exchanging all immobiliser components	318
12.5	Online system test	318
13	Immobiliser, vehicles from 10/06	319
13.1	Immobiliser control unit J362	320
13.2	Ignition key	320
13.3	New identity on renewing all components	320
13.4	Fazit system test	320
14	Anti-theft alarm (ATA)	322
14.1	Activating and deactivating anti-theft alarm	322
14.2	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	323
14.3	Removing and installing interior monitoring sensor G273	323
14.4	Removing and installing vehicle inclination sender G384	323
14.5	Central locking and anti-theft alarm system aerial R47	324
14.6	Alarm horn H12	324
15	Specified torques: lights, bulbs and switches - interior	326
15.1	Torque settings: alarm horn H12	326
15.2	Torque settings: alarm horns	326
97 - Wiring		327
1	Vehicle diagnosis, testing and information systems	327
2	Removing and installing fuse holder	328
2.1	Removing and installing fuse holder on left beneath dash panel	328



3	Removing and installing relay carrier	329
3.1	Removing and installing relay carrier on left of dash panel	329
3.2	Removing and installing relay carrier on onboard supply control unit	329
4	Removing and installing electronics boxes (E-boxes)	331
4.1	Removing and installing E-box on left side of engine compartment up to 10/2008	331
4.2	Removing and installing E-box on left side of engine compartment from 11/2008	335
5	Control units	340
5.1	Onboard supply control unit J519 , vehicles to 05/10	341
5.2	Onboard supply control unit J519 , vehicles from 06/10	343
5.3	Convenience system central control unit J393	346
5.4	Data bus diagnostic interface J533 (gateway)	349
5.5	Trailer detector control unit J345	351
5.6	Trailer detector control unit J345 from 06/2007	354
5.7	Special vehicle control unit J608	356
6	Specified torques: wiring	358
6.1	Specified torques: E-box on left side of engine compartment up to 10/2008	358
6.2	Specified torques: electronics box (E-box) on left side of engine compartment from 11/2008	358
7	Wiring harness and connector repairs	359