



Contents

91 - Communication	1
1 Communication systems	1
1.1 Fault finding	1
2 Radio units and radio navigation systems in general	2
2.1 Removing and installing radio units and radio navigation systems	2
2.2 Adapting navigation system components	5
2.3 Adapting radio components	6
3 Radio system "RCD 210"	7
3.1 General notes	7
3.2 Overview of radio system "RCD 210"	7
3.3 Overview of connectors on radio "RCD 210"	9
3.4 Anti-theft coding	10
4 Radio system "RCD 300"	12
4.1 General description	12
4.2 Overview of radio system "RCD 300"	13
4.3 Overview of connectors on radio unit "RCD 300"	15
4.4 Anti-theft coding	16
5 Radio system "RCD 310"	18
5.1 General notes	18
5.2 Overview of radio system "RCD 310"	18
5.3 Overview of connectors on radio unit "RCD 310"	20
5.4 Anti-theft coding	22
6	25
6.1 General description	25
6.2 Overview of radio system "RCD 500"	26
6.3 Activating transport protection device of CD changer in "RCD 500"	27
6.4 Overview of connectors on radio unit "RCD 500"	28
6.5 Anti-theft coding	30
7 Radio system "RCD 510"	32
7.1 General notes	32
7.2 Overview of radio system "RCD 510"	33
7.3 Activating/deactivating transport lock for CD changer in "RCD 510"	34
7.4 Overview of connectors on radio "RCD 510"	35
7.5 Anti-theft coding	39
8	44
8.1 General description	45
8.2 Overview of "radio navigation system 2" with multifunction display (MFD)	46
8.3 Overview of radio navigation system connectors	47
8.4 Anti-theft coding	51
9	52
9.1 General notes	52
9.2 Features of radio navigation system "RNS 315"	52
9.3 Assembly overview of the radio navigation system "RNS 315"	53
9.4 System overview of the radio navigation system "RNS 315"	55
9.5 Overview of connectors on radio navigation system "RNS 315"	56
9.6 Anti-theft coding	59
10	63
10.1 General notes	63
10.2 Overview of radio navigation system "RNS 510"	63
10.3 Overview of connectors on radio navigation system "RNS 510"	65
10.4 Anti-theft coding	69



11	72
11.1	General description	72
11.2	Overview of radio navigation system "RNS 300" with monochrome display	73
11.3	Overview of connectors on radio navigation system "RNS 300"	75
11.4	Anti-theft coding	77
12	81
12.1	General notes	81
12.2	Overview of radio navigation system "RNS 310"	82
12.3	Overview of radio navigation system "RNS 310"	85
12.4	Overview of connectors on radio navigation system "RNS 310"	85
12.5	Anti-theft coding	87
13	91
13.1	General notes	91
13.2	Removing and installing radio navigation system	92
13.3	Overview of connectors on radio navigation system	94
13.4	Anti-theft coding	96
13.5	Fault finding on radio navigation system	98
14	Sound system amplifier	102
14.1	General description	102
14.2	Removing and installing amplifier	102
14.3	Pin assignments on connectors of amplifier	104
15	Multimedia system RSE (Rear Seat Entertainment)	106
15.1	General description	106
15.2	Overview of multimedia system with DVD player	107
15.3	Removing and installing DVD player	108
15.4	Removing and installing multimedia control unit	110
15.5	Removing and installing multimedia display unit (monitor)	115
15.6	Removing and installing multimedia operating unit	118
15.7	Changing remote control batteries	119
15.8	Special features of multimedia system RNS on vehicles 11.07 ►	119
16	CD changer	121
16.1	Removing and installing CD changer	121
17	USB connection for USB sticks and MP3 player	123
17.1	General notes	123
17.2	Removing and installing storage compartment with USB connection	125
17.3	Overview of connectors on USB connection	127
17.4	Fault finding procedure	128
18	"Apple" "iPod player" holder	129
18.1	General notes	129
18.2	Fault finding	129
18.3	Overview of the "iPod player" holder	129
18.4	Removing and installing holder adapter	130
18.5	Removing and installing "iPod player" holder	131
18.6	Overview of connectors on "iPod player" holder	132
18.7	Fault finding procedure	133
19	Connection for external audio sources 06/2006 ►	134
19.1	Pin assignment of connection for external audio sources	134
19.2	Removing and installing connection for external audio sources	134
20	Interface for external multimedia unit R215	136
20.1	General notes	136
20.2	System overview of "interface for external multimedia unit"	136
20.3	Removing and installing interface for external multimedia unit	137
21	Loudspeaker systems	139
21.1	Overview of loudspeaker system	139



21.2	Removing and installing front bass loudspeakers	140
21.3	Removing and installing rear bass loudspeakers	141
21.4	Removing and installing front mid-range and treble loudspeakers	142
21.5	Removing and installing rear treble loudspeakers	144
22	Telephone system	145
22.1	General notes	145
22.2	Overview of telephone system	145
22.3	Removing and installing telephone bracket ▶ 3.2003	147
22.4	Removing and installing telephone bracket 04.2003 ▶ up to 12.2006	148
22.5	Removing and installing telephone bracket 12.2006 ▶	150
22.6	Removing and installing mobile telephone operating electronics control unit -J412- (interface box) ▶ 06.2006	152
22.7	Removing and installing mobile telephone operating electronics control unit -J412- (interface box) 06.2006 ▶	153
22.8	Removing and installing telephone microphone R38 for telephone system	154
23	Aerial systems	156
23.1	General notes	156
23.2	Overview of aerial system in conjunction with radio units "RCD 300" ▶ 08.3003 and "RCD 210"	157
23.3	Overview of aerial system in conjunction with radio navigation systems "RNS 300" and "DX-R4"	158
23.4	Overview of aerial system in conjunction with radio units "RCD 300" 09.2003 ▶ and "RCD 500"	159
23.5	Overview of aerial system in conjunction with radio units "RCD 310" and "RCD 510"	160
23.6	Overview of aerial system in conjunction with radio navigation system "RNS 510"	161
23.7	Overview of aerial system in conjunction with radio navigation system "RNS MFD 2" with CD or DVD drive	162
23.8	Removing and installing aerial amplifiers over side windows	162
23.9	Roof aerial	163
23.10	Removing and installing aerial selection control unit	164
23.11	Renewal of aerial wiring	165
24	Multifunction steering wheel	166
24.1	General notes	166
24.2	Removing and installing steering wheel operating unit	166
24.3	Removing and installing multifunction steering wheel control unit	167
24.4	Adapting multifunction steering wheel components	168
25	Notes on operating mobile telephones and two-way radios	169
25.1	General notes	169
25.2	Notes on performing repair work	170
25.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	171
25.4	Transmitting power and aerial fitting locations	172
26	Suppression measures	174
26.1	Suppression measures	174