



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Tools	1
1.2 Automatic anti-dazzle interior mirror	1
1.3 Removing and installing interior mirror (►2008)	1
1.4 Removing and installing interior mirror (model year 2009►)	3
1.5 Removing and installing interior mirror with rain sensor (model year 2009►)	4
1.6 Bonding retaining plate for interior mirror	5
2 Compartments, covers and trims	12
2.1 Tools	12
2.2 Removing and installing front section of centre console	12
2.3 Removing and installing centre console	16
2.4 Removing and installing centre armrest, equipment version "Concept line"	24
2.5 Removing and installing centre console compartment lid (equipment option "Conceptline" only)	29
2.6 Removing and installing centre armrest, equipment version "Trendline" and "Highline"	31
2.7 Removing and installing lower part of centre armrest, equipment version "Trendline" and "Highline"	35
2.8 Removing and installing centre dash panel compartment	38
2.9 Removing and installing foot well trim	39
2.10 Removing and installing dash panel trim	40
2.11 Removing and installing dash panel centre trim	41
2.12 Removing and installing dash panel end trims	42
2.13 Removing and installing steering column trim	43
2.14 Removing and installing sun visor	44
2.15 Removing and installing compartment in moulded headliner	49
2.16 Removing and installing driver side compartment	50
2.17 Removing and installing glove compartment	51
3 Sill panel mouldings	53
3.1 Tools	53
3.2 Removing and installing sill panel moulding	53
3.3 Removing and installing sill panel mouldings at rear	54
3.4 Removing and installing inner and end scuff plates for rear seat	55
4 Grab handles	57
4.1 Removing and installing roof grab handles	57
69 - Passenger protection	58
1 Seat belts	58
1.1 Safety regulations for belt tensioners	58
1.2 Disposal of belt tensioner units	58
1.3 Assembly overview - front seat belts	58
1.4 Removing and installing front seat belts	59
1.5 Removing and installing front belt height adjuster	61
1.6 Removing and installing front belt buckle	62
1.7 Assembly overview - seat belts for outer seats, 2nd row	63
1.8 Removing and installing seat belts for outer seats, 2nd row	64
1.9 Removing and installing belt height adjusters for 2nd row	66
1.10 Removing and installing seat belts for middle seat, 2nd row	68
1.11 Removing and installing belt buckles for 2nd row	71
1.12 Removing and installing seat belts for 3rd row	72
1.13 Removing and installing belt buckles for 3rd row	74
2 Inspecting seat belts	76
2.1 Checks	76



3	Airbag	80
3.1	Overview of locations - airbag systems	80
3.2	Safety precautions when working on airbag	81
3.3	Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	82
3.4	Removing and installing airbag control unit (J234)	83
3.5	Removing and installing driver airbag unit	85
3.6	Removing and installing return spring with slip ring	96
3.7	Removing and installing front passenger airbag unit	96
3.8	Removing and installing side airbags on driver and front passenger sides	101
3.9	Removing and installing curtain airbag on driver and passenger side, ▶ calendar week 41/2006	104
3.10	Removing and installing curtain airbag on driver and passenger side, calendar week 42/2006▶	107
3.11	Removing and installing curtain airbag on driver and passenger side, Touran 2011▶	113
3.12	Removing and installing Seat occupied sensor, front passenger side G128	116
4	Crash sensors	118
4.1	Crash sensors	118
70 - Trim, insulation		120
1	Dash panel	120
1.1	Tools	120
1.2	Removing and installing dash panel	120
1.3	Removing and installing central tube for dash panel	125
2	Door trims	131
2.1	Tools	131
2.2	Removing and installing front door trim on driver side	131
2.3	Removing and installing front door trim on passenger side	133
2.4	Removing and installing rear door trim	135
2.5	Renewing trim strip in door trim	138
2.6	Renewing loudspeaker cover in door trim	139
3	Pillar trims	140
3.1	Special tools, workshop equipment, test and measuring devices and auxiliary items required	140
3.2	Removing and installing upper trim for A-pillar	140
3.3	Removing and installing middle trim for A-pillar	143
3.4	Removing and installing upper B-pillar trim	144
3.5	Removing and installing lower trim for B-pillar	145
3.6	Removing and installing C-pillar trim	146
3.7	Separating C-pillar trim from fasteners	148
3.8	Removing and installing D-pillar trim, 5-seater	149
3.9	Removing and installing D-pillar trim, 7-seater	151
4	Rear lid trim	153
4.1	Tools	153
4.2	Removing and installing rear lid trim	153
4.3	Removing and installing window frame trim	154
5	Luggage compartment trims	156
5.1	Removing and installing luggage compartment floor	156
5.2	Removing and installing rear floor covering	157
5.3	Removing and installing storage compartment	158
5.4	Removing and installing rear lock carrier cover	159
5.5	Removing and installing side panel trim, 5-seater	161
5.6	Removing and installing mounting bracket for bag hooks, 5-seater	163
5.7	Removing and installing side panel trim, 7-seater	164
6	Roof trims	168



6.1	Tools	168
6.2	Removing and installing roof end strip	168
6.3	Removing and installing moulded headliner (vehicles without tilt/slide sunroof), 2003► ..	169
6.4	Removing and installing moulded headliner (vehicles with tilt/slide sunroof), 2003► ..	172
6.5	Removing and installing moulded headliner (vehicles without panorama tilting/sliding sunroof), Touran 2011►	176
6.6	Removing and installing moulded headliner (vehicles with panorama tilting/sliding sunroof), 2011►	179
72 - Seat frames	184
1	Front seats	184
1.1	Tools	184
1.2	Removing and installing front seat	185
1.3	Removing and installing seat frame adapter	188
1.4	Removing and installing trim on sill side	189
1.5	Removing and installing sill-side trim on front passenger seat with load-through hatch ..	191
1.6	Removing and installing trim on tunnel side	194
1.7	Removing and installing tunnel-side trim on front passenger seat with load-through hatch ..	195
1.8	Removing and installing front seat drawer mounting	196
1.9	Removing and installing front seat bar and operating lever	198
1.10	Removing and installing front seat folding table	199
1.11	Removing and installing head restraint, adjustable	200
1.12	Removing head restraint guides	201
1.13	Removing and installing front seat backrest	202
1.14	Removing and installing backrest of front passenger seat with load-through hatch	204
1.15	Removing and installing lumbar support adjustment wheel	206
1.16	Removing and installing manually adjustable lumbar support frame	207
1.17	Removing and installing Bowden cable in folding backrest of front passenger seat with load-through hatch	209
2	Seats, 2nd row	211
2.1	Removing and installing trims for 2nd row backrest fittings	211
2.2	Removing and installing foot well trim for 2nd row	212
2.3	Removing and installing backrest trim for middle seat, 2nd row	213
2.4	Removing and installing seat backrest for 2nd row	214
2.5	Removing and installing securing rods, trims and support parts	216
3	Seats, 3rd row	218
3.1	Tools	218
3.2	Removing and installing seats for 3rd row	218
3.3	Removing and installing trims for 3rd row backrest fittings	219
3.4	Removing and installing seat backrest for third row	220
74 - Seat - padding, covers	222
1	Front seat covers and padding	222
1.1	Tools	222
1.2	Removing and installing front seat cushion cover and padding	222
1.3	Removing and installing front seat backrest cover and padding	225
1.4	Renewing heater element for front seat (Touran 2011►)	229
1.5	Renewing heater element for front seat backrest (Touran 2011►)	230
2	Second row seat covers and padding	232
2.1	Removing and installing 2nd row seat cushion cover and padding	232
2.2	Removing and installing 2nd row seat backrest cover and padding	234
3	Third row seat covers and padding	237
3.1	Removing and installing 3rd row seat cushion cover and padding	237
3.2	Removing and installing 3rd row seat backrest cover and padding	239