



## Contents

<b>50 - Body - front</b>	<b>1</b>
<b>1 Lock carrier</b>	<b>1</b>
1.1 Tools	1
1.2 Lock carrier - service position ► 07.2010	1
1.3 Lock carrier - service position 08.2010 ►	6
1.4 Pressure hose with plug-in connector	11
<b>2 Wings</b>	<b>13</b>
2.1 Tools	13
2.2 Front wing ► 07.2010	13
2.3 Front wing 08.2010 ►	18
2.4 Wing panel brace	21
2.5 Removing and installing wing securing bracket	22
<b>3 Noise insulation</b>	<b>24</b>
3.1 Tools	24
3.2 Assembly overview - noise insulation	24
<b>4 Underbody cladding</b>	<b>26</b>
4.1 Tools	26
4.2 Assembly overview - underbody cladding	26
4.3 Assembly overview - front underbody panel	26
<b>5 Protectors for natural gas tanks</b>	<b>28</b>
<b>6 Plenum chamber bulkhead</b>	<b>30</b>
6.1 Tools	30
6.2 Assembly overview - plenum chamber bulkhead	30
<b>7 Bulkhead</b>	<b>31</b>
7.1 Tools	31
7.2 Materials	31
7.3 Assembly overview - bulkhead	32
<b>55 - Bonnet, rear lid</b>	<b>33</b>
<b>1 Bonnet</b>	<b>33</b>
1.1 Tools	33
1.2 Assembly overview - bonnet	33
1.3 Removing and installing bonnet	34
1.4 Removing gas strut	35
1.5 Releasing gas from gas strut	36
1.6 Removing and installing bonnet hinge	37
1.7 Insulation ► 07.2010	38
1.8 Insulation 08.2010 ►	39
1.9 Assembly overview - bonnet lock and release components	40
1.10 Bonnet lock ► 07.2010	41
1.11 Bonnet lock 08.2010 ►	42
1.12 Removing and installing arrester	44
1.13 Detaching Bowden cable	44
1.14 Adjusting bonnet	45
1.15 Removing and installing release lever	46
<b>2 Rear lid</b>	<b>48</b>
2.1 Tools	48
2.2 Assembly overview - rear lid	48
2.3 Removing and installing rear lid	49
2.4 Removing gas strut	51
2.5 Releasing gas from gas strut	52
2.6 Removing and installing rear lid hinges	53



2.7	Removing and installing striker pin	55
2.8	Adjusting rear lid	55
2.9	Assembly overview - tailgate locking and release components	57
2.10	Removing and installing handle trim	58
2.11	Removing and installing bonnet lock	60
2.12	Stop buffer 09.2010 >	60
2.13	Number plate carrier	61
2.14	Rear lid seal	63
2.15	Removing and installing rear lid seal	63
<b>3</b>	<b>Tank flap unit</b>	<b>65</b>
3.1	Tools	65
3.2	Assembly overview - tank flap unit	65
<b>57</b>	<b>- Front doors, door components, central locking</b>	<b>70</b>
<b>1</b>	<b>Rear door</b>	<b>70</b>
1.1	Tools	70
1.2	Assembly overview - door hinges	70
1.3	Removing and installing door	72
1.4	Adjusting door	73
1.5	Assembly overview - assembly carrier	75
1.6	Removing and installing assembly carrier	76
1.7	Assembly overview - door handle and door lock	81
1.8	Removing and installing lock cylinder housing	83
1.9	Removing and installing door handle	84
1.10	Removing and installing door lock	86
1.11	Mounting bracket	87
1.12	Reinforcement in the front door	88
1.13	Inner door seal	89
1.14	Removing and installing inner door seal	89
1.15	Removing and installing outer door seal	90
1.16	Insulation	93
<b>2</b>	<b>Central locking</b>	<b>95</b>
2.1	Fitting location overview - central locking components	95
2.2	Removing and installing battery for folding key with remote control	97
<b>58</b>	<b>- Rear doors, door components</b>	<b>101</b>
<b>1</b>	<b>Rear door</b>	<b>101</b>
1.1	Tools	101
1.2	Assembly overview - door hinges	101
1.3	Removing and installing door	103
1.4	Adjusting door	105
1.5	Assembly overview - assembly carrier	106
1.6	Removing and installing assembly carrier	107
1.7	Assembly overview - door handle and door lock	111
1.8	Removing and installing lock cylinder housing	113
1.9	Removing and installing door handle	114
1.10	Removing and installing door lock	116
1.11	Mounting bracket	117
1.12	Reinforcement in the rear door	118
1.13	Door inner seals	119
1.14	Removing and installing inner door seal	119
1.15	Removing and installing outer door seal	120
1.16	Insulation	122
<b>60</b>	<b>- Sunroof</b>	<b>124</b>
<b>1</b>	<b>Sunroof with glass panel</b>	<b>124</b>



1.1	Tools .....	124
1.2	Function .....	124
1.3	Assembly overview .....	125
1.4	Removing sliding/tilting sunroof glass panel .....	127
1.5	Installing sliding/tilting sunroof glass panel .....	127
1.6	Adjusting height of sliding/tilting sunroof glass panel .....	128
1.7	Checking parallel running of glass panel .....	129
1.8	Adjusting parallel running of glass panel .....	130
1.9	Renewing panel seal .....	130
1.10	Removing wind deflector .....	131
1.11	Removing sliding headliner .....	131
1.12	Removing sliding/tilting sunroof drive .....	132
1.13	Adjusting drive for sliding/tilting sunroof (zero position) .....	133
1.14	Removing pre-selector control for sliding/tilting sunroof .....	134
1.15	Removing and installing carrier unit .....	134
1.16	Manual operation .....	136
1.17	Cleaning water drain hoses .....	137
<b>2</b>	<b>Panorama sliding/tilting sunroof (Arvin Meritor) .....</b>	<b>140</b>
2.1	Tools .....	140
2.2	Function .....	140
2.3	Basic setting, panoramic sliding sunroof .....	141
2.4	Assembly overview - panoramic sliding roof .....	141
2.5	Removing and installing front glass panel .....	143
2.6	Removing and installing rear glass panel .....	146
2.7	Adjusting height of front and rear glass panel .....	149
2.8	Renewing seals for rear glass panel .....	151
2.9	Removing and installing the exterior seal .....	155
2.10	Removing and installing interior seal .....	158
2.11	Removing and installing wind deflector .....	160
2.12	Removing and installing preselector for glass panel and sunroof sun blind .....	162
2.13	Removing and installing sliding sunroof motor .....	163
2.14	Removing and installing sun blind motor .....	166
2.15	Assembly overview - sunroof sun blind .....	169
2.16	Removing and installing sun blind .....	170
2.17	Removing and installing sunroof sun blind cross strut .....	178
2.18	Assembly overview - assembly frame .....	179
2.19	Removing and installing sun blind Bowden cable .....	180
2.20	Removing and installing assembly frame .....	185
2.21	Removing and installing rear part .....	187
2.22	Removing and installing front motor plate .....	191
2.23	Removing and installing tilting mechanism and front glass panel cable .....	195
2.24	Manual operation .....	199
2.25	Cleaning water drain hoses .....	200
<b>63</b>	<b>- Bumpers .....</b>	<b>203</b>
<b>1</b>	<b>Bumper, front .....</b>	<b>203</b>
1.1	Repairing front bumper cover .....	203
1.2	Installing bracket for parking aid system - vehicles 08.2010 ► .....	203
1.3	Front bumper cover ► 10.2006 .....	207
1.4	Front bumper cover 11.2006 ► .....	211
1.5	Front bumper cover 08.2010 ► .....	217
<b>2</b>	<b>Bumper, rear .....</b>	<b>223</b>
2.1	Repairing rear bumper cover .....	223
2.2	Installing bracket for parking aid system - vehicles 08.2010 ► .....	223
2.3	Rear bumper cover ► 07.2010 .....	227
2.4	Rear bumper cover 08.2010 ► .....	233



<b>3</b>	<b>Towing bracket</b>	<b>240</b>
3.1	Assembly overview - towing bracket	240
<b>64</b>	<b>Glazing</b>	<b>241</b>
<b>1</b>	<b>Flush bonded windows</b>	<b>241</b>
1.1	Tools	241
1.2	Materials	242
1.3	Repairing windscreen	243
1.4	Assembly overview - windscreen	243
1.5	Assembly overview - plenum chamber cover	243
1.6	Remove windscreen	246
1.7	Install windscreen	248
1.8	Assembly overview - rear window	248
1.9	Removing undamaged rear window	249
1.10	Removing broken rear window	251
1.11	Installing rear window	251
1.12	Assembly overview - rear side window	251
1.13	Removing undamaged rear side window	252
1.14	Removing broken rear side window	255
1.15	Installing rear side window	255
1.16	Preparing old undamaged window for glazing	256
1.17	Preparing new window without precoating for glazing	256
1.18	Preparing new window with precoating for glazing	257
1.19	Preparing body flange for glazing	258
1.20	Fitting instructions	259
1.21	Minimum curing period	260
1.22	Touching up paint damage	261
1.23	Removing soiling caused by adhesive sealant	261
<b>2</b>	<b>Front door window</b>	<b>262</b>
2.1	Tools	262
2.2	Assembly overview	262
2.3	Removing and installing door window	264
2.4	Removing and installing window regulator motor	267
2.5	Removing and installing window channel	269
<b>3</b>	<b>Rear door window</b>	<b>272</b>
3.1	Tools	272
3.2	Assembly overview	272
3.3	Removing and installing door window	274
3.4	Removing and installing window regulator motor	277
3.5	Removing and installing outer window slot seal	278
3.6	Assembly overview - window channel	278
3.7	Removing and installing window channel	279
<b>4</b>	<b>Windows having threaded connections</b>	<b>281</b>
4.1	Tools	281
4.2	Removing and installing front side window	281
<b>66</b>	<b>Exterior equipment</b>	<b>283</b>
<b>1</b>	<b>Wheel housing liners</b>	<b>283</b>
1.1	Tools	283
1.2	Front wheel housing liner	283
1.3	Rear wheel housing liner	285
<b>2</b>	<b>Exterior mirrors - vehicles ▶ 07.2010</b>	<b>288</b>
2.1	Tools	288
2.2	Assembly overview - exterior mirror	288
2.3	Removing and installing mirror glass	289



2.4	Removing and installing mirror housing	290
2.5	Removing and installing turn signal repeater	291
2.6	Removing and installing assembly bracket	292
2.7	Removing and installing exterior mirror	292
<b>3</b>	<b>Exterior mirrors - vehicles 08.2010 ►</b>	<b>294</b>
3.1	Tools	294
3.2	Assembly overview - exterior mirror	294
3.3	Removing and installing mirror glass	295
3.4	Removing and installing adjustment unit with motor	297
3.5	Removing and installing frame	298
3.6	Removing and installing mirror housing	300
3.7	Removing and installing side turn signal and entry light in exterior mirror	301
3.8	Removing and installing exterior mirror	303
<b>4</b>	<b>Radiator grille</b>	<b>305</b>
4.1	Tools	305
4.2	Radiator grille ► 10.06	305
4.3	Radiator grille 11.06 ►	308
4.4	Removing and installing radiator grille 08.2010 ►	310
4.5	Removing and installing badge 11.06 ►	312
4.6	Removing and installing badge 08.2010 ►	314
<b>5</b>	<b>Mouldings and trims</b>	<b>317</b>
5.1	Tools	317
5.2	Assembly overview - water deflector	317
5.3	Renewing protective side strips	318
5.4	Removing and installing stone deflector strip	319
5.5	Decorative trims	323
5.6	Wheel arch trim	325
<b>6</b>	<b>Removing and installing roof railing</b>	<b>327</b>
6.1	Tools	327
6.2	Assembly overview - roof railing	327
6.3	Removing and installing roof railing	328
6.4	Assembly overview - roof railing retaining bracket	330
6.5	Removing and installing roof railing retaining bracket	331
<b>7</b>	<b>Special body kit, Cross Touran</b>	<b>334</b>
7.1	Safety requirements	334
7.2	Tools	334
7.3	Materials	334
7.4	Assembly overview - attachments	335
7.5	Side member extension and wheel arch trim	335
7.6	Retaining strip for side member extension	340
7.7	Front and rear wheel arch trims	344
7.8	Bumper trims	350
7.9	Preparing attachments for bonding	355
7.10	Preparing body component for bonding	355
7.11	Fitting instructions	356
7.12	Minimum curing period	356
7.13	Touching up paint damage	356
7.14	Removing soiling caused by adhesive sealant	356
<b>8</b>	<b>Lettering</b>	<b>357</b>
8.1	Tools	357
8.2	Fitting instructions	357
8.3	Company emblem on tailgate	358
8.4	Rear lettering - dimensions > 07.2010	359
8.5	Rear lettering - dimensions 08.2010 >	360
8.6	Dimensions for lettering on side	360



<b>9</b>	<b>Scuff protection film</b> .....	<b>363</b>
9.1	Renewing scuff protection film .....	363