



Contents

00 - Technical data	1
1 Notes on safety	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety measures for when working on vehicles with a start-stop system	1
1.3 Safety precautions when working on the cooling system	1
2 General notes	3
2.1 Notes concerning odours in air conditioned vehicles	3
2.2 Notes for vehicles with a start-stop system	3
3 Repair notes	4
3.1 Working on refrigerant circuit	4
3.2 Refrigerant circuit seals	4
4 Technical data	5
4.1 Capacities for refrigerant R134a	5
4.2 Refrigerant oil	5
4.3 Oil distribution	5
80 - Heating	6
1 Overview of fitting locations - heating	6
1.1 Overview of fitting locations - components located in front section of passenger compartment	6
2 Heater unit	8
2.1 Removing and installing heater unit	8
2.2 Dismantling and assembling heater unit	11
2.3 Removing and installing heat exchanger	12
2.4 Removing and installing auxiliary air heater element Z35	12
2.5 Removing and installing fresh air blower V2	12
2.6 Removing and installing fresh air blower series resistor with overheating fuse N24	12
2.7 Removing and installing dust and pollen filter	12
3 Control motors	13
3.1 Removing and installing flexible shaft for air distribution	13
3.2 Removing and installing Bowden cable for temperature flap	14
3.3 Removing and installing fresh air and air recirculation flap control motor V154	14
3.4 Removing and installing air distribution flap actuator	14
3.5 Removing and installing temperature flap actuator	15
4 Air duct	16
4.1 Removing and installing fresh air intake	16
4.2 Checking exhaust ventilation for passenger compartment	16
4.3 Removing and installing centre vent	16
4.4 Removing and installing vent on driver or front passenger side	16
4.5 Removing and installing rear footwell air duct	16
4.6 Removing and installing front passenger side footwell vents	16
4.7 Removing and installing driver side footwell vents	16
5 Operating and display unit	17
5.1 Removing and installing operating and display unit	17
5.2 Removing and installing connectors on operating and display unit	17
87 - Air conditioning system	19
1 Overview of fitting locations - air conditioning system	19
1.1 Overview of fitting locations - components located in front section of passenger compartment	19
1.2 Overview of fitting locations - components located in front section of passenger compartment	25



2	Refrigerant circuit	30
2.1	System overview - refrigerant circuit	30
2.2	Removing and installing high-pressure sender G65	31
2.3	Removing and installing expansion valve	32
2.4	Removing and installing condenser	35
2.5	Removing and installing desiccant bag or cartridge	38
2.6	Removing and installing receiver	40
2.7	Removing and installing evacuating and charging valves on low and high-pressure side	41
3	Air conditioner compressor	44
3.1	Assembly overview - drive unit of air conditioner compressor	44
3.2	Assembly overview - belt pulley	46
3.3	Removing and installing ancillary bracket for air conditioner compressor	48
3.4	Removing and installing air conditioner compressor	56
3.5	Removing air conditioner compressor from and installing on bracket	60
3.6	Checking excess pressure relief valve on air conditioner compressor	62
3.7	Removing and installing belt pulley	63
4	Control motors	65
4.1	Removing and installing temperature flap control motor V68	65
4.2	Removing and installing air flow flap control motor V71	67
4.3	Removing and installing central flap control motor V70	70
4.4	Removing and installing defroster flap control motor V107	71
4.5	Removing and installing air recirculation flap control motor V113	71
4.6	Removing and installing fresh air and air recirculation flap control motor V154	73
4.7	Removing and installing left temperature flap control motor V158	75
4.8	Removing and installing right temperature flap control motor V159	77
4.9	Removing and installing fresh air/recirculated air, air flow flap control motor V425	77
4.10	Removing and installing front air distribution flap control motor V426	78
4.11	Removing and installing air distribution flap control motor V428	78
5	Front heater and air conditioning unit	80
5.1	Assembly overview - evaporator housing	80
5.2	Removing and installing heater and air conditioning unit	81
5.3	Dismantling and assembling heater and air conditioning unit	86
5.4	Removing and installing evaporator	91
5.5	Removing and installing heat exchanger	92
5.6	Removing and installing auxiliary air heater element Z35	95
5.7	Removing and installing fresh air blower V2	96
5.8	Removing and installing fresh air blower series resistor with overheating fuse N24	97
5.9	Removing and installing dust and pollen filter	98
5.10	Checking condensation drainage	98
5.11	Removing and installing evaporator output temperature sender G263 / evaporator temperature sensor G308	99
5.12	Removing and installing glove box cooling	99
6	Air duct	100
6.1	Removing and installing fresh air intake	100
6.2	Checking exhaust ventilation for passenger compartment	100
6.3	Removing and installing centre vent	101
6.4	Removing and installing vent on driver or front passenger side	101
6.5	Removing and installing rear footwell air duct	102
6.6	Removing and installing front passenger side footwell vents	102
6.7	Removing and installing driver side footwell vents	103
7	Operating and display unit	104
7.1	Overview of operating and display unit	104
7.2	Removing and installing operating and display unit	117
7.3	Connectors on operating and display unit	119



7.4	Removing and installing flexible shaft	121
8	Other controlling and regulating components	123
8.1	Removing and installing sunlight penetration photosensor G107 / sunlight penetration photosensor 2 G134	123
8.2	Function of air quality sensor G238	123
8.3	Removing and installing air quality sensor G238	125
8.4	Removing and installing ambient temperature sensor G17	126
8.5	Removing and installing fresh air intake duct temperature sensor G89	127
8.6	Removing and installing left vent temperature sender G150 / right vent temperature sender G151	127
8.7	Removing and installing centre vent temperature sender G191	127
8.8	Removing and installing footwell vent temperature sender G192	128
8.9	Removing and installing left footwell vent temperature sender G261	128
8.10	Removing and installing right footwell vent temperature sender G262	129