



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Location on gearbox	1
1.2 Code letters, assembly allocation and capacities - Touran 2003 ▶	2
1.3 Identification codes, assembly allocation, capacities, Passat 2006 ▶	3
1.4 Identification codes, assembly allocation, capacities, Golf 2009 ▶	3
1.5 Identification codes, assembly allocation, capacities, Golf Plus 2009 ▶	4
2 Overview - power transmission	5
3 Calculating overall gear ratio "i"	7
4 General repair instructions	8
4.1 Gearbox	8
4.2 Gaskets and seals	8
4.3 Sealant	8
4.4 Locking devices	9
4.5 Nuts and bolts	9
4.6 Bearings	9
4.7 Shims	9
4.8 Synchro-rings	10
4.9 Gear wheels	10
4.10 Synchroneshed gears	10
4.11 Clutch	10
5 Safety precautions for vehicles with a start-stop system	11
30 - Clutch	12
1 Repairing clutch mechanism, Touran	12
1.1 Overview	12
1.2 Assembly overview - pedal cluster with clutch pedal switch F36 to 05.03	13
1.3 Removing and installing clutch pedal switch F36	14
1.4 Removing and installing mounting bracket (all Tourans)	15
1.5 Removing and installing master cylinder with mounting bracket removed (through 05.03)	23
1.6 Removing and installing over-centre spring with mounting bracket removed	25
1.7 Assembly overview - pedal cluster with clutch pedal sender G476 from 06.03	26
1.8 Removing and installing over-centre spring with mounting bracket installed	28
1.9 Removing and installing clutch pedal with mounting bracket installed	31
1.10 Removing and installing master cylinder with mounting bracket removed (from 06.03) ..	34
1.11 Removing and installing clutch position sender G476 (from 06. 03)	36
1.12 Assembly overview - hydraulics (LHD)	38
1.13 Assembly overview - hydraulics (RHD)	41
1.14 Removing and installing slave cylinder	42
2 Repairing clutch mechanism, Passat, Golf and Golf Plus	45
2.1 Overview	45
2.2 Assembly overview - pedal cluster	46
2.3 Removing and installing over-centre spring, Golf 2009 ▶ LHD	47
2.4 Removing and installing over-centre spring - Golf 2009 ▶ right-hand drive	52
2.5 Removing and installing over-centre spring, Golf Plus	57
2.6 Removing and installing over-centre spring, Passat	62
2.7 Removing and installing clutch pedal, Golf 2009 ▶ LHD	63
2.8 Removing and installing clutch pedal - Golf 2009 ▶ right-hand drive	69
2.9 Removing and installing clutch pedal, Golf Plus	74
2.10 Removing and installing clutch pedal, Passat	80
2.11 Removing and installing mounting bracket, Golf 2009 ▶ LHD	82



2.12	Removing and installing mounting bracket, Golf 2009 ▶ RHD and Golf Plus RHD	87
2.13	Removing and installing mounting bracket, Golf Plus left-hand drive	93
2.14	Removing and installing mounting bracket, Passat	98
2.15	Removing and installing master cylinder	102
2.16	Removing and installing clutch position sender G476	103
2.17	Assembly overview - hydraulics (LHD)	106
2.18	Assembly overview - hydraulics (RHD)	108
2.19	Removing and installing slave cylinder	109
3	Bleeding clutch system	112
4	Repairing clutch release mechanism	114
5	Repairing clutch	116
34	Controls, housing	119
1	Repairing selector mechanism, Touran	119
1.1	Installation position of selector mechanism	119
1.2	Removing and installing gear knob and cover	120
1.3	Removing and installing gaiter with gear knob	121
1.4	Repairing gear lever and selector housing (through 10.06)	123
1.5	Repairing gear lever and selector housing (from 11.06)	125
1.6	Assembly overview - removing and installing selector cables	130
1.7	Removing and installing selector mechanism	134
2	Repairing selector mechanism, Passat, Golf and Golf Plus	138
2.1	Installation position of selector mechanism	138
2.2	Removing and installing gear knob and cover	139
2.3	Removing and installing gaiter with gear knob and noise insulation, Golf	140
2.4	Removing and installing gaiter with gear knob and noise insulation, Golf Plus	142
2.5	Removing and installing gaiter with gear knob, Passat	144
2.6	Repairing gear lever and selector housing (through 10.06)	145
2.7	Repairing gear lever and selector housing (from 11.06)	148
2.8	Attaching base plate	153
2.9	Assembly overview - removing and installing selector cables	153
2.10	Removing and installing selector mechanism	156
3	Adjusting selector mechanism	161
3.1	Checking selector mechanism	163
4		164
5		167
5.1	Removing gearbox	169
5.2	Installing gearbox	174
6	Removing and installing gearbox, Passat	182
6.1	Removing gearbox	183
6.2	Installing gearbox	187
7	Removing and installing gearbox, Golf	194
7.1	Removing gearbox	197
7.2	Installing gearbox	202
8	Removing and installing gearbox, Golf Plus	209
8.1	Removing gearbox	211
8.2	Installing gearbox	216
9	Transporting gearbox	223
10	Securing to engine and gearbox support	224
11	Checking gearbox oil	226
12	Dismantling and assembling gearbox	228
12.1	Overview - gearbox	228
12.2	Assembly overview	229



12.3	Removing and installing cover for gearbox housing and 5th gear	230
12.4	Removing and installing clutch housing	231
12.5	Removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	232
12.6	Dismantling and assembling procedure	233
13	Repairing gearbox housing and clutch housing	244
14	Repairing selector unit	247
15	Dismantling and assembling selector forks	250
35	Gears, shafts	255
1	Input shaft	255
1.1	Dismantling and assembling input shaft	255
2	Output shaft	266
2.1	Dismantling and assembling output shaft	266
39	Final drive - differential	274
1	Renewing flange shaft oil seals with gearbox installed, Touran	274
1.1	Renewing oil seal for left flange shaft	274
1.2	Renewing seal for right flange shaft	276
2	Renewing flange shaft oil seals with gearbox installed, Passat, Golf and Golf Plus	279
2.1	Renewing oil seal for left flange shaft	279
2.2	Renewing seal for right flange shaft	280
3	Differential	283
3.1	Dismantling and assembling differential	283
3.2	Adjusting differential	290