



Contents

00 - Technical data	1
1 General repair instructions	1
1.1 Tools	1
1.2 Gearbox	1
1.3 Overview	1
1.4 Seals	2
1.5 DSG® oil	3
1.6 Oil filter change - »Yes or no?«	3
1.7 Oil drain and inspection plug A	3
1.8 Nuts and bolts	4
1.9 Electrical components	4
2 Fault finding	5
2.1 General notes on fault finding	5
2.2 Useful information about the “behaviour of the control unit in the event of a gearbox fault”	5
2.3 Special notes on fault finding	6
3 Identification of gearbox	8
3.1 Reading gearbox code letters	8
4 Code - engine allocation	10
4.1 Golf Plus 2009 ▶	10
4.2 Golf Plus 2005 ▶	10
4.3 Golf 2009 ▶	11
4.4 Scirocco 2009 ▶	11
4.5 Golf 2004 ▶	11
4.6 Touran 2003 ▶	12
4.7 Passat 2006 ▶	13
4.8 Eos 2006 ▶	13
4.9 Passat CC 2009 ▶; CC 2010 ▶	14
4.10 Sharan 2011 ▶	14
5 Capacity	15
30 - Clutch	16
1 Clutch	16
1.1 Assembly overview - dual clutch	16
1.2 Removing and installing clutch end cover	18
1.3 Removing dual clutch	24
1.4 Installing dual clutch	25
34 - Controls, housing	31
1 Electrical and electronic components and their locations DSG®	31
1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox installed)	31
1.2 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox removed)	40
1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	47
2 Removing and installing gear oil cooler	48
3 Removing and installing oil pump	51
4 Renewing selector shaft lever oil seal with gearbox removed	55
5 Emergency release of selector lever	57
6 Removing and installing selector lever handle	58
6.1 Moving push-button in the handle to installation position	60



7	Selector mechanism up to 02.2009	62
7.1	Overview of selector mechanism up to 02.2009	62
7.2	Removing and installing selector lever cable up to 02.2009	63
7.3	Checking selector lever cable	70
7.4	Adjusting selector lever cable	70
8	Checking selector mechanism	72
8.1	Selector lever in "P" position and ignition switched on	72
8.2	Selector lever in "N" position and ignition switched on	72
8.3	Selector lever in position "Tiptronic"	72
8.4	Ignition and light switched on	72
8.5	Selector lever position indicator	72
9	Selector mechanism from 03.2009 onwards	73
9.1	Overview of selector mechanism in vehicles from 03.2009 onwards	73
9.2	Removing and installing selector mechanism, from 03.2009	74
10	Removing and installing gearbox	78
10.1	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 2.0 l petrol engine	78
10.2	Removing gearbox, Golf 2009 ▶ , Golf Plus 2009 ▶ with 2.0 l petrol engine	87
10.3	Removing gearbox, Golf Plus 2005 ▶ with 1.4 l petrol engine	96
10.4	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ diesel engine	103
10.5	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine, all-wheel drive	113
10.6	Removing gearbox, Golf Plus 2009 ▶ with 2.0 l diesel engine	122
10.7	Removing gearbox, Golf 2009 ▶ 2.0 l diesel engine	130
10.8	Removing gearbox, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l - V6 engine (all-wheel drive)	137
10.9	Removing gearbox, Golf 2004 ▶ with 1.9 l and 2.0 l diesel engine	144
10.10	Removing gearbox, Golf 2004 ▶ with 125 kW - 2.0 l diesel engine	151
10.11	Removing gearbox, Eos 2006 ▶ , with 3.2 and 3.6 l - V6 engine	157
10.12	Removing gearbox, Golf 2004 ▶ with 1.4 l petrol engine	164
10.13	Removing gearbox, Golf 2004 ▶ with 2.0 l petrol engine	171
10.14	Removing gearbox, Golf 2004 ▶ , with 3.2 l - V6 engine (R32 all-wheel drive)	176
10.15	Removing gearbox, Golf Plus 2005 ▶ with 1.9 l and 2.0 l diesel engine, with 2.0 l petrol engine	185
10.16	Removing gearbox, Eos 2006 ▶ with 2.0 l petrol engine	192
10.17	Removing gearbox, Eos 2005 ▶ with 2.0 l diesel engine	199
10.18	Removing gearbox, Touran 2003 ▶	206
10.19	Removing gearbox, Passat 2006 ▶ with 2.0 l diesel engine	214
10.20	Removing gearbox, Passat 2006 ▶ with 2.0 l petrol engine	222
10.21	Removing gearbox, Passat 2006 ▶ with 3.6 l - V6 engine (all-wheel drive)	227
10.22	Removing gearbox, Scirocco 2009 ▶ with 2.0 l diesel engine	233
10.23	Removing gearbox, Scirocco 2009 ▶ with 2.0 l petrol engine	242
10.24	Removing gearbox, Sharan 2011 ▶ with 2.0 l diesel engine	251
10.25	Removing gearbox, Sharan 2011 ▶ with 1.8 l and 2.0 l petrol engine	259
10.26	Removing gearbox, Sharan 2011 ▶ with 1.4 l petrol engine	268
10.27	Install gearbox	275
11	Torque settings »gearbox to engine«	277
11.1	Torque settings (ELSA)	277
12	Transporting gearbox and securing to assembly stand	285
13	Removing and installing bevel box, Golf 2004 ▶ and Passat 2006 ▶	286
14	Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with diesel engine	291
14.1	Specified torques	297
15	Removing and installing bevel box, Passat CC 2009 ▶ , CC 2010 ▶ with 3.6 l V6 engine	299
16	Oil and oil filter	303
16.1	Oil filter: renewing	303
16.2	Checking oil level and topping up	304



16.3	Draining and filling oil	307
35	- Gears, shafts	311
1	Currently, no repairs can be made to gears and shafts	311
39	- Final drive - differential	312
1	Overview - seals	312
1.1	Renewing seals for right flange shaft or stub shaft - front-wheel drive	313
2	Renewing oil seal for left flange shaft - front and all-wheel drive	315
2.1	Renewing oil seal for right flange shaft - all-wheel drive	316
2.2	Dismantling and assembling flange shaft	318
3	Renewing oil seal for propshaft drive flange at bevel box	320
4	Assembly overview - Flange shafts and seals on bevel box	326
4.1	Renewing seal on gearbox between bevel box and gearbox	327
4.2	Removing and installing right flange shaft	328
4.3	Renewing seal for right flange shaft on outside of bevel box	330
4.4	Renewing needle bearing (polygon bearing) for right output shaft drive flange	331
4.5	Renewing seal on bevel box between gearbox and bevel box	333
5	Checking and topping up gear oil in bevel box	335
5.1	Checking gear oil in bevel box	335
5.2	Topping up gear oil in bevel box	336