



Contents

00 - Technical data	1
1 Identification of gearbox	1
2 Overview - power transmission	2
3 Code, engine allocation	3
3.1 Polo 2010 ▶	3
3.2 Touran 2003 ▶	3
3.3 Golf 2004 ▶	3
3.4 Passat CC 2009 ▶; CC 2010 ▶	4
3.5 Passat 2006 ▶	4
3.6 Golf 2009 ▶	4
3.7 Golf Plus 2009 ▶	4
3.8 Golf Plus 2005 ▶, Cross Golf	5
3.9 Scirocco 2009 ▶	5
4 Capacities	6
5 General repair instructions	7
5.1 Tools	7
5.2 Gearbox	7
5.3 Anti-friction bearings	9
5.4 Oil	9
5.5 Working with tester	9
30 - Clutch	11
1 Removing and installing dual clutch, gearboxes made up to 05.2011	11
1.1 Assembly overview - dual clutch, gearboxes made up to 05.2011	11
1.2 Removing dual clutch, gearboxes made up to 05.2011	13
1.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made up to 05.2011	17
1.4 Installing dual clutch, gearboxes made as of 05.2011	30
2 Removing and installing dual clutch, gearboxes made from 06.2011 onwards	37
2.1 Assembly overview - dual clutch, gearboxes made as of 06.2011	37
2.2 Removing dual clutch, gearboxes made as of 06.2011	39
2.3 Adjusting position of engagement bearings for clutches "K 1" and "K 2", gearboxes made as of 06.2011	43
2.4 Installing dual clutch, gearbox date from 06.2011	56
3 Removing and installing oil seals at clutch end	63
34 - Controls, housing	66
1 Emergency release of selector lever	66
2 Removing and installing selector lever handle	67
2.1 Moving push-button in the handle to installation position	69
3 Selector mechanism in vehicles up to 02.2009	72
3.1 Overview of selector mechanism up to 02.2009	72
3.2 Removing and installing selector lever cable up to 02.2009	73
4 Selector mechanism from 03.2009 onwards	80
4.1 Overview of selector mechanism in vehicles from 03.2009 onwards	80
4.2 Removing and installing selector mechanism	81
5 Checking selector mechanism	85
5.1 Selector lever in "P" position and ignition switched on	85
5.2 Selector lever in "N" position and ignition switched on	85
5.3 Selector lever in position "Tiptronic"	85
5.4 Ignition and light switched on	85
5.5 Selector lever position indicator	85



5.6	Checking and adjusting selector lever cable	85
6	Safety note on mechatronic unit for dual clutch gearbox J743	89
7	Overview - mechatronic unit	90
8	Removing mechatronic unit for dual clutch gearbox J743 ; gearbox is installed	92
9	Moving mechatronic unit for dual clutch gearbox J743 into »removal position« by hand	104
10	Installing mechatronic unit for dual clutch gearbox J743	106
11	View on selector forks; mechatronic unit is removed	114
12	Renewing clutch actuator	115
13	Renewing control unit for mechatronic unit for dual clutch gearbox J743	121
14	Removing and installing gearbox	126
14.1	Notes on different vehicles, different gearboxes	126
14.2	Removing gearbox, Golf 2009 ► and Golf Plus 2009 ►, 1.2 l - 63 and 77 kW petrol engine	128
14.3	Removing gearbox, Golf 2009 ►, 1.8 l - 118 kW petrol engine	136
14.4	Removing gearbox, Polo 2010 ►, 1.2 l - 63 and 77 kW petrol engine	142
14.5	Removing gearbox, Polo 2010 ►, 1.4 l - 63 kW petrol engine	147
14.6	Removing gearbox, Polo 2010 ►, 1.4 l - 103 kW petrol engine	154
14.7	Removing gearbox, Polo 2010 ►, 1.6 l - 66 kW diesel engine	158
14.8	Removing gearbox, Polo 2010 ►, 1.4 l - 132 kW petrol engine	165
14.9	Removing gearbox with flange shafts; Touran 1.4 l - 103, 110 and 125 kW petrol engine (and 110 kW Eco-Fuel)	171
14.10	Removing gearbox, Touran 1.6 l - 77 kW TDI engine	177
14.11	Removing gearbox, Touran 1.9 l - 77 kW TDI engine	183
14.12	Removing gearbox, Passat 2006 ► 1.4 l - 110 kW Eco-Fuel engine	189
14.13	Removing gearbox, Passat 1.4 l - 90 and 110 kW petrol engine	195
14.14	Removing gearbox, Passat 1.8 l - 90 and 118 kW petrol engine	200
14.15	Removing gearbox, Golf Plus 2009 ►, 1.4 l - 90 kW and 118 kW petrol engine	205
14.16	Removing gearbox, Golf Plus 2009 ►, 1.6 l - 75 kW petrol engine	212
14.17	Removing gearbox, Scirocco 2009 ►, 1.4 l - 118 kW TSI engine	219
14.18	Removing gearbox, Golf 2009 ►, 1.6 l - 75 kW petrol engine	226
14.19	Removing gearbox, Golf 2009 ►, 1.4 l - 90 or 118 kW petrol engine	232
14.20	Removing gearbox, Golf 2004 ►, Golf Plus 2005 ► and Cross Golf 1.4 l - 90, 118 kW TSI engine	239
14.21	Removing gearbox, Golf Plus 2009, 1.6 l - 77 kW diesel engine	246
14.22	Removing gearbox, Golf 2009 1.6 l and 1.9 l - 77 kW diesel engine	253
14.23	Removing gearbox, Golf 2004 and Golf Plus 2005 1.9 l - 77 kW TDI engine	259
14.24	Removing gearbox, Passat CC 2009 ►, CC 2010 ►, Passat 2011 ► 1.4 l - 90, 110, 118 kW petrol engine and 1.4 l - 110 kW Eco-Fuel engine	265
14.25	Removing gearbox, Passat CC 2009►, CC 2010►, 1.8 l - 90 and 118 kW petrol engine	272
14.26	Removing gearbox, Golf Cabriolet 2012 ►, 1.4 l - 90 or 118 kW petrol engine	278
14.27	Install gearbox	284
14.28	Torque settings »Gearbox to engine« and notes on assembly mounting	287
15	Transporting gearbox and securing to assembly stand	295
16	Gear oil	297
16.1	Draining and filling gear oil	297
16.2	Draining and filling hydraulic fluid for mechatronic unit	299
35 - Gears, shafts		303
1	Notes on gearbox disassembly	303
1.1	Overview: gearbox disassembly	303
2	Dismantling gearbox	305
3	Assembling gearbox	312
4	Dismantling and assembling gearbox housing	323
5	Dismantling and assembling clutch housing	327



6	Dismantling and assembling outer input shaft	331
7		333
8	Dismantling and assembling output shaft 1 - overview	336
8.1	Dismantling output shaft 1 partially	337
8.2	Dismantling output shaft 1 completely	339
8.3	Assembling output shaft 1	341
8.4	Dismantling and assembling locking collars and synchro-hubs of output shaft 1	346
9	Dismantling and assembling output shaft 2 - overview	347
9.1	Dismantling output shaft 2	348
9.2	Assembling output shaft 2	350
9.3	Dismantling and assembling locking collars and synchro-hubs of output shaft 2	354
10	Dismantling and assembling output shaft 3 - overview	355
10.1	Dismantling output shaft 3	355
10.2	Assembling output shaft 3	357
10.3	Dismantling and assembling locking collar and synchro-hub of output shaft 3	359
11	Notes on gearbox adjustment	360
11.1	Calculating shims for clutch housing	361
12	Calculating shims for gearbox housing	374
13	Parking lock	394
13.1	Removing and installing cover for parking lock	394
13.2	Removing and installing parking lock	395
39	Final drive - front differential	397
1	Oil seals	397
1.1	Renewing oil seal for right stub shaft	397
1.2	Renewing oil seal for left stub shaft	398
1.3	Renewing seal for right flange shaft	400
1.4	Renewing oil seal for left flange shaft	402