



Contents

00 - Technical data	1
1 Engine number/engine data	1
2 Safety precautions	5
2.1 Safety regulations for working on fuel supply	5
2.2 Releasing high pressure in fuel system	6
2.3 Safety precautions when using testers and measuring instruments during a road test	7
2.4 Safety precautions when working on the cooling system	7
2.5 Safety precautions when working on ignition system	8
3 General repair instructions	9
3.1 Rules for cleanliness	9
3.2 Foreign objects in engine	9
3.3 Contact corrosion	9
3.4 Routing and attachment of lines	9
3.5 Fitting radiator and condensers	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Installing engine	34
2 Assembly mountings	42
2.1 Assembly overview - assembly mountings	42
13 - Crankshaft group	45
1 Cylinder block (pulley end)	45
1.1 Assembly overview - poly V-belt drive	45
1.2 Removing and installing poly-V belt	47
1.3 Removing and installing crankshaft pulley	48
1.4 Renewing crankshaft oil seal - belt pulley end	52
2 Cylinder block, gearbox end	55
2.1 Assembly overview - cylinder block, gearbox end	55
2.2 Removing and installing flywheel	57
2.3 Removing and installing crankshaft sealing flange on gearbox side	58
2.4 Removing and installing bracket for ancillaries	65
3 Crankshaft	70
3.1 Renewing needle bearing in crankshaft	70
3.2 Measuring axial clearance of crankshaft	72
3.3 Crankshaft dimensions	73
4 Pistons and conrods	74
4.1 Assembly overview - pistons and conrods	74
4.2 Checking pistons and cylinder bores	75
4.3 Removing and installing oil spray jets	76
4.4 Separating new conrod	77
15 - Cylinder head, valve gear	79
1 Cylinder head	79
1.1 Assembly overview - cylinder head	79
1.2 Removing and installing cylinder head cover and camshaft	82
1.3 Removing and installing cylinder head	96
1.4 Checking compression	102
2 Valve gear	104
2.1 Assembly overview - valve gear	104
2.2 Measuring axial play of camshaft	106



2.3	Removing and installing valve stem seals	107
3	Inlet and exhaust valves	109
3.1	Checking valve guides	109
3.2	Checking valves	109
3.3	Valve dimensions	111
3.4	Reworking valve seats	111
4	Cover for timing chain	112
4.1	Removing and installing top valve timing housing	112
4.2	Removing and installing bottom valve timing housing	115
5	Chain drive	120
5.1	Assembly overview - timing chain	120
5.2	Checking valve timing	125
5.3	Adjusting valve timing	127
5.4	Removing and installing timing chain	136
5.5	Removing and installing timing chain and chain drive for oil pump	145
17	- Lubrication	149
1	Sump, oil pump	149
1.1	Assembly overview - sump/oil pump	149
1.2	Engine oil:	153
1.3	Removing and installing sump	153
1.4	Removing and installing oil pump	158
2	Oil filter, oil pressure switch	160
2.1	Assembly overview - oil filter	160
2.2	Checking oil pressure and oil pressure switch	161
2.3	Removing and installing non-return valve	162
3	Engine oil cooler	164
3.1	Removing and installing engine oil cooler	164
4	Crankcase ventilation	165
4.1	Assembly overview - crankcase breather system	165
4.2	Removing and installing oil separator	166
19	- Cooling	169
1	Cooling system/coolant	169
1.1	Coolant hose connection diagram	169
1.2	Draining and adding coolant	171
1.3	Checking cooling system for leaks	175
2	Coolant pump, regulation of cooling system	178
2.1	Assembly overview - thermostat	178
2.2	Removing and installing coolant pump	179
2.3	Removing and installing coolant circulation pump V50	180
3	Radiator, radiator fan	183
3.1	Assembly overview - radiator/radiator fan	183
3.2	Removing and installing radiator	187
3.3	Removing and installing radiator fan V7	194
21	- Turbocharging/supercharging	197
1	Exhaust turbocharger	197
1.1	Assembly overview - turbocharger	197
1.2	Removing and installing turbocharger	199
1.3	Removing and installing charge pressure positioner V465	205
2	Charge air system	208
2.1	Assembly overview - charge air system	208
2.2	Removing and installing charge air cooler (intake manifold)	212



24 - Mixture preparation - injection	214
1 Injection system	214
2 Air filter	215
2.1 Assembly overview - air filter	215
2.2 Removing and installing air filter housing	217
3 Intake manifold	219
3.1 Assembly overview - intake manifold	219
3.2 Removing and installing intake manifold	223
3.3 Removing and installing throttle valve module J338	224
3.4 Cleaning throttle valve module J338	226
4 Injectors	228
4.1 Removing and installing injectors	228
4.2 Renewing seals on injectors	230
4.3 Cleaning injectors	234
5 High-pressure pump	236
5.1 Assembly overview - high-pressure pump	236
5.2 Removing and installing high-pressure pump	237
6 Senders and sensors	241
6.1 Checking fuel pressure sender G247	241
7 Engine control unit J623	245
7.1 Removing and installing engine (motor) control unit J623	245
7.2 Removing and installing engine (motor) control unit J623 with protective housing	248
26 - Exhaust system	255
1 Exhaust pipes and silencers	255
1.1 Assembly overview - silencers	255
1.2 Separating exhaust pipes from silencers	257
1.3 Installation position of clamp	259
2 Exhaust gas cleaning	261
2.1 Assembly overview - emission control	261
2.2 Removing and installing catalytic converter (Polo)	265
28 - Ignition system	267
1 Ignition system	267
1.1 Assembly overview - ignition system	267
1.2 Removing and installing engine speed sender G28	269
1.3 Test data, spark plugs	269