



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine (Golf, Golf Plus, Touran)</b>	<b>3</b>
1.1 Removing engine	3
1.2 Securing engine to assembly stand	13
1.3 Installing engine	13
1.4 Specified torques	15
1.5 Assembly mountings	16
1.6 Additional information and assembly work for vehicles with air conditioner	16
<b>2 Removing and installing engine (Tiguan)</b>	<b>18</b>
2.1 Removing engine	18
2.2 Securing engine to assembly stand	25
2.3 Installing engine	25
2.4 Specified torques	27
2.5 Assembly mountings	27
2.6 Additional information and assembly work for vehicles with air conditioner	28
<b>13 - Crankshaft group</b>	<b>30</b>
<b>1 Dismantling and assembling engine</b>	<b>30</b>
1.1 Assembly overview - parts I and II	30
1.2 Assembly overview - part I, belt drive	31
1.3 Assembly overview - part II, cylinder block	33
1.4 Removing and installing poly V-belt (engine codes BLG, BMY)	36
1.5 Removing and installing poly V-belt (engine code BWK)	38
1.6 Removing and installing control housing (Golf, Golf Plus)	40
1.7 Removing and installing valve timing housing (Tiguan, Touran)	44
1.8 Removing and installing bracket for ancillaries	48
<b>2 Removing and installing sealing flanges and flywheel or drive plate</b>	<b>50</b>
2.1 Assembly overview	50
2.2 Removing and installing engine speed sender G28	51
2.3 Removing and installing crankshaft seal on belt pulley end	53
2.4 Removing and installing crankshaft pulley	55
2.5 Removing and installing crankshaft sealing flange on flywheel end	58
<b>3 Crankshaft</b>	<b>67</b>
3.1 Assembly overview	67
3.2 Pulling needle bearing out of and driving into crankshaft	68
3.3 Crankshaft dimensions	70
<b>4 Dismantling and assembling pistons and conrods</b>	<b>71</b>
4.1 Assembly overview	71
4.2 Checking piston	72
4.3 Separating new conrod	73
4.4 Removing and installing pistons	74
4.5 Removing and installing oil spray jets	75
<b>15 - Cylinder head, valve gear</b>	<b>77</b>
<b>1 Cylinder head</b>	<b>77</b>
1.1 Assembly overview	77
1.2 Checking valve timing	79



1.3	Adjusting valve timing	82
1.4	Checking timing chain	88
1.5	Removing and installing timing chain and chain drive for oil pump	94
1.6	Removing and installing camshaft housing	103
1.7	Removing and installing cylinder head	108
1.8	Checking compression	111
<b>2</b>	<b>Repairing valve gear</b>	<b>114</b>
2.1	Assembly overview	114
2.2	Checking camshaft axial clearance	115
2.3	Reworking valve seats	116
2.4	Checking valve guides	117
2.5	Renewing valve stem seals	118
<b>17</b>	<b>Lubrication</b>	<b>121</b>
<b>1</b>	<b>Removing and installing parts of lubrication system</b>	<b>121</b>
1.1	Engine oil, oil capacities, engine oil specification (engine codes BLG, BMY)	121
1.2	Engine oil, oil capacities, engine oil specification (engine code BWK)	121
1.3	Assembly overview	121
1.4	Removing and installing sump	124
1.5	Removing and installing oil pump	126
1.6	Checking oil pressure and oil pressure switch	128
<b>19</b>	<b>Cooling</b>	<b>130</b>
<b>1</b>	<b>Removing and installing parts of cooling system</b>	<b>130</b>
1.1	Assembly overview - parts of cooling system, body side (engine codes BLG, BMY)	131
1.2	Assembly overview - parts of cooling system, body side (engine code BWK)	132
1.3	Assembly overview - parts of cooling system, engine side	133
1.4	Coolant hose schematic diagram (engine codes BLG, BMY)	135
1.5	Coolant hose schematic diagram (engine code BWK)	135
1.6	Draining and adding coolant	136
1.7	Checking cooling system for leaks	140
1.8	Removing and installing radiator fan V7 and radiator fan 2 V177 (engine codes BLG, BMY)	142
1.9	Removing and installing radiator (engine codes BLG, BMY)	142
1.10	Removing and installing radiator and radiator fan V7 (engine code BWK)	144
1.11	Removing and installing coolant pump	146
1.12	Removing and installing coolant pump pulley	151
1.13	Removing and installing coolant circulation pump V50	155
<b>20</b>	<b>Fuel supply system</b>	<b>158</b>
<b>1</b>	<b>Safety precautions</b>	<b>158</b>
1.1	Safety regulations for working on fuel supply	158
1.2	Releasing pressure in high-pressure area	158
<b>2</b>	<b>Fuel tank</b>	<b>160</b>
2.1	Fuel tank - assembly overview (Golf, Golf Plus)	160
2.2	Draining fuel tank (Golf, Golf Plus)	161
2.3	Removing and installing fuel tank (Golf, Golf Plus)	164
2.4	Assembly overview - fuel tank (Touran)	165
2.5	Draining fuel tank (Touran)	167
2.6	Removing and installing fuel tank (Touran)	170
2.7	Assembly overview - fuel tank (Tiguan)	171
2.8	Draining fuel tank (Tiguan)	173
2.9	Removing and installing fuel tank (Tiguan)	176
<b>3</b>	<b>Removing and installing parts of fuel supply system</b>	<b>180</b>
3.1	Rules for cleanliness	180
3.2	Crash fuel shut-off	181



3.3	Removing and installing fuel delivery unit (Golf, Golf Plus)	181
3.4	Removing and installing fuel gauge sender G (Golf, Golf Plus)	183
3.5	Checking fuel pumps (Golf, Golf Plus)	184
3.6	Removing and installing fuel delivery unit (Touran)	195
3.7	Removing and installing fuel gauge sender G (Touran)	197
3.8	Checking fuel pump (Touran)	198
3.9	Removing and installing fuel delivery unit (Tiguan)	209
3.10	Removing and installing fuel gauge sender G (Tiguan)	212
3.11	Removing and installing suction-jet pump (Tiguan)	212
3.12	Removing and installing fuel gauge sender 2 G169 (Tiguan)	215
3.13	Checking fuel pump (Tiguan)	215
3.14	Removing and installing fuel pump control unit J538 (Tiguan)	223
<b>4</b>	<b>Repairing electronic power control (EPC)</b>	<b>225</b>
4.1	Assembly overview	225
4.2	Removing and installing accelerator module (Golf, Golf Plus, Tiguan)	225
4.3	Removing and installing accelerator module (Touran)	226
<b>5</b>	<b>Activated charcoal filter system</b>	<b>229</b>
5.1	Assembly overview (Golf, Golf Plus)	229
5.2	Checking fuel tank breather (Golf, Golf Plus)	230
5.3	Checking fuel tank breather (Touran)	231
5.4	Assembly overview (Tiguan)	232
5.5	Checking fuel tank breather (Tiguan)	233
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>235</b>
<b>1</b>	<b>Exhaust turbocharger</b>	<b>235</b>
1.1	Assembly overview - turbocharger	235
1.2	Part I	236
1.3	Part II	237
1.4	Removing and installing turbocharger	238
1.5	Checking vacuum unit for turbocharger	244
1.6	Removing and installing vacuum unit for turbocharger	246
1.7	Adjusting vacuum unit for turbocharger	247
<b>2</b>	<b>Compressor</b>	<b>254</b>
2.1	Assembly overview - supercharger	254
2.2	Removing and installing compressor (engine codes BLG, BMY)	255
2.3	Removing and installing compressor (engine code BWK)	263
2.4	Removing and installing drive unit seal for supercharger	271
<b>3</b>	<b>Charge air system</b>	<b>275</b>
3.1	Assembly overview - charge air system	275
3.2	Fitting hose connections with plug-in connectors	276
3.3	Checking charge air system for leaks	277
3.4	Removing and installing charge air cooler (Golf, Golf Plus, Touran)	281
3.5	Removing and installing charge air cooler, Tiguan	283
<b>24</b>	<b>Mixture preparation - injection</b>	<b>287</b>
<b>1</b>	<b>Injection system</b>	<b>287</b>
1.1	Assembly overview - parts I and II, intake manifold	287
1.2	Assembly overview - part I, intake manifold	288
1.3	Assembly overview - part II, intake manifold	290
1.4	Assembly overview - fuel rail with injectors	292
1.5	Checking vacuum reservoir for leaks	294
1.6	Assembly overview - air filter	296
1.7	Removing and installing air filter	297
1.8	Removing and installing regulating flap control unit J808 and throttle valve module J338	298



1.9	Cleaning throttle valve module J338	302
1.10	Assembly overview - high-pressure pump	302
1.11	Checking fuel pressure in high-pressure section	303
1.12	Removing and installing high-pressure pump	307
1.13	Removing and installing injectors	311
1.14	Renewing Teflon seal and support washer on injector	314
1.15	Safety precautions	317
1.16	Rules for cleanliness	319
1.17	Technical data	319
<b>2</b>	<b>Engine control unit J623</b>	<b>320</b>
2.1	Removing and installing engine control unit J623 (Golf)	320
2.2	Removing and installing anti-theft engine control unit J623 (Golf)	321
2.3	Removing and installing engine control unit J623 (Golf Plus, Touran)	323
2.4	Removing and installing anti-theft engine control unit J623 (Golf Plus, Touran)	324
2.5	Removing and installing engine control unit J623 (Tiguan)	326
2.6	Removing and installing anti-theft engine control unit J623 (Tiguan)	328
<b>26</b>	<b>- Exhaust system</b>	<b>330</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>330</b>
1.1	Assembly overview - catalytic converter and attachments (engine codes BLG, BMY)	330
1.2	Assembly overview - catalytic converter and attachments (engine code BWK)	332
1.3	Assembly overview - silencer with mountings (engine codes BLG, BMY)	333
1.4	Assembly overview - silencer with mountings (engine code BWK)	334
1.5	Removing and installing front exhaust pipe (engine code BWK)	334
1.6	Separating centre and rear silencers (engine codes BLG, BMY)	335
1.7	Separating centre and rear silencers (engine codes BWK)	337
<b>28</b>	<b>- Ignition system</b>	<b>339</b>
<b>1</b>	<b>Repairing ignition system</b>	<b>339</b>
1.1	Assembly overview - ignition system	339
1.2	Problem solution for Hall sender G40	340
1.3	Removing and installing ignition coils with output stage	341
1.4	Safety precautions	343
1.5	Test data, spark plugs	343