



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number, engine data .....	1
<b>2 Safety instructions</b> .....	<b>3</b>
2.1 Safety precautions when working on fuel supply system .....	3
2.2 Safety precautions when working on natural gas system .....	4
2.3 Safety precautions during road tests in which testing and measuring equipment is used ..	6
2.4 Safety precautions when working on cooling system .....	7
2.5 Safety precautions when working on ignition system .....	8
<b>3 Repair instructions</b> .....	<b>9</b>
3.1 Rules for cleanliness .....	9
3.2 Foreign objects in engine .....	9
3.3 Contact corrosion .....	9
3.4 Routing and securing lines .....	9
3.5 Installing coolers, condensers and radiators .....	10
<b>10 - Removing and installing engine</b> .....	<b>11</b>
<b>1 Removing and installing engine</b> .....	<b>11</b>
1.1 Removing engine .....	11
1.2 Installing engine .....	20
<b>2 Assembly mountings</b> .....	<b>25</b>
2.1 Assembly overview - assembly mountings .....	25
<b>13 - Crankshaft group</b> .....	<b>26</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>26</b>
1.1 Assembly overview - poly V-belt drive .....	26
1.2 Assembly overview - cylinder block (pulley end) .....	28
1.3 Removing and installing poly V-belt .....	30
1.4 Removing and installing ancillary bracket .....	33
1.5 Removing and installing pulley .....	34
1.6 Renewing crankshaft oil seal - belt pulley end .....	36
<b>2 Cylinder block, gearbox end</b> .....	<b>40</b>
2.1 Assembly overview - cylinder block, gearbox end .....	40
2.2 Renewing crankshaft sealing flange - flywheel end .....	41
<b>3 Crankshaft</b> .....	<b>49</b>
3.1 Assembly overview - crankshaft .....	49
3.2 Crankshaft dimensions .....	50
3.3 Renewing needle bearing in crankshaft .....	50
<b>4 Pistons and conrods</b> .....	<b>52</b>
4.1 Assembly overview - pistons and conrods .....	52
4.2 Checking piston and cylinder bore .....	53
4.3 Removing and installing oil spray jets .....	55
4.4 Separating new conrod .....	56
<b>15 - Cylinder head, valve gear</b> .....	<b>57</b>
<b>1 Cylinder head</b> .....	<b>57</b>
1.1 Assembly overview - cylinder head .....	57
1.2 Removing and installing cylinder head .....	59
1.3 Removing and installing camshaft housing .....	64
1.4 Checking compression .....	72
<b>2 Cover for timing chain</b> .....	<b>74</b>
2.1 Removing and installing valve timing housing (timing case) .....	74



<b>3</b>	<b>Chain drive</b> .....	<b>88</b>
3.1	Checking valve timing .....	88
3.2	Adjusting valve timing .....	90
3.3	Checking timing chain .....	99
3.4	Removing and installing timing chain and chain drive for oil pump .....	106
<b>4</b>	<b>Valve gear</b> .....	<b>117</b>
4.1	Assembly overview - valve gear .....	117
4.2	Measuring axial play of camshaft .....	119
4.3	Removing and installing valve stem seals .....	119
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>122</b>
5.1	Checking valve guides .....	122
5.2	Reworking valve seats .....	122
<b>17 - Lubrication</b> .....		<b>124</b>
<b>1</b>	<b>Sump, oil pump</b> .....	<b>124</b>
1.1	Assembly overview – sump/oil pump .....	124
1.2	Engine oil .....	126
1.3	Removing and installing sump .....	127
1.4	Removing and installing oil pump .....	130
<b>2</b>	<b>Oil filter, oil pressure switch</b> .....	<b>133</b>
2.1	Checking oil pressure and oil pressure switch .....	133
<b>19 - Cooling</b> .....		<b>135</b>
<b>1</b>	<b>Cooling system, coolant</b> .....	<b>135</b>
1.1	Coolant hose schematic diagram .....	135
1.2	Draining and filling coolant .....	137
1.3	Checking cooling system for leaks .....	141
<b>2</b>	<b>Coolant pump, regulation of cooling system</b> .....	<b>144</b>
2.1	Assembly overview - thermostat .....	144
2.2	Removing and installing coolant pump .....	145
2.3	Removing and installing coolant pump pulley .....	151
2.4	Removing and installing coolant circulation pump V50 .....	155
<b>3</b>	<b>Radiator/radiator fan</b> .....	<b>158</b>
3.1	Assembly overview – radiator/radiator fan .....	158
3.2	Removing and installing cowl together with radiator fan V7 and radiator fan 2 V177 .....	159
3.3	Removing and installing radiator .....	160
<b>21 - Turbocharging/supercharging</b> .....		<b>162</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>162</b>
1.1	Assembly overview - turbocharger .....	162
1.2	Removing and installing turbocharger .....	166
1.3	Checking vacuum unit for turbocharger .....	170
1.4	Adjusting vacuum unit for turbocharger .....	172
1.5	Renewing vacuum unit for turbocharger .....	177
<b>2</b>	<b>Charge air system</b> .....	<b>180</b>
2.1	Assembly overview - charge air system .....	180
2.2	Assembly overview - charge-air hose connections .....	181
2.3	Checking charge air system for leaks .....	182
2.4	Removing and installing charge air cooler .....	186
<b>3</b>	<b>Supercharger</b> .....	<b>192</b>
3.1	Assembly overview - supercharger .....	192
3.2	Removing and installing supercharger .....	194
3.3	Removing and installing drive unit seal for supercharger .....	201
<b>24 - Mixture preparation - injection</b> .....		<b>205</b>



<b>1</b>	<b>Injection system</b> .....	<b>205</b>
1.1	General notes on injection. ....	205
<b>2</b>	<b>Injectors</b> .....	<b>206</b>
2.1	Assembly overview - fuel rail with injectors .....	206
2.2	Releasing high pressure in fuel system .....	207
2.3	Removing and installing injectors .....	208
2.4	Renewing seal on injector .....	211
<b>3</b>	<b>Checking natural gas supply system for leaks</b> .....	<b>214</b>
3.1	Different pressure sections of natural gas supply system .....	214
3.2	Determining pressure in gas system .....	217
3.3	Determining operating mode of natural gas vehicles .....	217
3.4	Activating/deactivating natural gas mode .....	218
3.5	Checking gas system for leaks .....	219
<b>4</b>	<b>Gas injectors</b> .....	<b>225</b>
4.1	Removing and installing gas rail with gas injectors N366 , N367 , N368 , N369 .....	225
<b>5</b>	<b>Gas pressure regulator</b> .....	<b>228</b>
5.1	Assembly overview - gas pressure regulator .....	228
5.2	Removing and installing gas pressure regulator .....	233
5.3	Removing and installing tank pressure sensor G400 .....	238
<b>6</b>	<b>Air filter</b> .....	<b>242</b>
6.1	Assembly overview - air filter housing .....	242
6.2	Removing and installing air filter housing .....	243
<b>7</b>	<b>Intake manifold</b> .....	<b>244</b>
7.1	Assembly overview - intake manifold .....	244
7.2	Removing and installing upper part of intake manifold .....	251
7.3	Removing and installing lower part of intake manifold .....	256
7.4	Removing and installing regulating flap control unit J808 and throttle valve module J338 .....	258
7.5	Cleaning throttle valve module J338 .....	260
<b>8</b>	<b>High-pressure pump</b> .....	<b>262</b>
8.1	Assembly overview - high-pressure pump .....	262
8.2	Removing and installing high-pressure pump .....	263
<b>9</b>	<b>Senders and sensors</b> .....	<b>268</b>
9.1	Checking fuel pressure sender G247 .....	268
<b>10</b>	<b>Engine control unit</b> .....	<b>272</b>
10.1	Removing and installing engine control unit J623 (Passat ▶10.2010) .....	272
10.2	Removing and installing engine control unit J623 with protective housing (Passat ▶10.2010) .....	273
10.3	Removing and installing engine control unit J623 (Passat 11.2010▶) .....	274
10.4	Removing and installing engine control unit J623 with protective housing (Passat 11.2010▶) .....	276
10.5	Removing and installing engine control unit J623 (Touran) .....	278
10.6	Removing and installing engine control unit J623 with protective housing (Touran) .....	279
<b>26 - Exhaust system</b> .....	<b>283</b>	
<b>1</b>	<b>Emission control</b> .....	<b>283</b>
1.1	Assembly overview – emission control .....	283
<b>2</b>	<b>Exhaust pipes, silencers</b> .....	<b>285</b>
2.1	Assembly overview - silencers .....	285
2.2	Removing and installing front exhaust pipe .....	286
<b>28 - Ignition system</b> .....	<b>287</b>	
<b>1</b>	<b>Ignition system</b> .....	<b>287</b>
1.1	General notes .....	287



1.2	Assembly overview - ignition system .....	287
1.3	Test data, spark plugs .....	289
1.4	Removing and installing ignition coils with output stage .....	289
1.5	Removing and installing engine speed sender G28 .....	291