



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	3
1.2 Securing engine to assembly stand	6
1.3 Installing engine	6
1.4 Torque settings	7
1.5 Assembly mountings	8
1.6 Additional information and removal instructions for vehicles with air conditioner	9
13 - Crankshaft group	10
1 Dismantling and assembling engine	10
1.1 Assembly overview - Part I belt drive	10
1.2 Assembly overview - Part II cylinder block	11
1.3 Removing and installing poly V-belt	13
1.4 Removing and installing timing housing	15
2 Cylinder block, sealing flange	18
2.1 Assembly overview	18
2.2 Renewing crankshaft oil seal for belt pulley end	20
2.3 Characteristics of the sealing flange and the assembly device T10017 and T10134	24
2.4 Renewing crankshaft sealing flange -flywheel end-, vehicles with manual gearbox	26
2.5 Renewing crankshaft sealing flange -flywheel end-, vehicles with automatic gearbox	33
2.6 Crankshaft dimensions	39
3 Piston and conrod	41
3.1 Assembly overview	41
3.2 Checking piston	42
3.3 Piston and cylinder dimensions	43
15 - Cylinder head, valve gear	44
1 Cylinder head	44
1.1 Assembly overview	45
1.2 Checking valve timing	47
1.3 Adjusting valve timing	49
1.4 Removing and installing timing chain and chain drive for oil pump	53
1.5 Removing and installing camshaft housing	60
1.6 Removing and installing cylinder head	63
1.7 Checking compression	66
2 Valve gear	68
2.1 Assembly overview	68
2.2 Checking camshaft axial clearance	70
2.3 Reworking valve seats	70
2.4 Checking valve guides	72
2.5 Renewing valve stem seals	73
17 - Lubrication	75
1 Parts of lubrication system	75
1.1 Engine oil	75
1.2 Assembly overview	75
1.3 Removing and installing oil sump	77
1.4 Removing and installing oil pump	79



1.5	Checking oil pressure and oil pressure switch	82
19 - Cooling	84
1	Parts of cooling system	84
1.1	Assembly overview - Parts of cooling system, body side	85
1.2	Assembly overview - Parts of cooling system, engine side	86
1.3	Coolant hose schematic diagram	88
1.4	Draining and filling coolant	89
1.5	Removing and installing radiator	91
1.6	Removing and installing coolant pump	93
20 - Fuel supply system	95
1	Safety precautions	95
1.1	Safety precautions when working on fuel supply system	95
1.2	Rules for cleanliness	95
1.3	Releasing pressure in high-pressure section	96
2	Fuel tank	97
2.1	Assembly overview - fuel tank	97
2.2	Emptying fuel tank	98
2.3	Removing and installing fuel tank	101
3	Parts of fuel supply system	104
3.1	Removing and installing fuel delivery unit	104
3.2	Removing and installing fuel gauge sender G	106
3.3	Crash fuel shut-off	106
3.4	Checking fuel pump	107
3.5	Removing and installing high-pressure pump	112
4	Electronic power control (EPC)	118
4.1	Function of EPC system	118
4.2	Assembly overview	119
4.3	Removing and installing accelerator module	119
5	Activated charcoal filter system	121
5.1	Function	121
5.2	Checking fuel tank breather	121
24 - Mixture preparation - injection	123
1	Injection system	123
1.1	Assembly overview - Intake manifold	124
1.2	Assembly overview - Fuel rail with injectors	126
1.3	Checking vacuum reservoir in intake manifold for leaks	127
1.4	Assembly overview - Air cleaner	128
1.5	Removing and installing air cleaner housing	129
1.6	Cleaning throttle valve module J338	129
1.7	Removing and installing injectors	130
1.8	Safety precautions	133
1.9	Rules for cleanliness	135
1.10	Technical data	135
2	Check components	136
2.1	Checking intake air preheating	136
3	Engine control unit	137
3.1	Removing and installing engine control unit	137
3.2	Removing and installing tamper-proof engine control unit	138
26 - Exhaust system	140
1	Parts of the exhaust system	140
1.1	Assembly overview - catalytic converters and attachments, engine code BAG	141



1.2	Assembly overview - catalytic converters and attachments, engine codes BLF, BLP	142
1.3	Assembly overview - Silencer with mountings	144
2	Exhaust gas recirculation system	145
2.1	Assembly overview - Exhaust gas recirculation system	145
2.2	Removing and installing exhaust gas recirculation valve N18	146
28 - Ignition system	148	
1	Ignition system	148
1.1	General notes on ignition system	148
1.2	Assembly overview - Ignition system	149
1.3	Removing and installing ignition coils with output stage	149
1.4	Safety precautions	150
1.5	Spark plug test data	151