



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	7
1.3 Notes on installing	8
1.4 Assembly mountings	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Assembly overview - toothed belt drive	12
1.2 Assembly overview - poly V-belt drive	14
1.3 Removing and installing poly V-belt	14
1.4 Assembly overview - crankcase	16
2 Removing and installing sealing flange and flywheel	19
2.1 Assembly overview - sealing flange and flywheel	19
2.2 Renewing crankshaft oil seal - pulley end	20
2.3 Removing and installing sealing flange - pulley end	22
2.4 Renewing crankshaft sealing flange - flywheel end	24
3 Crankshaft	33
3.1 Assembly overview - crankshaft	33
3.2 Crankshaft dimensions	34
3.3 Pulling needle bearing out of and driving into crankshaft	34
4 Pistons and conrods	36
4.1 Assembly overview - pistons and conrods	36
4.2 Separating new conrods	37
4.3 Checking piston projection at TDC	38
4.4 Piston and cylinder dimensions	39
4.5 Piston rings, cylinder bore and piston installation position	39
15 - Cylinder head, valve gear	42
1 Cylinder head	42
1.1 Assembly overview - cylinder head	42
1.2 Removing and installing cylinder head cover	45
1.3 Removing, installing and tensioning toothed belts	47
1.4 Removing and installing cylinder head	61
1.5 Checking compression	65
2 Repairing valve gear	68
2.1 Assembly overview - valve gear	68
2.2 Checking valve guides	70
2.3 Renewing valve stem seals	71
2.4 Removing and installing camshaft	73
2.5 Removing and installing camshaft oil seal	77
17 - Lubrication	80
1 Engine oil	80
1.1 Oil capacities	80
1.2 Checking engine oil level	80



2	Parts of lubrication system	81
2.1	Assembly overview - oil pump, sump	81
2.2	Removing and installing sump	82
3	Oil filter bracket, oil pressure and oil cooler	85
3.1	Assembly overview - oil filter bracket and oil cooler	85
3.2	Checking oil pressure and oil pressure switch	86
19 - Cooling		88
1	Parts of cooling system	88
1.1	Parts of cooling system, body side	88
1.2	Parts of cooling system - engine side	90
1.3	Coolant hose schematic diagram	92
1.4	Draining and filling coolant	93
1.5	Removing and installing fan support with fans	96
1.6	Removing and installing radiator	97
1.7	Removing and installing coolant pump	99
1.8	Removing and installing thermostat	101
1.9	Checking cooling system for leaks	102
1.10	Checking oil cooler for leaks	104
20 - Fuel supply system		107
1	Removing and installing parts of fuel supply system	107
1.1	Safety precautions when working on fuel supply system	107
1.2	Rules for cleanliness	108
1.3	Assembly overview - fuel tank	108
1.4	Assembly overview - fuel filter	110
1.5	Removing and installing fuel cooler	111
1.6	Emptying fuel tank	112
1.7	Removing and installing fuel tank	114
1.8	Removing and installing fuel delivery unit	116
1.9	Removing and installing fuel gauge sender	118
1.10	Checking fuel pump	119
1.11	Checking tandem pump	120
1.12	Removing and installing tandem pump	124
1.13	Assembly overview - accelerator mechanism	127
21 - Turbocharging/supercharging		129
1	Charge air system with turbocharger	129
1.1	Safety precautions	129
1.2	Rules for cleanliness	129
1.3	Installing hose connections with connector couplings	130
1.4	Assembly overview - turbocharger	131
1.5	Assembly overview - charge air cooling	132
1.6	Checking charge air system for leaks	133
1.7	Vacuum hose schematic diagram	135
23 - Mixture preparation - injection		137
1	Repairing diesel direct injection system	137
1.1	Safety precautions	137
1.2	Rules for cleanliness	138
1.3	Assembly overview - unit injector	138
1.4	Removing and installing O-rings for unit injector	139
1.5	Removing and installing unit injector	140
1.6	Assembly overview - intake manifold with intake manifold flap	143
1.7	Assembly overview - air filter	145
2	Engine control unit	146



2.1	Reading and clearing engine control unit fault memory	146
2.2	Adapting functions and components	147
2.3	Removing and installing engine control unit	147
2.4	Removing and installing anti-theft engine control unit	148
26	- Exhaust system	151
1	Parts of the exhaust system	151
1.1	Assembly overview - front exhaust pipe with particulate filter	151
1.2	Assembly overview - silencer with mountings	153
2	Exhaust gas recirculation system	156
2.1	Assembly overview - exhaust gas recirculation	156
2.2	Assembly overview - exhaust gas recirculation cooler	157
28	- Glow plug system	158
1	Checking glow plug system	158
1.1	Characteristics of ceramic glow plugs	158
1.2	Removing, installing and checking ceramic glow plugs	158