



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Engine number .....	1
1.2 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing engine .....	4
1.2 Securing engine to assembly stand .....	11
1.3 Notes on installing .....	13
1.4 Assembly mountings .....	14
<b>13 - Crankshaft group</b> .....	<b>15</b>
<b>1 Dismantling and assembling engine</b> .....	<b>15</b>
1.1 Assembly overview - poly V-belt drive .....	15
1.2 Removing and installing poly V-belt .....	16
1.3 Assembly overview - toothed belt drive .....	17
1.4 Assembly overview - crankcase .....	21
<b>2 Removing and installing sealing flange and flywheel</b> .....	<b>23</b>
2.1 Renewing crankshaft sealing flange - flywheel end .....	24
2.2 Renewing crankshaft oil seal - pulley end .....	31
2.3 Removing and installing sealing flange - pulley end .....	33
2.4 Removing and installing engine speed sender G28 .....	36
<b>3 Pistons and conrods</b> .....	<b>38</b>
3.1 Assembly overview - pistons and conrods .....	38
3.2 Piston and cylinder dimensions .....	39
3.3 Checking piston projection at TDC .....	39
3.4 Piston rings, cylinder bore and piston installation position .....	41
<b>4 Crankshaft</b> .....	<b>43</b>
4.1 Assembly overview - crankshaft .....	43
4.2 Crankshaft dimensions .....	43
4.3 Pulling needle bearing out of and driving into crankshaft .....	44
<b>15 - Cylinder head, valve gear</b> .....	<b>46</b>
<b>1 Cylinder head</b> .....	<b>46</b>
1.1 Assembly overview - cylinder head .....	46
1.2 Removing and installing cylinder head cover .....	48
1.3 Removing, installing and tensioning toothed belt .....	50
1.4 Removing and installing cylinder head .....	64
1.5 Checking compression .....	70
<b>2 Valve gear</b> .....	<b>71</b>
2.1 Assembly overview - valve gear .....	71
2.2 Removing and installing roller rocker finger .....	73
2.3 Valves .....	75
2.4 Removing and installing camshafts .....	77
2.5 Removing and installing camshaft oil seal .....	82
<b>17 - Lubrication</b> .....	<b>85</b>
<b>1 Engine oil</b> .....	<b>85</b>
1.1 Oil capacities - Golf, Golf Plus, Touran .....	85
1.2 Oil capacities - Passat .....	85
1.3 Checking engine oil level .....	85



<b>2</b>	<b>Parts of lubrication system (Golf, Golf Plus, Touran)</b>	<b>86</b>
2.1	Assembly overview - oil pump, sump	86
2.2	Removing and installing oil sump	88
<b>3</b>	<b>Parts of lubrication system (Passat)</b>	<b>91</b>
3.1	Assembly overview - oil pump, sump, balancer shaft module with chain drive	91
3.2	Removing and installing oil pump (for balancer shaft module with chain drive)	93
3.3	Removing and installing balancer shaft module with chain drive	96
3.4	Retrofitting spur gear drive for balancer shaft module	100
3.5	Assembly overview - oil pump, sump, balancer shaft module with spur gear drive	103
3.6	Removing and installing oil pump (for balancer shaft module with spur gear drive)	106
3.7	Removing balancer shaft module with spur gear drive	106
3.8	Renewing spur gear for crankshaft	107
3.9	Installing balancer shaft module	110
3.10	Removing and installing oil sump	116
<b>4</b>	<b>Oil filter bracket, oil cooler, oil pressure and oil supply line</b>	<b>119</b>
4.1	Assembly overview - oil filter bracket and oil cooler	119
4.2	Checking oil pressure and oil pressure switch	121
4.3	Assembly overview - oil supply line to turbocharger	122
4.4	Removing and installing oil supply line to turbocharger	123
<b>19 - Cooling</b>		<b>124</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>124</b>
1.1	Parts of cooling system, body side	124
1.2	Assembly overview - parts of cooling system, engine side (Golf, Golf Plus, Touran)	126
1.3	Assembly overview - parts of cooling system, engine side (Passat)	128
1.4	Coolant hose schematic diagram	130
1.5	Draining and filling coolant	133
1.6	Removing and installing fan support with fans	138
1.7	Removing and installing radiator	139
1.8	Removing and installing coolant pump	140
1.9	Removing and installing thermostat	142
1.10	Checking cooling system for leaks	143
1.11	Checking oil cooler for leaks	145
<b>20 - Fuel supply system</b>		<b>148</b>
<b>1</b>	<b>Safety precautions</b>	<b>148</b>
1.1	Safety precautions when working on fuel supply system	148
<b>2</b>	<b>Rules for cleanliness</b>	<b>149</b>
2.1	Rules for cleanliness when working on fuel supply system	149
<b>3</b>	<b>Parts of fuel supply system (Golf, Golf Plus)</b>	<b>150</b>
3.1	Fuel tank, vehicles with front-wheel drive	150
3.2	Fuel tank, vehicles with four-wheel drive	153
3.3	Emptying fuel tank	160
3.4	Removing and installing fuel delivery unit	162
3.5	Removing and installing fuel gauge sender	164
3.6	Checking fuel pump	164
3.7	Assembly overview - fuel filter	169
3.8	Removing and installing fuel cooler	171
<b>4</b>	<b>Parts of fuel supply system (Touran)</b>	<b>173</b>
4.1	Assembly overview - fuel tank with attachments	173
4.2	Emptying fuel tank	175
4.3	Removing and installing fuel tank	178
4.4	Assembly overview - fuel filter	179
4.5	Removing and installing fuel cooler	181
4.6	Removing and installing fuel delivery unit	181



4.7	Removing and installing fuel gauge sender	183
4.8	Checking fuel pump	184
<b>5</b>	<b>Parts of fuel supply system (Passat)</b>	<b>189</b>
5.1	Fuel tank, vehicles with four-wheel drive	189
5.2	Emptying fuel tank, vehicles with four-wheel drive	199
5.3	Fuel tank, vehicles with front-wheel drive	202
5.4	Emptying fuel tank, vehicles with front-wheel drive	210
5.5	Checking fuel pump	212
5.6	Assembly overview - fuel filter	216
5.7	Removing and installing fuel cooler	218
<b>6</b>	<b>Accelerator mechanism</b>	<b>220</b>
6.1	Assembly overview - accelerator mechanism	220
<b>7</b>	<b>Tandem pump</b>	<b>222</b>
7.1	Checking tandem pump	222
7.2	Removing and installing tandem pump	224
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>227</b>
<b>1</b>	<b>Charge air system with turbocharger</b>	<b>227</b>
1.1	Safety precautions	227
1.2	Rules for cleanliness	227
1.3	Hose connections	228
1.4	Assembly overview - turbocharger with attachments	229
1.5	Removing and installing turbocharger	232
1.6	Assembly overview - charge air cooling	234
1.7	Checking charge air system for leaks	235
1.8	Vacuum hose schematic diagram	237
<b>23</b>	<b>Mixture preparation - injection</b>	<b>239</b>
<b>1</b>	<b>Diesel direct injection system</b>	<b>239</b>
1.1	Safety precautions	239
1.2	Rules for cleanliness	240
1.3	Assembly overview - intake manifold with attachments	240
1.4	Assembly overview - pre-wired wiring harness for unit injectors and glow plugs	243
1.5	Removing and installing pre-wired wiring harness for unit injectors and glow plugs	243
1.6	Assembly overview - unit injector	246
1.7	Removing and installing unit injector	248
1.8	Cleaning unit injectors (engine codes BMN, BKP, BMA, BUZ and BMR)	252
1.9	Removing and installing O-rings for unit injector	254
1.10	Assembly overview - air filter	255
<b>2</b>	<b>Engine control unit (Golf)</b>	<b>257</b>
2.1	Removing and installing engine control unit	257
2.2	Removing and installing anti-theft engine control unit	257
<b>3</b>	<b>Engine control unit (Golf Plus, Touran)</b>	<b>261</b>
3.1	Removing and installing engine control unit	261
3.2	Removing and installing anti-theft engine control unit	262
<b>4</b>	<b>Engine control unit (Passat)</b>	<b>265</b>
4.1	Removing and installing engine control unit	265
4.2	Removing and installing anti-theft engine control unit	266
<b>26</b>	<b>Exhaust system</b>	<b>270</b>
<b>1</b>	<b>Front exhaust pipe</b>	<b>270</b>
1.1	Assembly overview - front exhaust pipe with catalytic converter	270
1.2	Assembly overview - front exhaust pipe with particulate filter	271
<b>2</b>	<b>Silencer (Golf, Golf Plus)</b>	<b>274</b>
2.1	Assembly overview - silencer, vehicles with front-wheel drive	274



2.2	Assembly overview - silencer, vehicles with four-wheel drive	275
2.3	Cutting exhaust pipe	275
2.4	Installation position and specified torque of the clamp	276
2.5	Aligning exhaust system free of stress	277
<b>3</b>	<b>Silencer (Touran)</b>	<b>279</b>
3.1	Assembly overview - silencers	279
3.2	Cutting exhaust pipe	280
3.3	Aligning exhaust system free of stress	280
<b>4</b>	<b>Silencer (Passat)</b>	<b>281</b>
4.1	Assembly overview - silencer, vehicles with front-wheel drive	281
4.2	Assembly overview - silencer, vehicles with four-wheel drive	282
4.3	Aligning exhaust system free of stress	282
<b>5</b>	<b>Exhaust gas recirculation system</b>	<b>284</b>
5.1	Assembly overview - exhaust gas recirculation	284
<b>28</b>	<b>Glow plug system</b>	<b>287</b>
<b>1</b>	<b>Optical characteristics of metal or ceramic glow plugs</b>	<b>287</b>
1.1	Removing and installing metal glow plug	287
1.2	Removing and installing ceramic glow plugs	288