



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>3</b>
2.1 Safety regulations for working on fuel supply	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Safety measures when working on vehicles with a start/stop system	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the SCR system	4
2.6 Safety precautions when working on exhaust system	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	8
3.3 Checking vacuum system	8
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing motor</b>	<b>9</b>
1.1 Removing motor	9
1.2 Separating engine and gearbox	33
1.3 Securing engine on engine and gearbox support	38
1.4 Installing engine	40
<b>2 Assembly mountings</b>	<b>44</b>
2.1 Assembly overview - assembly mountings	44
2.2 Supporting engine in installation position	46
2.3 Adjusting assembly mountings	62
<b>3 Engine cover panel</b>	<b>72</b>
3.1 Removing and installing engine cover	72
<b>13 - Crankshaft group</b>	<b>74</b>
<b>1 Cylinder block (pulley end)</b>	<b>74</b>
1.1 Assembly overview - poly V-belt drive	74
1.2 Removing and installing poly-V belt	78
1.3 Removing and installing tensioner for poly V-belt	83
1.4 Removing and installing bracket for ancillaries	84
1.5 Removing and installing engine bracket	86
1.6 Assembly overview - cylinder block (pulley end)	102
1.7 Renewing crankshaft oil seal - belt pulley end	105
1.8 Removing and installing sealing flange on pulley end	108
<b>2 Cylinder block, gearbox end</b>	<b>113</b>
2.1 Assembly overview - cylinder block, gearbox end	113
2.2 Removing and installing flywheel	114
2.3 Removing and installing sealing flange on gearbox side	116
<b>3 Crankshaft</b>	<b>127</b>
3.1 Assembly overview - crankshaft	127
3.2 Renewing needle bearing in crankshaft	128
3.3 Crankshaft dimensions	130
<b>4 Pistons and conrods</b>	<b>131</b>
4.1 Assembly overview - pistons and conrods	131
4.2 Separating new conrod	136
4.3 Measuring piston projection at TDC	137
4.4 Checking radial clearance of conrods	139



<b>15 - Cylinder head, valve gear</b>	<b>140</b>
<b>1 Cylinder head</b>	<b>140</b>
1.1 Assembly overview - cylinder head	140
1.2 Removing and installing cylinder head	144
1.3 Removing and installing cylinder head cover	155
1.4 Assembly overview - cylinder head cover	159
1.5 Removing and installing vacuum pump	161
1.6 Checking compression	162
<b>2 Toothed belt drive</b>	<b>164</b>
2.1 Assembly overview - toothed belt	164
2.2 Removing and installing toothed belt	166
<b>3 Valve gear</b>	<b>188</b>
3.1 Assembly overview - valve gear	188
3.2 Measuring axial play of camshaft	190
3.3 Measuring radial play of camshaft	191
3.4 Removing and installing camshaft	192
3.5 Removing and installing camshaft oil seal	201
3.6 Checking hydraulic compensation elements	206
3.7 Removing and installing valve stem seals	207
<b>4 Inlet and exhaust valves</b>	<b>216</b>
4.1 Valve dimensions	216
4.2 Reworking valve seats	216
4.3 Checking valve guides	216
4.4 Checking valves	218
<b>17 - Lubrication</b>	<b>219</b>
<b>1 Sump, oil pump</b>	<b>219</b>
1.1 Assembly overview - sump/oil pump	219
1.2 Removing and installing sump	225
1.3 Removing and installing oil pump	230
1.4 Removing and installing oil level and oil temperature sender	233
1.5 Engine oil:	234
<b>2 Engine oil cooler</b>	<b>235</b>
2.1 Assembly overview - engine oil cooler	235
2.2 Removing and installing engine oil cooler	236
<b>3 Oil filter, oil pressure switch</b>	<b>240</b>
3.1 Assembly overview - oil filter housing, oil pressure switch	240
3.2 Removing and installing oil pressure switch	241
3.3 Checking oil pressure	242
3.4 Checking oil pressure and oil pressure switch	243
3.5 Removing and installing oil filter housing	244
<b>4 Balancer shaft module</b>	<b>249</b>
4.1 Assembly overview - balancer shaft module	249
4.2 Removing and installing balance shaft module	252
<b>19 - Cooling</b>	<b>262</b>
<b>1 Cooling system/coolant</b>	<b>262</b>
1.1 Coolant hose connection diagram	262
1.2 Draining and adding coolant	263
1.3 Checking cooling system for leaks	269
<b>2 Coolant pump, regulation of cooling system</b>	<b>274</b>
2.1 Assembly overview - coolant pump, thermostat	274
2.2 Removing and installing coolant pump	274
2.3 Removing and installing 4/2-way valve with thermostat	276



2.4	Removing and installing coolant temperature sender .....	282
<b>3</b>	<b>Coolant pipes .....</b>	<b>286</b>
3.1	Assembly overview - coolant pipes .....	286
3.2	Removing and installing coolant pipes .....	288
<b>4</b>	<b>Radiator, radiator fan .....</b>	<b>300</b>
4.1	Assembly overview - radiator/radiator fan .....	300
4.2	Removing and installing radiator .....	300
4.3	Removing and installing radiator cowl with radiator fan .....	302
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>304</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>304</b>
1.1	Assembly overview - turbocharger .....	304
1.2	Removing and installing turbocharger .....	306
1.3	Renewing vacuum unit for turbocharger .....	311
<b>2</b>	<b>Charge air system .....</b>	<b>318</b>
2.1	Assembly overview - charge air system .....	318
2.2	Assembly overview - charge-air hose connections .....	319
2.3	Removing and installing charge air cooler .....	320
2.4	Removing and installing charge pressure sender .....	322
2.5	Checking charge air system for leaks .....	322
<b>23</b>	<b>- Mixture preparation - injection .....</b>	<b>326</b>
<b>1</b>	<b>Injection system .....</b>	<b>326</b>
1.1	Schematic overview - fuel system .....	326
1.2	Filling/bleeding fuel system .....	328
1.3	Checking fuel system for leaks .....	329
<b>2</b>	<b>Vacuum system .....</b>	<b>330</b>
2.1	Assembly overview - vacuum system .....	330
2.2	Checking vacuum system .....	330
<b>3</b>	<b>Injectors/high-pressure accumulator (rail) .....</b>	<b>335</b>
3.1	Assembly overview - injectors .....	335
3.2	Adapting correction values for injectors .....	338
3.3	Testing jammed-open injectors .....	339
3.4	Checking return flow rate of injectors with engine running .....	341
3.5	Checking return flow rate of injectors at starter speed .....	344
3.6	Removing and installing injectors .....	346
3.7	Removing and installing high-pressure lines .....	350
3.8	Removing and installing fuel rail .....	352
<b>4</b>	<b>Intake manifold .....</b>	<b>356</b>
4.1	Assembly overview - intake manifold .....	356
4.2	Removing and installing intake manifold .....	357
4.3	Removing and installing throttle valve module .....	361
<b>5</b>	<b>Air filter .....</b>	<b>364</b>
5.1	Assembly overview - air filter housing .....	364
5.2	Removing and installing air filter housing .....	366
<b>6</b>	<b>Senders and sensors .....</b>	<b>368</b>
6.1	Checking fuel pressure regulating valve .....	368
6.2	Removing and installing fuel pressure regulating valve .....	369
6.3	Removing and installing fuel pressure sender .....	371
6.4	Removing and installing fuel temperature sender G81 .....	374
6.5	Removing and installing differential pressure sensor .....	375
6.6	Removing and installing air mass meter .....	377
<b>7</b>	<b>High-pressure pump .....</b>	<b>378</b>
7.1	Assembly overview - high-pressure pump .....	378



7.2	Removing and installing high-pressure pump .....	380
<b>8</b>	<b>Lambda probe .....</b>	<b>385</b>
8.1	Removing and installing Lambda probe .....	385
<b>9</b>	<b>Engine control unit .....</b>	<b>387</b>
9.1	Removing and installing engine control unit .....	387
9.2	Removing and installing engine control unit with protective housing .....	397
<b>26</b>	<b>- Exhaust system .....</b>	<b>414</b>
<b>1</b>	<b>Exhaust pipes and silencers .....</b>	<b>414</b>
1.1	Assembly overview - silencers .....	414
1.2	Aligning exhaust system free of stress .....	423
1.3	Installation position of clamp .....	424
<b>2</b>	<b>Emission control .....</b>	<b>426</b>
2.1	Assembly overview - emission control .....	426
2.2	Removing and installing particulate filter .....	430
2.3	Removing and installing catalytic converter .....	439
<b>3</b>	<b>SCR system (selective catalytic reduction) .....</b>	<b>445</b>
3.1	Assembly overview - tank for reducing agent .....	445
3.2	Draining reducing agent tank .....	446
3.3	Removing and installing reducing agent tank .....	450
3.4	Assembly overview - reducing agent supply line .....	453
3.5	Removing and installing reducing agent supply line .....	454
3.6	Removing and installing injector for reducing agent .....	457
3.7	Assembly overview - delivery module for reducing agent .....	458
3.8	Removing and installing heater element (heater cup) .....	460
<b>4</b>	<b>Exhaust gas temperature regulation .....</b>	<b>465</b>
4.1	Assembly overview - exhaust gas temperature regulation .....	465
4.2	Removing and installing exhaust gas temperature sender .....	467
<b>5</b>	<b>Exhaust gas recirculation .....</b>	<b>473</b>
5.1	Assembly overview - exhaust gas recirculation .....	473
5.2	Removing and installing exhaust gas recirculation cooler .....	475
5.3	Checking changeover for exhaust gas recirculation cooler .....	478
5.4	Checking exhaust gas recirculation cooler for leaks .....	479
5.5	Cleaning exhaust gas recirculation system .....	484
<b>28</b>	<b>- Glow plug system .....</b>	<b>492</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>492</b>
1.1	Removing and installing glow plug .....	492
1.2	Removing and installing automatic glow period control unit .....	494
1.3	Removing and installing Hall sender .....	495
1.4	Removing and installing engine speed sender .....	497