



Contents

00 - Technical data	1
1 Engine data	1
2 Safety precautions	2
2.1 Safety regulations for working on fuel supply	2
2.2 Safety precautions for when using test and measuring equipment during a road test	3
3 General repair instructions	4
3.1 Rules for cleanliness	4
20 - Fuel supply system	5
1 Fuel	5
1.1 Assembly overview - fuel tank	5
1.2 Removing and installing fuel tank	6
1.3 Emptying fuel tank	10
2 Fuel delivery unit, fuel gauge sender	17
2.1 Removing and installing fuel delivery unit, fuel gauge sender	17
2.2 Removing and installing fuel gauge sender	20
3 Plug-in connectors	21
3.1 Separating plug-in connectors	21
4 Fuel filter	25
4.1 Assembly overview - fuel filter	25
4.2 Removing and installing fuel filter	25
5 Activated charcoal filter system	27
5.1 Checking fuel tank breather	27
6 Accelerator pedal	28
6.1 Assembly overview - accelerator module	28
6.2 Removing and installing accelerator pedal module	28
7 Fuel pump	31
7.1 Checking fuel pump	31