



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on vehicles with a gas system	2
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 General information</b>	<b>6</b>
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	6
<b>20 - Fuel supply system</b>	<b>7</b>
<b>1 Fuel system</b>	<b>7</b>
1.1 Overview of fitting locations - fuel system	7
<b>2 Fuel</b>	<b>12</b>
2.1 Assembly overview - fuel tank	12
2.2 Assembly overview - natural gas fuel tank	14
2.3 Assembly overview - fuel tank shut-off valve	30
2.4 Assembly overview - filler neck	33
2.5 Closing fuel tank shut-off valves N361/N362/N363/N429 by mechanical means	35
2.6 Emptying fuel tank	37
2.7 Removing and installing fuel tank	60
2.8 Removing and installing natural gas fuel tanks	62
2.9 Bonding protective film to natural gas fuel tank	104
2.10 Determining residual pressure in natural gas fuel tank	110
2.11 Removing and installing fuel tank shut-off valve	135
2.12 Releasing pressure in high-pressure line	147
2.13 Removing and installing solenoids of fuel tank shut-off valves N361/N362/N363/N429	151
2.14 Removing and installing filling connection	163
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>167</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	167
3.2 Removing and installing fuel delivery unit, fuel gauge sender	168
3.3 Installation position of fuel delivery unit	169
3.4 Removing and installing tank breather valves	170
<b>4 Senders and sensors</b>	<b>172</b>
4.1 Removing and installing fuel gauge sender G	172
<b>5 Plug-in connectors</b>	<b>173</b>
5.1 Separating plug-in connectors	173
<b>6 Fuel filter</b>	<b>180</b>
6.1 Assembly overview – fuel filter	180
6.2 Removing and installing fuel filter	180
<b>7 Activated charcoal filter system</b>	<b>183</b>
7.1 Assembly overview – activated charcoal filter system	183
7.2 Checking fuel tank breather	183
<b>8 Accelerator pedal</b>	<b>185</b>
8.1 Assembly overview - accelerator module	185
8.2 Removing and installing accelerator pedal module GX2	185
<b>9 Fuel pump</b>	<b>189</b>
9.1 Checking fuel system pressurisation pump G6	189