



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery load test	1
<b>2 Checking battery</b>	<b>2</b>
<b>3 Charging battery</b>	<b>3</b>
<b>4 Disconnecting and connecting battery</b>	<b>4</b>
4.1 Assembly overview	4
4.2 Disconnecting battery	6
4.3 Connecting battery	7
<b>5 Removing and installing battery</b>	<b>9</b>
5.1 Assembly overview	9
5.2 Vehicles with petrol engine	10
5.3 Vehicles with diesel engine	11
<b>6 Starter, vehicles with manual gearbox</b>	<b>13</b>
6.1 Checking starter B	13
6.2 Starter, vehicles with 1.2 l, 77 kW injection engine and manual gearbox MQ200-5F	13
6.3 Starter, vehicles with 1.4 l, 103 kW or 110 kW TSI engine and manual gearbox MQ200-6F	17
6.4 Starter, vehicles with 1.6 l, 66 kW or 77 kW TDI engine and manual gearbox MQ250-6F	21
6.5 Starter, vehicles with 2.0 l 103 kW TDI engine and manual gearbox MQ350-6F	27
<b>7 Starter, vehicles with dual clutch gearbox (DSG)</b>	<b>32</b>
7.1 Checking starter B	32
7.2 Starter, vehicles with 1.4 l, 103 kW or 125 kW TSI engine and dual clutch gearbox (DSG) DQ200-7F	32
7.3 Starter, vehicles with 1.4 l, 110 kW natural gas engine and dual clutch gearbox (DSG) DQ200-7F	36
7.4 Starter, vehicles with 1.6 l, 77 kW TDI engine and dual clutch gearbox (DSG) DQ250-7F	40
7.5 Starter, vehicles with 2.0 l, 103 kW TDI engine and dual clutch gearbox (DSG) DQ250-6F	44
7.6 Starter, vehicles with 2.0 l, 125 kW TDI engine and dual clutch gearbox (DSG) DQ250-6F	49
<b>8 Alternator</b>	<b>55</b>
8.1 Securing B+ (battery positive) wire to alternator	55
8.2 Checking poly V-belt	55
8.3 Checking alternator C	56
8.4 Alternator, 1.2 l, 77 kW TSI engine	56
8.5 Alternator, 1.4 l, 103 kW/125 kW TSI engine	60
8.6 Alternator, 1.6 l, 66/77 kW TDI engine	67
8.7 Alternator, 2.0 l, 103/125 kW TDI engine	73
8.8 Removing and installing poly V-belt pulley on alternator	78
8.9 Voltage regulator for alternator	84
<b>9 Cruise control system (CCS)</b>	<b>88</b>
<b>10 Start/stop system</b>	<b>89</b>
10.1 General description	89
10.2 Start/stop operation switch E693	90
10.3 Voltage stabiliser J532	90
<b>90 - Gauges, instruments</b>	<b>96</b>
<b>1 Dash panel insert</b>	<b>96</b>
1.1 General description	96
1.2 Renewing dash panel insert	97
1.3 Removing and installing dash panel insert	97



1.4	Description of back of dash panel insert	98
1.5	Warning lamp symbols in dash panel insert	99
<b>2</b>	<b>Service interval display</b>	<b>102</b>
2.1	Resetting service interval display	102
<b>92</b>	<b>Windscreen wash/wipe system</b>	<b>103</b>
<b>1</b>	<b>Windscreen wiper system</b>	<b>103</b>
1.1	General description	103
1.2	Deactivating APP function of wiper motor	103
1.3	Assembly overview - windscreen wiper system	104
1.4	Removing and installing windscreen wiper system	105
1.5	Removing and installing wiper arms	110
1.6	Adjusting windscreen wiper park position	110
1.7	Removing and installing joint-free wipers	112
1.8	Removing and installing wiper rubber blade of joint-free wiper	113
1.9	Rain and light sensor G397	115
<b>2</b>	<b>Windscreen washer system</b>	<b>120</b>
2.1	Assembly overview - windscreen washer system	120
2.2	Removing and installing washer fluid reservoir	121
2.3	Removing and installing windscreen and rear window washer pump V59	127
2.4	Removing and installing windscreen washer fluid level sender G33	128
2.5	Removing and installing windscreen washer system spray jets	129
2.6	Adjusting spray jets for windscreen washer system	130
<b>3</b>	<b>Rear window wiper system</b>	<b>131</b>
3.1	Assembly overview - rear window wiper system	131
3.2	Removing and installing wiper arm	132
3.3	Removing and installing rear window wiper motor V12	133
3.4	Adjusting rear window wiper park position	134
3.5	Renewing wiper rubber blade	135
3.6	Removing and installing joint-free wiper	135
<b>4</b>	<b>Rear window washer system</b>	<b>137</b>
4.1	Assembly overview - rear window washer system	137
4.2	Renewing spray jet	138
4.3	Adjusting spray jet	139
<b>5</b>	<b>Headlight washer system</b>	<b>140</b>
5.1	Assembly overview - headlight washer system	140
5.2	Removing and installing headlight washer system pump V11	141
5.3	Removing and installing spray jet pop-up cylinders	143
5.4	Adjusting headlight washer system spray jets	144
5.5	Bleeding headlight washer system	144
<b>6</b>	<b>Washer fluid line hose couplings</b>	<b>146</b>
<b>7</b>	<b>Hose repair</b>	<b>147</b>
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>148</b>
<b>1</b>	<b>Headlight with halogen bulbs</b>	<b>148</b>
1.1	General description	148
1.2	Assembly overview - headlights with halogen bulbs	148
1.3	Removing and installing headlight	150
1.4	Adjusting headlight installation position	152
1.5	Renewing headlight bulbs	154
1.6	Headlight range control motor	160
1.7	Repairing headlight retaining tabs (halogen headlight)	160
1.8	Converting headlights for use when driving on the left or right	164
1.9	Adjusting headlights	167



<b>2</b>	<b>Headlights with gas discharge bulbs and cornering lights</b>	<b>168</b>
2.1	Operation and safety notes for gas discharge lamps	168
2.2	General description	170
2.3	Assembly overview - headlights with gas discharge bulbs and cornering lights	172
2.4	Removing and installing headlight with gas discharge bulb and cornering light	175
2.5	Adjusting headlight installation position	177
2.6	Renewing headlight bulbs	179
2.7	Headlight range control motor	184
2.8	Actuator for dynamic cornering light	185
2.9	Static cornering light	185
2.10	Swivel module position sensor	185
2.11	Dipped beam screen	186
2.12	Control unit for left gas discharge bulb J343 or control unit for right gas discharge bulb J344	186
2.13	Output module for left headlight J667 or output module for right headlight J668	188
2.14	Control unit for left daytime running light and side light J860 or control unit for right daytime running light and side light J861	189
2.15	Cornering light and headlight range control unit J745	190
2.16	Vehicle level sender	192
2.17	Repairing headlight retaining tabs	195
2.18	Converting headlights for use when driving on the left or right	195
2.19	Adjusting headlights	195
<b>3</b>	<b>Headlights with gas discharge bulbs, cornering lights and dynamic high beam control</b>	<b>196</b>
3.1	Operation and safety notes for gas discharge lamps	196
3.2	General description	199
3.3	Assembly overview – headlights with gas discharge bulbs, cornering lights and dynamic high beam control	200
3.4	Removing and installing headlights with gas discharge bulbs, cornering lights and dynamic high beam control	203
3.5	Adjusting headlight installation position	205
3.6	Replacing gas discharge bulbs L13/L14	207
3.7	Replacing cornering light bulbs L148/L149	209
3.8	Replacing LED modules for daytime running light and side light L176/L177	211
3.9	Replacing front turn signal bulbs M5/M7	211
3.10	Headlight range control motors V48/V49	212
3.11	Dynamic cornering light control motors V318/V319	213
3.12	Static cornering lights M51/M52	213
3.13	Swivel module position sensors G475/G474	213
3.14	Dipped beam screen	214
3.15	Gas discharge bulb control units J343/J344	214
3.16	Output module for headlight J667/J668	215
3.17	Control unit for left/right daytime running light and side light J860/J861	216
3.18	Cornering light and headlight range control unit J745	218
3.19	Removing and installing front vehicle level senders G78/G289	220
3.20	Removing and installing rear left vehicle level sender G76	221
3.21	Checking vehicle level senders at rear left and front left G76/G78, and vehicle level sender at front right G289	223
3.22	Repairing headlight retaining tabs	223
3.23	Converting headlights for use when driving on the left or right	224
3.24	Adjusting headlights	224
<b>4</b>	<b>Fog lights</b>	<b>225</b>
4.1	Fog lights	225
4.2	Removing and installing fog light bulb / static cornering light bulb	227
4.3	Adjusting fog lights	227
<b>5</b>	<b>Turn signal in exterior mirror</b>	<b>228</b>
5.1	General description	228



5.2	Removing and installing turn signal repeater bulb	228
<b>6</b>	<b>Tail light cluster</b>	<b>229</b>
6.1	Tail light cluster in side panel	229
6.2	Tail light cluster in rear lid	235
<b>7</b>	<b>Number plate light</b>	<b>241</b>
7.1	Removing and installing number plate light X	241
<b>8</b>	<b>High-level brake light</b>	<b>244</b>
8.1	Removing and installing high-level brake light bulb M25	244
8.2	Checking high-level brake light M25	246
<b>9</b>	<b>Steering column switch</b>	<b>247</b>
9.1	General description	247
9.2	Assembly overview - steering column switch	247
9.3	Removal and installation sequence of components of steering column switch	249
9.4	Steering column electronics control unit J527	249
9.5	Steering column combination switch E595	253
9.6	Steering column switch base	255
<b>10</b>	<b>Ignition/starter switch and lock cylinder</b>	<b>260</b>
10.1	Removing and installing steering lock housing	260
10.2	Removing and installing lock cylinder	260
10.3	Removing and installing ignition/starter switch	263
10.4	Removing and installing ignition key withdrawal lock solenoid N334	265
<b>11</b>	<b>Parking aid (PDC)</b>	<b>266</b>
11.1	General description	266
11.2	Assembly overview - parking aid	267
11.3	Rear parking aid control unit J446	268
11.4	Rear parking aid senders	269
11.5	Parking aid warning buzzer	273
11.6	Parking aid button E266	274
<b>12</b>	<b>Park assist steering (PAS)</b>	<b>275</b>
12.1	General description	275
12.2	Assembly overview of park assist steering	276
12.3	Parking aid control unit J446 with park assist steering control unit J791	278
12.4	Parking aid sender and/or park assist steering sender	279
12.5	Renewing park assist steering senders	289
12.6	Park assist steering button E581	289
12.7	Parking aid warning buzzer	290
12.8	Renewing retainers for parking aid senders and park assist steering senders	291
<b>13</b>	<b>Reversing camera (Rear Assist)</b>	<b>297</b>
13.1	General description	297
13.2	Assembly overview - reversing camera system	297
13.3	Removing and installing reversing camera	298
<b>96 - Lights, bulbs, switches - interior</b>		<b>299</b>
<b>1</b>	<b>Interior lights and switches</b>	<b>299</b>
1.1	Removing and installing interior monitoring deactivation switch	299
<b>2</b>	<b>Lights and switches in engine compartment</b>	<b>301</b>
2.1	Removing and installing bonnet contact switch F266	301
<b>3</b>	<b>Lights and switches in dash panel</b>	<b>302</b>
3.1	Removing and installing light switch E1	302
3.2	Removing and installing glove compartment light W6 and glove compartment light switch E26	303
3.3	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	304
3.4	Removing and installing key-operated switch to deactivate front passenger side airbag E224	306



3.5	Removing and installing front passenger side airbag deactivated warning lamp K145	307
3.6	Removing and installing hazard warning light switch E3	308
<b>4</b>	<b>Lights and switches in front doors</b>	<b>310</b>
4.1	Front left entry light W31 and front right entry light W32	310
4.2	Removing and installing window regulator switch in front passenger door E107	312
4.3	Removing and installing switch module for mirror adjustment on driver side	313
4.4	Removing and installing driver side interior locking button for central locking system E308	314
4.5	Components - front door locks	315
4.6	Removing and installing switch module for driver side window regulator	316
4.7	Removing and installing fuel tank flap release button E319	318
<b>5</b>	<b>Lights and switches in rear doors</b>	<b>320</b>
5.1	Rear left entry light W33 and rear right entry light W34	320
5.2	Components - rear door locks	320
5.3	Installing and removing rear left window regulator switch E52 and rear right window regulator switch E54	320
<b>6</b>	<b>Lights and switches in luggage compartment</b>	<b>322</b>
6.1	Removing and installing luggage compartment light W3	322
6.2	Removing and installing rear lid locking unit F256	323
<b>7</b>	<b>Lights and switches in roof trim</b>	<b>324</b>
7.1	Front interior light W1	324
7.2	Rear interior light W43	327
7.3	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	329
<b>8</b>	<b>Components on interior mirror</b>	<b>332</b>
8.1	Main beam assist control unit J844	332
8.2	Front camera for driver assist systems R242	335
<b>9</b>	<b>Lights and switches in centre console</b>	<b>339</b>
9.1	Removing and installing buttons in centre console storage compartment	339
<b>10</b>	<b>12 V socket</b>	<b>341</b>
<b>11</b>	<b>Cigarette lighter U1</b>	<b>342</b>
<b>12</b>	<b>Horn</b>	<b>343</b>
12.1	Removing and installing treble horn H2 and bass horn H7	343
12.2	Checking treble horn H2 and bass horn H7	346
12.3	Horn plate H	346
<b>13</b>	<b>Immobiliser</b>	<b>347</b>
13.1	Immobiliser control unit J362	348
13.2	Ignition key	348
13.3	New identity on renewing all components	348
13.4	Fazit system test	348
<b>14</b>	<b>Anti-theft alarm system</b>	<b>350</b>
14.1	Activating and deactivating anti-theft alarm	350
14.2	Interior monitoring deactivation switch E267	351
14.3	Anti-theft alarm sensor G578	351
14.4	Central locking and anti-theft alarm system aerial R47	353
14.5	Alarm horn H12	353
14.6	Adaptations of anti-theft alarm	354
<b>15</b>	<b>Specified torques: lights, bulbs and switches - interior</b>	<b>355</b>
15.1	Torque settings: alarm horn H12	355
15.2	Torque settings: alarm horns	355
<b>97 - Wiring</b>		<b>356</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>356</b>
<b>2</b>	<b>Removing and installing fuse holder</b>	<b>357</b>
2.1	Removing and installing fuse holder on left beneath dash panel	357



<b>3</b>	<b>Removing and installing relay carrier</b> .....	<b>358</b>
3.1	Removing and installing relay carrier on left of dash panel .....	358
3.2	Removing and installing relay carrier on onboard supply control unit .....	358
<b>4</b>	<b>Removing and installing electronics boxes (electronics boxes)</b> .....	<b>360</b>
4.1	Removing and installing electronics box on left side of engine compartment .....	360
<b>5</b>	<b>Select Control units</b> .....	<b>365</b>
5.1	On-board supply control unit J519 .....	365
5.2	Data bus diagnostic interface J533 (gateway) .....	369
5.3	Driver door control unit J386 .....	371
5.4	Front passenger door control unit J387 .....	372
5.5	Rear left door control unit J388 .....	373
5.6	Rear right door control unit J389 .....	373
5.7	Electronically controlled damping control unit J250 .....	374
5.8	Trailer detector control unit J345 .....	377
5.9	Special vehicle control unit J608 .....	379
<b>6</b>	<b>Specified torques: wiring</b> .....	<b>382</b>
6.1	Specified torques: electronics box on left side of engine compartment .....	382
<b>7</b>	<b>Wiring harness and connector repairs</b> .....	<b>383</b>