



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	4
3.1 Technical data for brakes	4
4 Brake test	7
4.1 General information	7
4.2 Checking vehicles with front-wheel drive	7
4.3 Checking parking brake	7
45 - Anti-lock brake system	9
1 General information	9
1.1 Repair instructions for repair work on ABS	9
2 Overview of fitting locations	12
2.1 Overview of fitting locations – ABS/ESP	12
3 Control unit and hydraulic unit	15
3.1 Assembly overview – control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Separating control unit from hydraulic unit	40
3.4 Fitting control unit to hydraulic unit	41
3.5 Connecting brake lines to hydraulic unit	42
4 Sensors	46
4.1 Assembly overview – speed sensor on front axle	46
4.2 Assembly overview – speed sensors on rear axle	47
4.3 Removing and installing speed sensors on front axle G45/G47	48
4.4 Removing and installing speed sensors on rear axle G44/G46	49
4.5 Checking ABS sensor ring	51
4.6 Removing and installing ESP sensor unit G419	52
46 - Brakes - mechanism	53
1 Front brake	53
1.1 Assembly overview – front brake	53
1.2 Removing and installing brake pads	55
1.3 Removing and installing brake caliper	58
2 Rear brake	61
2.1 Assembly overview - rear brakes	61
2.2 Removing and installing brake pads	63
2.3 Removing and installing brake caliper	69
3 Parking brake	74
3.1 Overview of fitting locations - parking brake	74
3.2 Removing and installing control unit for electromechanical parking brake J540	76
3.3 Removing and installing parking brake motor V282/V283	76
4 Brake pedal	79
4.1 Assembly overview – brake pedal	79
4.2 Removing and installing mounting bracket	83
4.3 Separating brake pedal from brake servo	89
4.4 Connecting brake pedal to brake servo	90
4.5 Removing and installing brake pedal	90
47 - Brakes - hydraulics	92



1	Front brake caliper	92
1.1	Assembly overview – front brake caliper	92
1.2	Removing and installing brake caliper piston	93
2	Rear brake caliper	96
2.1	Assembly overview – rear brake caliper	96
2.2	Renewing dust boot for brake piston	97
3	Brake servo and brake master cylinder	101
3.1	Assembly overview – brake servo/brake master cylinder	101
3.2	Removing and installing brake light switch	106
3.3	Removing and installing brake servo	110
3.4	Removing and installing brake master cylinder	124
4	Vacuum system	137
4.1	Assembly overview - vacuum pump	137
4.2	Checking non-return valve	142
4.3	Removing and installing vacuum sender G608	143
4.4	Checking vacuum system	144
4.5	Removing and installing electric vacuum pump	150
5	Brake lines	152
5.1	Repairing brake lines	152
6	Hydraulic system	157
6.1	General notes on brake fluid	157
6.2	Bleeding hydraulic system following standard procedure	157
6.3	Subsequent bleeding of hydraulic system	158
6.4	Testing for leaks	159