



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
2 Evaluating accident vehicles	2
2.1 Check list for evaluating running gear on accident vehicles	2
3 Repair notes	4
3.1 Leaks at shock absorbers	4
3.2 Noises from shock absorbers	4
3.3 Checking shock absorbers when removed	5
3.4 Steering rack	5
3.5 Gaskets and seals	6
3.6 Nuts and bolts	6
3.7 Electrical components	6
3.8 Raising suspension to unladen position (vehicles with coil springs)	7
4 Disposal	11
4.1 Releasing gas and draining front gas-filled shock absorbers	11
4.2 Releasing gas and draining rear gas-filled shock absorbers	13
40 - Front suspension	15
1 Front axle	15
1.1 Overview of fitting locations – front axle	15
2 Subframe	16
2.1 Assembly overview – subframe	16
2.2 Fixing subframe in position	18
2.3 Lowering subframe	22
2.4 Removing and installing subframe without steering rack	26
2.5 Removing and installing subframe with steering rack	32
2.6 Repairing subframe	40
2.7 Removing and installing anti-roll bar	53
2.8 Removing and installing coupling rod	59
2.9 Repairing thread in longitudinal member	60
3 Suspension strut, upper suspension link	61
3.1 Assembly overview – suspension strut, upper suspension link	61
3.2 Removing and installing suspension strut	62
3.3 Repairing suspension strut	74
4 Lower suspension link, swivel joint	78
4.1 Assembly overview – lower suspension link, swivel joint	78
4.2 Removing and installing lower suspension link	79
4.3 Checking swivel joint	88
4.4 Removing and installing swivel joint	88
4.5 Renewing bonded rubber bush for lower suspension link	93
5 Wheel bearing	101
5.1 Assembly overview – wheel bearing assembly	101
5.2 Removing and installing wheel bearing housing	101
5.3 Removing and installing wheel bearing unit	106
6 Drive shaft	112
6.1 Overview - drive shaft	112
6.2 Assembly overview – drive shaft	113
6.3 Removing and installing drive shaft	119
6.4 Loosening and tightening threaded connections of drive shaft	138
6.5 Removing and installing drive shaft heat shield	139



6.6	Dismantling and assembling drive shaft	140
6.7	Checking outer constant velocity joint	158
6.8	Checking inner constant velocity joint	160
42	Rear suspension	163
1	Rear axle	163
1.1	Overview – rear axle	163
1.2	Lowering rear axle	164
1.3	Removing and installing rear axle	168
2	Subframe	173
2.1	Assembly overview – subframe	173
2.2	Assembly overview – add-on parts for subframe	173
2.3	Fixing subframe in position	174
3	Anti-roll bar	180
3.1	Assembly overview – anti-roll bar	180
3.2	Removing and installing anti-roll bar	180
3.3	Removing and installing coupling rod	182
4	Suspension link, track rod	186
4.1	Assembly overview – transverse link	186
4.2	Assembly overview – track rod	188
4.3	Removing and installing upper transverse link	188
4.4	Removing and installing lower transverse link	190
4.5	Removing and installing track rod	192
5	Suspension strut, shock absorber, spring	195
5.1	Assembly overview – suspension strut, shock absorber, spring	195
5.2	Removing and installing shock absorber	196
5.3	Repairing shock absorber	200
5.4	Removing and installing spring	202
6	Wheel bearing assembly, trailing arm	210
6.1	Assembly overview – wheel bearing assembly	210
6.2	Assembly overview – trailing arm	211
6.3	Removing and installing wheel bearing housing	212
6.4	Removing and installing wheel bearing unit	218
6.5	Renewing bonded rubber bush for wheel bearing housing	223
6.6	Removing and installing trailing arm with mounting bracket	227
6.7	Repairing trailing arm, standard trailing arm bushes	230
43	Self-levelling suspension	236
1	Electronic damping control	236
1.1	Assembly overview - electronically controlled damping system	236
1.2	Removing and installing electronically controlled damping control unit J250	238
1.3	Removing and installing front body acceleration senders G341/G342	239
1.4	Removing and installing rear left body acceleration sender G699	243
2	Vehicle level sender	245
2.1	Assembly overview – front vehicle level senders	245
2.2	Assembly overview – rear vehicle level senders	246
2.3	Removing and installing front vehicle level senders G78/G289	246
2.4	Removing and installing rear vehicle level senders G76/G77	248
44	Wheels, tyres, vehicle geometry	250
1	Wheel alignment	250
1.1	Notes for wheel alignment	250
1.2	Conditions for testing	251
1.3	Preparations for testing	251
1.4	Specifications for wheel alignment	253



1.5	Wheel alignment procedure	255
1.6	Necessity of wheel alignment	256
1.7	Vehicle data sticker	257
1.8	Adjusting camber at front wheels	258
1.9	Adjusting camber on rear axle	260
1.10	Adjusting toe at rear axle	261
1.11	Adjusting front axle toe	262
1.12	Wheel runout compensation	263
1.13	Checking maximum steering wheel angle	264
2	Adaptive cruise control	265
2.1	Calibrating adaptive cruise control	265
3	Front camera for assist systems	276
3.1	Calibrating front camera for assist systems	276
48 - Steering		285
1	Steering wheel	285
1.1	Assembly overview – steering wheel	285
1.2	Removing and installing steering wheel	285
2	Steering column	288
2.1	Assembly overview – steering column	288
2.2	Checking steering column for damage	289
2.3	Handling and transporting steering column	290
2.4	Removing and installing steering column	291
2.5	Removing and installing control unit for electronic steering column lock J764	302
3	Steering rack	305
3.1	Assembly overview – steering rack	305
3.2	Removing and installing steering rack	310
3.3	Removing and installing bellows	321
3.4	Removing and installing track rod	324
3.5	Removing and installing track rod ball joint	329
3.6	Repairing steering rack	331
4	Sensors	336
4.1	Removing and installing steering angle sender G85	336