



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
<b>2 Repair instructions</b>	<b>4</b>
2.1 Contact corrosion	4
2.2 Routing and attachment of lines	4
<b>3 Battery</b>	<b>5</b>
3.1 Battery - general notes	5
3.2 Types of battery	5
<b>27 - Starter, current supply, CCS</b>	<b>6</b>
<b>1 Battery</b>	<b>6</b>
1.1 Assembly overview – battery	6
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	11
1.4 Removing and installing battery tray	12
1.5 Checking battery	13
1.6 Charging battery	13
1.7 Removing and installing earth wire with battery monitor control unit J367	13
1.8 Adapting battery monitor control unit J367	15
<b>2 Alternator</b>	<b>16</b>
2.1 Assembly overview – alternator	16
2.2 Removing and installing alternator	17
2.3 Checking alternator	24
2.4 Removing and installing poly V-belt pulley	25
2.5 Removing and installing voltage regulator	35
<b>3 Starter</b>	<b>38</b>
3.1 Assembly overview – starter	38
3.2 Removing and installing starter	40
<b>4 Cruise control system (CCS)</b>	<b>48</b>
<b>5 Start/stop system</b>	<b>49</b>
5.1 General description - start/stop system	49
<b>6 Adaptive cruise control</b>	<b>51</b>
6.1 Overview of fitting locations - adaptive cruise control	51
6.2 Removing and installing automatic distance control unit	52
6.3 Calibrating adaptive cruise control	53
<b>90 - Gauges, instruments</b>	<b>55</b>
<b>1 Dash panel insert</b>	<b>55</b>
1.1 Assembly overview – dash panel insert	55
1.2 Removing and installing dash panel insert KX2	55
<b>2 Horn</b>	<b>58</b>
2.1 Assembly overview – horn	58
2.2 Removing and installing treble horn H2 and bass horn H7	59
<b>92 - Windscreen wash/wipe system</b>	<b>61</b>
<b>1 Windscreen wiper system</b>	<b>61</b>
1.1 Assembly overview – windscreen wiper system	61
1.2 Moving wipers to service position	63
1.3 Removing and installing wiper blade	64



1.4	Removing and installing wiper arms	65
1.5	Adjusting wiper arms	67
1.6	Removing and installing wiper motor V	68
1.7	Renewing wiper motor	70
1.8	Deactivating APP function of wiper motor	72
1.9	Removing and installing rain and light sensor	73
<b>2</b>	<b>Windscreen washer system</b>	<b>78</b>
2.1	Assembly overview – windscreen washer system	78
2.2	Removing and installing washer fluid reservoir	80
2.3	Removing and installing windscreen washer fluid level sender	83
2.4	Removing and installing windscreen washer pump	83
2.5	Removing and installing spray jets	84
2.6	Adjusting spray jets	85
<b>3</b>	<b>Rear window wiper system</b>	<b>86</b>
3.1	Assembly overview – rear window wiper system	86
3.2	Removing and installing wiper blade	86
3.3	Removing and installing wiper arm	87
3.4	Adjusting wiper arm	88
3.5	Removing and installing rear window wiper motor V12	89
<b>4</b>	<b>Rear window washer system</b>	<b>92</b>
4.1	Assembly overview – rear window washer system	92
4.2	Removing and installing washer fluid reservoir	93
4.3	Removing and installing rear window washer pump	93
4.4	Removing and installing spray jet	93
4.5	Adjusting spray jet	94
<b>5</b>	<b>Headlight washer system</b>	<b>95</b>
5.1	Assembly overview - headlight washer system	95
5.2	Removing and installing washer fluid reservoir	96
5.3	Removing and installing headlight washer system pump V11	96
5.4	Removing and installing pop-up cylinder	97
5.5	Removing and installing spray jets	100
5.6	Adjusting spray jets	100
<b>6</b>	<b>Washer fluid lines</b>	<b>101</b>
6.1	Repairing washer fluid lines	101
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>102</b>
<b>1</b>	<b>Headlights</b>	<b>102</b>
1.1	Assembly overview – headlight	102
1.2	Removing and installing headlight	108
1.3	Adjusting headlights	109
1.4	Adjusting headlight installation position	110
1.5	Removing and installing front turn signal bulb M5/M7	111
1.6	Installing repair kit for headlight housing	112
1.7	Converting headlights from driving on right to driving on left	114
1.8	Converting headlights from driving on left to driving on right	114
1.9	Removing and installing headlight range control motor V48/V49	115
1.10	Removing and installing dipped beam bulb M29/M31	116
1.11	Removing and installing headlight main beam bulb M30/M32	121
1.12	Removing and installing side light bulb M1/M3	126
1.13	Removing and installing daytime running light bulb L174/L175	126
1.14	Removing and installing LED modules for daytime running light and side light L176/L177	127
1.15	Removing and installing output module for headlight J667/J668	128
1.16	Removing and installing output module 1 for LED headlights A27/A31	129
1.17	Removing and installing swivel module position sensor G474/G475	130
1.18	Removing and installing dynamic cornering light control motor V318/V319	130



<b>2</b>	<b>Fog lights</b>	<b>131</b>
2.1	Assembly overview - fog lights	131
2.2	Removing and installing fog light	131
2.3	Removing and installing fog light bulb L22/L23	133
<b>3</b>	<b>Lights in exterior mirror</b>	<b>134</b>
3.1	Assembly overview - lights in exterior mirror	134
3.2	Removing and installing turn signal	136
3.3	Removing and installing entry light in exterior mirror	138
<b>4</b>	<b>Tail light cluster</b>	<b>139</b>
4.1	Assembly overview – tail light cluster in body	139
4.2	Assembly overview – tail light clusters in rear lid	141
4.3	Removing and installing tail light in rear lid	143
4.4	Adjusting installation position of tail light	145
4.5	Removing and installing tail light cluster	146
4.6	Removing and installing tail light bulb M2/M4	146
4.7	Removing and installing rear fog light bulb L46/L47	148
4.8	Removing and installing brake and tail light bulb M21/M22	150
4.9	Removing and installing reversing light bulb	151
4.10	Removing and installing rear turn signal bulb	153
<b>5</b>	<b>High-level brake light</b>	<b>156</b>
5.1	Assembly overview – high-level brake light	156
5.2	Removing and installing high-level brake light	156
<b>6</b>	<b>Number plate light</b>	<b>159</b>
6.1	Removing and installing number plate light X4/X5	159
6.2	Removing and installing bulb for number plate light X4/X5	160
<b>7</b>	<b>Entry and start authorisation system</b>	<b>161</b>
7.1	Overview of fitting locations – entry and start authorisation system	161
7.2	Overview of fitting locations – keyless entry system	163
7.3	Removing and installing entry and start authorisation control unit J518	166
7.4	Removing and installing interior aerial 1 for entry and start system R138	168
7.5	Removing and installing interior aerial 2 for entry and start system R139	169
7.6	Removing and installing driver side aerial for entry and start system R134	170
7.7	Removing and installing front passenger side aerial for entry and start system R135	170
7.8	Removing and installing luggage compartment aerial for entry and start system R137	171
7.9	Removing and installing rear bumper aerial for entry and start system R136	171
7.10	Removing and installing rear lid power opening control unit J938	172
7.11	Removing and installing rear lid power opening sender G750/G760	172
<b>8</b>	<b>Steering column switch module</b>	<b>174</b>
8.1	Assembly overview – steering column switch module	174
8.2	Removing and installing steering column switch module	177
8.3	Removing and installing steering column electronics control unit J527	182
8.4	Removing and installing turn signal switch E2	188
8.5	Removing and installing intermittent wiper switch E22	190
8.6	Removing and installing immobiliser reader coil D2	190
8.7	Removing and installing ignition/starter switch	191
8.8	Removing and installing lock cylinder	192
8.9	Removing and installing steering lock housing	194
8.10	Removing and installing ignition key withdrawal lock solenoid N376	195
8.11	Removing and installing base for steering column combination switch	196
<b>9</b>	<b>Parking aid</b>	<b>198</b>
9.1	Assembly overview – parking aid	198
9.2	Removing and installing parking aid control unit J446	202
9.3	Removing and installing front parking aid warning buzzer H22	204
9.4	Removing and installing rear parking aid warning buzzer H15	206



9.5	Removing and installing front parking aid senders	206
9.6	Removing and installing rear parking aid senders	207
<b>10</b>	<b>Park assist steering</b>	<b>209</b>
10.1	Assembly overview - park assist steering	209
10.2	Removing and installing park assist steering control unit J791	210
10.3	Removing and installing front senders	210
10.4	Removing and installing rear senders	211
<b>11</b>	<b>Automatic headlight range control</b>	<b>213</b>
11.1	Assembly overview - automatic headlight range control	213
11.2	Removing and installing headlight range control unit	214
<b>12</b>	<b>Towing bracket</b>	<b>218</b>
12.1	Assembly overview - towing bracket socket	218
12.2	Removing and installing trailer detector control unit J345	218
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>221</b>
<b>1</b>	<b>Lights</b>	<b>221</b>
1.1	Overview of fitting locations – lights in dash panel	221
1.2	Overview of fitting locations – lights in front doors	222
1.3	Overview of fitting locations – lights in rear doors	223
1.4	Overview of fitting locations - lights in centre console	224
1.5	Overview of fitting locations – lights in luggage compartment	225
1.6	Overview of fitting locations – lights in roof trim	226
1.7	Removing and installing glove compartment light W6	229
1.8	Replacing bulb for glove compartment light W6	229
1.9	Removing and installing footwell light W9/W10	229
1.10	Removing and installing front footwell illumination bulb L151/L152	231
1.11	Removing and installing Central locking SAFELOCK function warning lamp K133	231
1.12	Removing and installing light for background lighting of front door	231
1.13	Removing and installing LED for ambient lighting	232
1.14	Removing and installing front entry light W31/W32	233
1.15	Removing and installing door warning lamp W30/W36	235
1.16	Removing and installing rear entry light W33/W34	235
1.17	Removing and installing rear door warning lamp W37/W38	236
1.18	Removing and installing light 1 for front door background lighting L199/L200	236
1.19	Removing and installing door opener illumination bulb	236
1.20	Removing and installing selector lever position display Y26	237
1.21	Removing and installing luggage compartment light W3	237
1.22	Removing and installing illuminated vanity mirror W20/W14	238
1.23	Removing and installing bulb for front interior light W1	238
1.24	Removing and installing bulb for rear interior light W43	240
1.25	Removing and installing rear reading light W11/W12	240
1.26	Renewing bulb of rear interior light W47/W48	240
<b>2</b>	<b>Controls</b>	<b>244</b>
2.1	Overview of fitting locations – controls in dash panel	245
2.2	Overview of fitting locations – controls in front doors	245
2.3	Overview of fitting locations – controls in rear doors	246
2.4	Overview of fitting locations - controls in centre console	247
2.5	Overview of fitting locations – controls in luggage compartment	248
2.6	Overview of fitting locations – controls in roof trim	249
2.7	Removing and installing rotary light switch EX1	252
2.8	Removing and installing headlight range control regulator E102	253
2.9	Removing and installing driving mode selection button E735	253
2.10	Removing and installing Start/Stop operation button E693	254
2.11	Removing and installing TCS and ESP button E256	254
2.12	Removing and installing parking aid button E266	254



2.13	Removing and installing park assist steering button E581	254
2.14	Removing and installing centre console switch module	254
2.15	Removing and installing hazard warning light switch EX3	255
2.16	Removing and installing buttons for seat heating E653/E654	256
2.17	Removing and installing glove compartment light switch E26	256
2.18	Removing and installing exterior mirror adjuster EX11	257
2.19	Removing and installing operating unit for window regulator in driver door E512	258
2.20	Removing and installing front passenger side window regulator button E716	259
2.21	Removing and installing driver side interior locking button for central locking system E308	259
2.22	Removing and installing rear lid remote release button E233	260
2.23	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	260
2.24	Removing and installing door contact switch F2/F3	261
2.25	Removing and installing rear window regulator button E711/E713	262
2.26	Removing and installing rear door contact switches F10/F11	262
2.27	Removing and installing electromechanical parking brake button E538/auto-hold button E540	263
2.28	Removing and installing starter button E378	263
2.29	Removing and installing rear lid warning buzzer H32	264
2.30	Removing and installing rear lid contact switch	265
2.31	Removing and installing rear lid closure button E574	265
2.32	Removing and installing electric hinged tow coupling attachment button E474	266
2.33	Removing and installing vanity mirror contact switch F147/F148	268
2.34	Removing and installing sunroof button E325	268
2.35	Removing and installing front interior light/reading light	269
2.36	Removing and installing rear interior light/reading light	270
2.37	Removing and installing front reading light button E633/E634	272
2.38	Removing and installing front passenger side airbag deactivated warning lamp K145	272
<b>3</b>	<b>Anti-theft alarm</b>	<b>274</b>
3.1	Assembly overview – interior monitor	274
3.2	Removing and installing alarm horn H12	275
3.3	Removing and installing anti-theft alarm sensor G578	276
<b>4</b>	<b>Lane change assist</b>	<b>278</b>
4.1	Assembly overview - lane change assist	278
4.2	Removing and installing lane change assist warning lamp in exterior mirror K233/K234	279
4.3	Removing and installing lane change assist control unit J769/J770	279
4.4	Calibrating lane change assist	281
<b>5</b>	<b>Front camera for driver assist systems</b>	<b>290</b>
5.1	Removing and installing front camera for driver assist systems	290
<b>6</b>	<b>Cigarette lighter, socket</b>	<b>291</b>
6.1	Assembly overview - DC/AC converter with socket, 12 V-230 V	291
6.2	Removing and installing cigarette lighter U1	292
6.3	Removing and installing socket illumination bulb L42	292
6.4	Removing and installing rear cigarette lighter illumination bulb L32	292
6.5	Removing and installing cigarette lighter U1	292
6.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	292
<b>97 - Wiring</b>		<b>295</b>
<b>1</b>	<b>Relay carriers, fuse holders, electronics boxes</b>	<b>295</b>
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	295
1.2	Removing and installing electronics box	298
1.3	Removing and installing relay and fuse holder in electronics box	301
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	303
<b>2</b>	<b>Control units</b>	<b>306</b>
2.1	Overview of fitting locations - control units	306



2.2	Overview of fitting locations - control units	308
2.3	Assembly overview - data bus diagnostic interface	310
2.4	Removing and installing onboard supply control unit J519	313
2.5	Removing and installing data bus diagnostic interface J533	317
2.6	Removing and installing bracket for onboard supply control unit J519	318
2.7	Removing and installing parking aid control unit J446/park assist steering control unit J791	321
2.8	Removing and installing rear lid control unit J605	322
2.9	Removing and installing bracket for rear lid control unit J605	323
<b>3</b>	<b>Connectors</b>	<b>324</b>
3.1	Repairing electrical wiring harnesses and plug-in connections	324
<b>4</b>	<b>Releasing and dismantling connector housings</b>	<b>325</b>
<b>5</b>	<b>Repairing aerial wires</b>	<b>326</b>
<b>6</b>	<b>Fibre optic cables</b>	<b>327</b>
<b>7</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>328</b>