



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
2 Repair notes	2
2.1 Routing and attachment of lines	2
2.2 Contact corrosion	2
2.3 Bonding surfaces for self-adhesive components	2
2.4 General information for use of adhesives	3
2.5 Secured threaded connections	4
50 - Body - front	5
1 Lock carrier	5
1.1 Assembly overview – lock carrier	5
1.2 Removing and installing lock carrier	6
1.3 Moving to and back from service position	9
1.4 Removing and installing headlight bracket	13
2 Wing	16
2.1 Assembly overview – wing	16
2.2 Removing and installing wing	16
3 Bulkhead	22
3.1 Assembly overview – bulkhead	22
3.2 Assembly overview – plenum chamber cover	23
3.3 Removing and installing bulkhead	24
3.4 Removing and installing plenum chamber cover	27
55 - Bonnet, rear lid	33
1 Bonnet	33
1.1 Assembly overview – bonnet	33
1.2 Removing and installing bonnet	36
1.3 Resetting hinge	38
1.4 Adjusting bonnet	40
1.5 Removing and installing bonnet lock	46
1.6 Removing and installing bonnet lock operating lever	51
1.7 Removing and installing striker pin	53
1.8 Removing and installing hinge	55
1.9 Removing and installing insulation	57
1.10 Removing and installing gas strut	59
1.11 Releasing gas from gas strut	61
1.12 Removing and installing Bowden cable	61
2 Rear lid	65
2.1 Assembly overview – rear lid	65
2.2 Removing and installing rear lid	67
2.3 Adjusting rear lid	70
2.4 Removing and installing rear lid lock	76
2.5 Removing and installing operating mechanism	88
2.6 Removing and installing hinge	89
2.7 Removing and installing striker pin	92
2.8 Removing and installing rear lid seal	93
2.9 Removing and installing gas strut	94
2.10 Preparing gas strut for disposal	96
2.11 Removing and installing rear lid drive unit VX69	96
3 Tank flap unit	101



3.1	Assembly overview – tank flap unit	101
3.2	Removing and installing tank flap unit	101
3.3	Removing and installing fuel tank flap	104
57	- Front doors, door components, central locking	107
1	Door	107
1.1	Assembly overview – door	107
1.2	Removing and installing inner door seal	110
1.3	Removing and installing outer door seal	112
1.4	Removing and installing door	114
1.5	Adjusting door	116
1.6	Adjusting striker pin	118
1.7	Removing and installing door arrester	120
2	Door components	123
2.1	Assembly overview – door components	123
2.2	Assembly overview – window regulator	125
2.3	Assembly overview – door handle and door lock	125
2.4	Removing and installing window regulator motor	126
2.5	Removing and installing window regulator	129
2.6	Removing and installing inner door cover	132
2.7	Removing and installing striker pin	135
2.8	Removing and installing cap on door handle	136
2.9	Removing and installing lock cylinder	141
2.10	Removing and installing door handle	145
2.11	Removing and installing mounting bracket	147
2.12	Removing and installing door lock	149
2.13	Removing and installing window channel	153
2.14	Removing and installing outer window slot seal	156
2.15	Removing and installing window slot inner seal	158
3	Central locking	159
3.1	Overview of fitting locations – central locking system	159
3.2	Removing and installing tank filler flap locking motor V155	161
3.3	Removing and installing ignition key battery	162
3.4	Removing and installing cap on ignition key	164
58	- Rear doors, door components	166
1	Door	166
1.1	Assembly overview – door	166
1.2	Removing and installing door	169
1.3	Adjusting door	171
1.4	Adjusting striker pin	173
1.5	Removing and installing door arrester	175
1.6	Removing and installing inner door seal	177
1.7	Removing and installing outer door seal	180
2	Door components	182
2.1	Assembly overview – door components	182
2.2	Assembly overview – window regulator	184
2.3	Assembly overview – door handle and door lock	184
2.4	Removing and installing window regulator motor	185
2.5	Removing and installing window regulator	188
2.6	Removing and installing inner door cover	191
2.7	Removing and installing striker pin	193
2.8	Removing and installing cap on door handle	194
2.9	Removing and installing door handle	198
2.10	Removing and installing mounting bracket	200



2.11	Removing and installing door lock	202
2.12	Removing and installing door deformation element	207
2.13	Removing and installing window channel	209
2.14	Removing and installing outer window slot seal	212
2.15	Removing and installing window slot inner seal	213
60	- Sunroof	215
1	Sliding sunroof	215
1.1	Assembly overview – sliding sunroof	215
1.2	Assembly overview – sun blind	217
1.3	Assembly overview – wind deflector	217
1.4	Removing and installing sunroof panel	218
1.5	Removing and installing rear sunroof panel	222
1.6	Adjusting sunroof panel	226
1.7	Removing and installing sliding sunroof frame	230
1.8	Removing and installing sun blind cables	241
1.9	Removing and installing wind deflector	244
1.10	Removing and installing sunroof motor V1	247
1.11	Removing and installing sunroof roller blind motor V260	249
1.12	Removing and installing roller blind adjustment control unit J394	251
1.13	Removing and installing J245sliding sunroof adjustment control unit	253
1.14	Manual operation	254
1.15	Removing and installing sliding sunroof seals	256
1.16	Removing and installing sunroof roller blind	261
1.17	Programming sliding sunroof adjustment control unit J245	265
2	Water drainage hoses	266
2.1	Assembly overview - water drain hoses	266
2.2	Cleaning water drain hoses	266
2.3	Removing and installing water drain hoses	268
63	- Bumpers	271
1	Bumper, front	271
1.1	Assembly overview – bumper cover	271
1.2	Assembly overview - attachments	273
1.3	Assembly overview – bumper carrier	276
1.4	Removing and installing bumper cover	277
1.5	Repairing bumper cover	281
1.6	Installing holder for parking aid sender	281
1.7	Installing retainer for parking aid sender	286
2	Bumper, rear	291
2.1	Assembly overview – bumper cover	291
2.2	Assembly overview - attachments	293
2.3	Assembly overview – bumper carrier	295
2.4	Removing and installing bumper cover	296
2.5	Removing and installing bumper carrier	299
2.6	Repairing bumper cover	301
2.7	Installing holder for parking aid sender	301
2.8	Installing retainer for parking aid sender	306
64	- Glazing	311
1	Repair notes	311
1.1	Minimum drying times for bonded windows	311
1.2	Window repair	311
1.3	Installation instructions for bonded windows	312
1.4	Preparing old undamaged windows for installing	314
1.5	Preparing new windows for installing	315



1.6	Preparing body flange for installing	316
1.7	Cleaning off excess adhesive	318
2	Windscreen	319
2.1	Assembly overview – windscreen	319
2.2	Removing and installing windscreen	320
3	Rear windscreen	329
3.1	Assembly overview – rear window	329
3.2	Removing and installing rear window	330
4	Side windows	334
4.1	Assembly overview - front side window	334
4.2	Assembly overview – rear side windows	334
4.3	Removing and installing front side window	335
4.4	Removing and installing rear side window	339
5	Door windows	344
5.1	Assembly overview – front door window	344
5.2	Assembly overview - rear door window	344
5.3	Removing and installing front door window	345
5.4	Removing and installing rear door window	349
5.5	Removing and installing fixed rear door window	353
66	- Exterior equipment	355
1	Radiator grille and front trim	355
1.1	Assembly overview – radiator grille	355
1.2	Removing and installing radiator grille	356
2	Spoiler	359
2.1	Assembly overview – spoiler	359
2.2	Removing and installing side spoiler	359
3	Mouldings, trims, extensions	362
3.1	Assembly overview - side member trim	362
3.2	Assembly overview – water deflector	363
3.3	Removing and installing water deflector	363
3.4	Removing and installing B-pillar trim on door	365
3.5	Removing and installing trim strip	367
3.6	Removing and installing step moulding	369
3.7	Removing and installing side member trim	371
4	Noise insulation	376
4.1	Assembly overview - noise insulation	376
5	Underbody cladding	379
5.1	Assembly overview – underbody cladding	379
5.2	Removing and installing underbody cladding	380
5.3	Removing and installing tunnel cross-piece	385
6	Roof moulding and roof railing	388
6.1	Assembly overview - roof railing	388
6.2	Removing and installing roof railing	388
7	Exterior mirror	391
7.1	Assembly overview – exterior mirror	391
7.2	Removing and installing exterior mirror	393
7.3	Removing and installing mirror glass	395
7.4	Removing and installing mirror adjustment unit	397
7.5	Removing and installing mirror cover	399
7.6	Removing and installing mirror frame	400
8	Wheel housing liner	401
8.1	Assembly overview – front wheel housing liner	401
8.2	Assembly overview – rear wheel housing liner	402



8.3	Removing and installing front wheel housing liner	403
8.4	Removing and installing rear wheel housing liner	405
9	Lettering and badges	407
9.1	Dimensions - lettering and badges on rear	407
9.2	Dimensions – lettering and badges on sides	410
9.3	Removing and installing badges at front	413
9.4	Renewing lettering and badges at rear	416
9.5	Renewing lettering and badges on sides	418
10	Special add-on parts	420
10.1	Assembly overview – special add-on parts	420
11	Towing bracket	421
11.1	Assembly overview – towing bracket	421
11.2	Removing and installing towing bracket	422
11.3	Removing and installing hinged tow attachment ball head motor	424
12	Heat shields	426
12.1	Overview of fitting locations - heat shields	426
12.2	Removing and installing front heat shield	426
12.3	Removing and installing centre heat shield	427
12.4	Removing and installing rear heat shield	428