



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions for working on vehicles with auxiliary/supplementary heater	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions during work on fuel system	2
1.4 Safety precautions when working on the cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
2 General information	4
2.1 Starting conditions for auxiliary/supplementary heater	4
2.2 Rules for cleanliness when working on auxiliary heater and fuel system	5
2.3 Type plates	5
3 Repair notes	7
3.1 General information	7
82 - Supplementary heating	8
1 Fitting locations	8
1.1 Overview of fitting locations – auxiliary/supplementary heater	8
2 Auxiliary/supplementary heater	10
2.1 Assembly overview - auxiliary heater	10
2.2 Assembly overview – attachments of auxiliary/supplementary heater	11
2.3 Assembly overview – auxiliary/supplementary heater, interior	12
2.4 Removing and installing auxiliary/supplementary heater	14
2.5 Dismantling and assembling auxiliary/supplementary heater	19
2.6 Removing and installing air intake silencer	20
2.7 Removing and installing recirculation pump V55	21
2.8 Removing and installing exhaust system	24
2.9 Removing and installing auxiliary/supplementary heater bracket	25
2.10 Removing and installing cover	25
2.11 Removing and installing glow plug with flame monitoring Q8	27
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	27
2.13 Dismantling and assembling combustion chamber insert	28
2.14 Removing and installing auxiliary heater control unit J364	30
3 Coolant circuit with auxiliary/supplementary heater	31
3.1 Connection diagram - coolant hoses	31
3.2 Removing and installing coolant pipes for auxiliary heater	33
4 Fuel supply system	38
4.1 Overview of fitting locations - fuel supply system	38
4.2 Checking fuel delivery rate	39
4.3 Removing and installing metering pump V54	40
5 Regulation of auxiliary/supplementary heater	43
5.1 Functional description	43
5.2 Supplementary heater mode	44
5.3 Auxiliary heater mode	44
5.4 Switching off auxiliary/supplementary heater	45
6 Other controlling and regulating components	46
6.1 Removing and installing remote control receiver for auxiliary coolant heater R149	46
6.2 Functional description of remote control for auxiliary/supplementary heater	47