



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b>  | <b>1</b>  |
| <b>1 Safety information</b>   | <b>1</b>  |
| 1.1 Safety measures when working on vehicles with a start/stop system     | 1         |
| <b>2 Identification</b>   | <b>2</b>  |
| 2.1 Gearbox identification  | 2         |
| <b>3 Repair notes</b>   | <b>3</b>  |
| 3.1 General repair instructions   | 3         |
| <b>4 Technical data</b>   | <b>6</b>  |
| 4.1 Allocation gearbox - engine   | 6         |
| 4.2 Capacities  | 6         |
| <b>5 Overview - power transmission</b>                                    | <b>7</b>  |
| <b>6 Electrical components</b>  | <b>8</b>  |
| 6.1 Overview of fitting locations - electrical components                 | 8         |
| <b>30 - Clutch</b>  | <b>9</b>  |
| <b>1 Clutch mechanism</b>   | <b>9</b>  |
| 1.1 Assembly overview - pedal cluster                                     | 9         |
| 1.2 Assembly overview - clutch hydraulics                                 | 11        |
| 1.3 Checking function of clutch master cylinder and clutch slave cylinder | 13        |
| 1.4 Removing and installing bearing bush                                  | 14        |
| 1.5 Removing and installing clutch position sender G476                   | 15        |
| 1.6 Removing and installing return spring                                 | 16        |
| 1.7 Removing and installing over-centre spring                            | 20        |
| 1.8 Removing and installing clutch pedal                                  | 23        |
| 1.9 Removing and installing mounting bracket                              | 25        |
| 1.10 Removing and installing clutch master cylinder                       | 31        |
| 1.11 Removing and installing lines for clutch mechanism                   | 31        |
| 1.12 Bleeding clutch mechanism  | 35        |
| <b>2 Clutch</b>   | <b>38</b> |
| <b>34 - Controls, housing</b>   | <b>39</b> |
| <b>1 Selector mechanism</b>   | <b>39</b> |
| 1.1 Assembly overview – gear knob and cover                               | 39        |
| 1.2 Assembly overview - selector mechanism                                | 40        |
| 1.3 Removing and installing gear knob                                     | 43        |
| 1.4 Removing and installing selector mechanism                            | 45        |
| 1.5 Adjusting selector mechanism  | 55        |
| 1.6 Checking selector mechanism   | 58        |
| <b>2 Removing and installing gearbox</b>                                  | <b>59</b> |
| 2.1 Specified torques for gearbox   | 59        |
| 2.2 Removing gearbox  | 61        |
| 2.3 Installing gearbox  | 68        |
| <b>3 Transporting gearbox</b>   | <b>71</b> |
| <b>4 Gear oil</b>   | <b>72</b> |
| 4.1 Checking gear oil level   | 72        |
| 4.2 Draining and filling gear oil   | 72        |
| <b>35 - Gears, shafts</b>   | <b>74</b> |
| <b>1 Input shaft</b>  | <b>74</b> |
| <b>2 Output shaft</b>   | <b>75</b> |



|   |           |
|---|-----------|
| <b>39 - Final drive - differential</b> .....        | <b>76</b> |
| <b>1 Oil seals</b> .....                            | <b>76</b> |
| 1.1 Overview of fitting locations - oil seals ..... | 76        |
| 1.2 Renewing left seal .....                        | 77        |
| 1.3 Renewing right seal .....                       | 81        |