



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the SCR system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>5</b>
2.1 Engine number/engine data	5
<b>3 Repair notes</b>	<b>10</b>
3.1 Rules for cleanliness	10
3.2 Foreign objects in engine	10
3.3 Contact corrosion	10
3.4 Routing and attachment of lines	11
3.5 Fitting radiator and condensers	11
<b>4 Technical data</b>	<b>13</b>
4.1 Coolant	14
<b>10 - Removing and installing engine</b>	<b>16</b>
<b>1 Removing and installing motor</b>	<b>16</b>
1.1 Removing motor	16
1.2 Separating engine and gearbox	28
1.3 Securing engine on engine and gearbox support	32
1.4 Installing engine	34
<b>2 Assembly mountings</b>	<b>39</b>
2.1 Assembly overview – assembly mountings	39
2.2 Removing and installing engine mounting	41
2.3 Removing and installing gearbox mountings	42
2.4 Removing and installing pendulum support	44
2.5 Supporting engine in installation position	46
2.6 Checking adjustment of assembly mountings (engine and gearbox mountings)	57
2.7 Adjusting assembly mountings	58
<b>3 Engine cover panel</b>	<b>61</b>
3.1 Removing and installing engine cover	61
<b>13 - Crankshaft group</b>	<b>62</b>
<b>1 Cylinder block (pulley end)</b>	<b>62</b>
1.1 Assembly overview - cylinder block (pulley end)	62
1.2 Removing and installing poly-V belt	64
1.3 Removing and installing tensioner for poly V-belt	66
1.4 Removing and installing vibration damper	67
1.5 Removing and installing engine support	67
1.6 Removing and installing bracket for ancillaries	69
1.7 Assembly overview - sealing flange, belt pulley end	71
1.8 Removing and installing sealing flange on pulley end	72
<b>2 Cylinder block, gearbox end</b>	<b>75</b>
2.1 Assembly overview - cylinder block, gearbox end	75
2.2 Removing and installing flywheel	76
2.3 Removing and installing sealing flange on gearbox side	78
<b>3 Crankshaft</b>	<b>99</b>
3.1 Assembly overview - crankshaft	99



3.2	Crankshaft dimensions	101
3.3	Renewing needle bearing in crankshaft	101
3.4	Measuring axial clearance of crankshaft	104
<b>4</b>	<b>Pistons and conrods</b>	<b>106</b>
4.1	Assembly overview - pistons and conrods	106
4.2	Removing and installing pistons	110
4.3	Measuring piston projection at TDC	111
4.4	Checking pistons and cylinder bores	114
4.5	Checking radial clearance of conrods	116
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>117</b>
<b>1</b>	<b>Cylinder head</b>	<b>117</b>
1.1	Assembly overview - cylinder head	117
1.2	Assembly overview - cylinder head cover	121
1.3	Removing and installing cylinder head	123
1.4	Removing and installing cylinder head cover	134
1.5	Removing and installing injector seals	135
1.6	Removing and installing camshaft housing	136
1.7	Checking compression	142
<b>2</b>	<b>Toothed belt drive</b>	<b>145</b>
2.1	Assembly overview - toothed belt cover	145
2.2	Assembly overview - toothed belt	145
2.3	Removing and installing toothed belt guard	147
2.4	Removing and installing toothed belt	155
2.5	Removing toothed belt from camshaft	168
<b>3</b>	<b>Valve gear</b>	<b>174</b>
3.1	Assembly overview - valve gear	174
3.2	Measuring axial play of camshaft	177
3.3	Removing and installing camshaft oil seal	178
3.4	Removing and installing camshaft adjuster	180
3.5	Removing and installing camshaft control valve 1 N205	184
3.6	Checking hydraulic compensation elements	185
3.7	Removing and installing valve stem seals	186
3.8	Removing and installing control valve for the camshaft adjuster	195
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>199</b>
4.1	Checking valve guides	199
4.2	Checking valves	200
4.3	Valve dimensions	200
<b>17</b>	<b>- Lubrication</b>	<b>201</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>201</b>
1.1	Assembly overview - sump/oil pump	201
1.2	Engine oil:	207
1.3	Removing and installing sump	207
1.4	Removing and installing lower part of sump	211
1.5	Removing and installing upper part of sump	216
1.6	Removing and installing oil pump	219
1.7	Removing and installing oil level and oil temperature sender G266	220
<b>2</b>	<b>Engine oil cooler</b>	<b>223</b>
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>224</b>
3.1	Assembly overview - oil filter housing, oil pressure switch	224
3.2	Removing and installing oil pressure switch F1	226
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	228
3.4	Checking oil pressure	230
3.5	Removing and installing oil filter housing	230



3.6	Removing and installing oil pressure regulating valve N428	233
<b>4</b>	<b>Oil circuit</b>	<b>235</b>
4.1	Removing and installing oil supply line	235
4.2	Removing and installing oil return line for turbocharger	236
<b>19</b>	<b>Cooling</b>	<b>238</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>238</b>
1.1	Connection diagram - coolant hoses	238
1.2	Checking cooling system for leaks	249
1.3	Draining coolant	253
1.4	Filling with coolant	256
1.5	Checking filling quality of cooling system	268
1.6	Checking electric vacuum pump VAS 6096/2	271
1.7	Flushing cooling system	272
1.8	Flushing cooling system, quick reference guide	294
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>296</b>
2.1	Assembly overview - coolant pump, thermostat	296
2.2	Assembly overview - electric coolant pump	300
2.3	Assembly overview - coolant temperature sender	306
2.4	Removing and installing electric coolant pump	307
2.5	Removing and installing coolant pump	325
2.6	Removing and installing thermostat	326
2.7	Checking thermostat	330
2.8	Removing and installing coolant valve for cylinder head N489	330
2.9	Removing and installing coolant temperature sender G62	331
2.10	Removing and installing radiator outlet coolant temperature sender G83	332
<b>3</b>	<b>Coolant pipes</b>	<b>334</b>
3.1	Assembly overview - coolant pipes	334
3.2	Removing and installing coolant pipes	336
<b>4</b>	<b>Radiator, radiator fan</b>	<b>354</b>
4.1	Assembly overview - radiator/radiator fan	354
4.2	Assembly overview - radiator cowl and radiator fan	360
4.3	Assembly overview - radiator blind	362
4.4	Removing and installing radiator	365
4.5	Removing and installing water radiator for charge air cooling circuit	372
4.6	Removing and installing radiator cowl	376
4.7	Removing and installing radiator fan	379
4.8	Removing and installing radiator blind	380
4.9	Removing and installing radiator blind control motor V544	383
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>389</b>
<b>1</b>	<b>Turbocharger</b>	<b>389</b>
1.1	Assembly overview - turbocharger	389
1.2	Removing and installing turbocharger	397
1.3	Renewing vacuum unit for turbocharger	416
1.4	Removing and installing connection for turbocharger	425
<b>2</b>	<b>Charge air system</b>	<b>427</b>
2.1	Assembly overview - charge air system	427
2.2	Removing and installing charge pressure sender G31	430
2.3	Checking charge air system for leaks	430
2.4	Removing and installing air pipe	433
2.5	Checking charge air cooler for leaks	435
<b>23</b>	<b>Mixture preparation - injection</b>	<b>441</b>
<b>1</b>	<b>Injection system</b>	<b>441</b>



1.1	Schematic overview - fuel system	441
1.2	Overview of fitting locations - injection system	444
1.3	Filling/bleeding fuel system	458
1.4	Checking fuel system for leaks	459
<b>2</b>	<b>Vacuum system</b>	<b>460</b>
2.1	Connection diagram - vacuum system	460
2.2	Checking vacuum system	461
<b>3</b>	<b>Injectors/high-pressure accumulator (rail)</b>	<b>462</b>
3.1	Assembly overview - injectors	462
3.2	Assembly overview - fuel rail	464
3.3	Adapting correction values for injectors	465
3.4	Testing injectors	466
3.5	Checking return flow rate of injectors with engine running	467
3.6	Checking return flow rate of injectors at starter speed	473
3.7	Testing jammed-open injectors	478
3.8	Removing and installing injectors	480
3.9	Removing and installing high-pressure lines	486
3.10	Removing and installing fuel rail	489
<b>4</b>	<b>Air filter</b>	<b>494</b>
4.1	Assembly overview - air filter housing	494
4.2	Removing and installing air filter housing	496
<b>5</b>	<b>Intake manifold</b>	<b>499</b>
5.1	Assembly overview - intake manifold	499
5.2	Removing and installing intake manifold	503
5.3	Removing and installing throttle valve module J338	507
<b>6</b>	<b>Senders and sensors</b>	<b>511</b>
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Golf GTD	511
6.2	Removing and installing fuel pressure regulating valve N276	513
6.3	Checking fuel pressure regulating valve N276	520
6.4	Removing and installing fuel pressure sender G247	522
6.5	Removing and installing air mass meter G70	523
6.6	Removing and installing pressure differential sender G505	525
6.7	Removing and installing exhaust gas pressure sensor 1 G450	530
6.8	Removing and installing NOx sender 2 G687	531
6.9	Removing and installing charge air temperature sender ahead of charge air cooler G810	533
6.10	Removing and installing charge air temperature sender after charge air cooler G811	533
6.11	Removing and installing fuel temperature sender G81	534
6.12	Removing and installing control unit for NOx sender GX30	535
6.13	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	544
<b>7</b>	<b>Engine control unit</b>	<b>546</b>
7.1	Removing and installing engine control unit J623	546
7.2	Removing and installing engine control unit J623 (with protective housing)	547
<b>8</b>	<b>High-pressure pump</b>	<b>554</b>
8.1	Assembly overview - high-pressure pump	554
8.2	Removing and installing high-pressure pump	555
<b>9</b>	<b>Lambda probe</b>	<b>559</b>
9.1	Assembly overview - Lambda probe	559
9.2	Removing and installing Lambda probe	562
<b>26</b>	<b>Exhaust system</b>	<b>566</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>566</b>
1.1	Assembly overview - silencers	566
1.2	Aligning exhaust system free of stress	575



1.3	Removing and installing front exhaust pipe	576
1.4	Separating exhaust pipes from silencers	577
1.5	Removing and installing rear silencer	581
1.6	Removing and installing silencer	582
1.7	Checking exhaust system for leaks	586
1.8	Assembly overview - front exhaust pipe	586
1.9	Installation position of clamp	590
1.10	Align end exhaust pipes	591
<b>2</b>	<b>Emission control</b>	<b>592</b>
2.1	Assembly overview - emission control	592
2.2	Removing and installing catalytic converter	597
2.3	Removing and installing particulate filter	600
2.4	Removing and installing emission control module	600
2.5	Removing and installing exhaust flap control unit J883	610
<b>3</b>	<b>SCR system (selective catalytic reduction)</b>	<b>613</b>
3.1	Assembly overview - tank for reducing agent	613
3.2	Assembly overview - reducing agent supply line	623
3.3	Assembly overview – filler tube for reducing agent tank	625
3.4	Assembly overview - delivery module for reducing agent	628
3.5	Removing and installing reducing agent tank	629
3.6	Removing and installing front section of reducing agent supply line	646
3.7	Removing and installing delivery module for reducing agent	653
3.8	Removing and installing injector for reduction agent N474	655
3.9	Removing and installing control unit for reducing-agent heater J891	658
3.10	Assembly overview – injector for reducing agent N474	668
3.11	Draining reducing agent tank	670
3.12	Removing and installing rear section of reducing agent supply line	673
3.13	Removing and installing filler pipe for reducing agent tank	683
3.14	Disconnecting reducing agent supply line	694
3.15	SCR - resetting learnt values	699
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>700</b>
4.1	Assembly overview - exhaust gas temperature regulation	700
4.2	Removing and installing exhaust gas temperature sender 1 G235	704
4.3	Removing and installing exhaust gas temperature sender 2 G448	707
4.4	Removing and installing exhaust gas temperature sender 3 G495	713
4.5	Removing and installing exhaust gas temperature sender 4 G648	717
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>722</b>
5.1	Assembly overview - exhaust gas recirculation	722
5.2	Assembly overview - exhaust gas recirculation valve 1 GX5	726
5.3	Removing and installing exhaust gas recirculation cooler	727
5.4	Removing and installing exhaust gas recirculation valve 1 GX5	734
5.5	Removing and installing exhaust gas recirculation valve 2 GX6	736
5.6	Removing and installing exhaust gas recirculation temperature sensor G98	737
5.7	Checking exhaust gas recirculation cooler for leaks	740
<b>28</b>	<b>Glow plug system</b>	<b>742</b>
<b>1</b>	<b>Glow plug system</b>	<b>742</b>
1.1	Assembly overview - glow plug system	742
1.2	Removing and installing glow plug	744
1.3	Removing and installing automatic glow period control unit J179	747
1.4	Removing and installing Hall sender G40	747
1.5	Removing and installing engine speed sender G28	748