



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety regulations for working on fuel supply .....	1
1.2 Safety measures when working on vehicles with a start/stop system .....	2
1.3 Safety precautions when using testers and measuring instruments during a road test .....	2
1.4 Safety precautions when working on SCR system .....	2
<b>2 Identification</b> .....	<b>4</b>
2.1 Engine number/engine data .....	4
<b>3 General information</b> .....	<b>5</b>
3.1 Rules for cleanliness when working on auxiliary heater and fuel system .....	5
<b>4 Repair instructions</b> .....	<b>6</b>
4.1 General repair instructions .....	6
4.2 Routing and attachment of lines .....	6
<b>20 - Fuel supply system</b> .....	<b>7</b>
<b>1 Procedure in event of misfuelling</b> .....	<b>7</b>
1.1 Procedure in event of misfuelling .....	7
<b>2 Fuel</b> .....	<b>16</b>
2.1 Assembly overview - fuel tank .....	16
2.2 Emptying fuel tank .....	18
2.3 Removing and installing fuel tank .....	24
2.4 Removing and installing misfuelling prevention device .....	33
2.5 Deactivating misfuelling prevention device .....	38
<b>3 Fuel delivery unit, fuel gauge sender</b> .....	<b>39</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender .....	39
3.2 Removing and installing fuel delivery unit, fuel gauge sender .....	42
3.3 Removing and installing fuel gauge sender G .....	50
<b>4 Plug-in connectors</b> .....	<b>52</b>
4.1 Separating plug-in connectors .....	52
<b>5 Fuel filter</b> .....	<b>58</b>
5.1 Assembly overview – fuel filter .....	58
5.2 Removing and installing fuel filter .....	61
5.3 Fuel hoses in the engine compartment .....	65
<b>6 Accelerator pedal</b> .....	<b>67</b>
6.1 Assembly overview - accelerator module .....	67
6.2 Removing and installing accelerator pedal module GX2 .....	67
<b>7 Fuel supply</b> .....	<b>69</b>
7.1 Checking fuel system pressurisation pump G6 .....	69
7.2 Removing and installing fuel pump control unit J538 .....	86