

001 - Basic equipment	1-20
1. Basic equipment	1
2. Treble horn, Bass horn, Horn relay, Fuse holder B, Fuse holder C	2
3. Heated rear window relay, Fuse holder C	3
4. Reversing light switch, Ambient temperature sensor, Onboard supply control unit	4
5. Brake fluid level warning contact, Coolant shortage indicator sender, Onboard supply control unit, Left fog light bulb, Front left headlight	5
6. Onboard supply control unit, Front right headlight	6
7. Rotary light switch, Bonnet contact switch, Onboard supply control unit, Engine/motor control unit, Right fog light bulb	7
8. Rotary light switch, Headlight range control regulator, Onboard supply control unit	8
9. Hazard warning light switch, Glove compartment light switch, Onboard supply control unit, Glove compartment light	9
10. Onboard supply control unit, Front interior light, Rear interior light, Rear centre reading light	10
11. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Selector lever, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	11
12. Turn signal switch, Cruise control system switch, Cruise control system (CCS) SET button, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side	12
13. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	13
14. Heater and air conditioning controls, Fresh air blower control unit, Onboard supply control unit, Fresh air blower, Air recirculation flap control motor	14
15. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Onboard supply control unit, Left tail light cluster, Temperature flap control motor, Air distribution flap control motor	15
16. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2, Left number plate light, Right number plate light	16
17. Tank flap release, Onboard supply control unit, Right tail light cluster, High-level brake light bulb, Luggage compartment light	17
18. Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit, Heated rear window	18
19. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	19
20. Dash panel insert	20
002 - Convenience system, left-hand drive , (L0L)	21-49
1. Convenience system, left-hand drive , (L0L)	21
2. Fuse holder C	22
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	23
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	24
5. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	25
6. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light 1 for front left door background lighting, Light 2 for front left door background lighting, Light for driver side interior door handle illumination, Left window regulator motor, Driver side door warning lamp	26
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	27
8. Driver door control unit, Front passenger door control unit	28
9. Front passenger door control unit, Front passenger door lock unit	29
10. Window regulator switch in front passenger door, Front passenger door control unit, Light 1 for front right door background lighting, Light 2 for front right door background lighting, Light for passenger side interior door handle illumination, Right window regulator motor, Front passenger side door warning lamp	30
11. Front passenger door control unit, Passenger side exterior mirror, Front passenger side fold-in mirror motor	31
12. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	32
13. Rear left door control unit, Rear left door lock unit, Rear left window regulator motor	33
14. Rear left window regulator switch, in door, Rear left door control unit	34
15. Rear left door control unit. Rear left door lock unit	35

16. Rear right door contact switch, Rear right door control unit, Rear right door lock unit, Rear right window regulator motor	36
17. Rear right window regulator switch, in door, Rear right door control unit, Rear right window regulator motor	37
18. Rear right door contact switch, Rear right door control unit, Rear right door lock unit	38
19. Interior mirror, Rain and light sensor, Data bus diagnostic interface	39
20. Front left footwell light, Front right footwell light, Front interior light, Luggage compartment light	40
21. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light, Interior light	41
22. Rear lid handle release button, Rear lid lock unit, Luggage compartment light 2	42
23. Rear lid control unit, Motor 1 for rear lid	43
24. Rear lid control unit, Motor 2 for rear lid	44
25. Rear lid closure button, Anti-trapping sender 3, Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	45
26. Anti-trapping sender, Rear lid power opening sender, Anti-trapping sender 2, Rear lid power opening sender 2, Rear lid control unit, Rear lid power opening control unit, Interface for entry and start system	46
27. Onboard supply control unit	47
28. Onboard supply control unit	48
29. Centre switch module in dash panel, Onboard supply control unit	49
003 - Convenience system, right-hand drive , (LOR)	50-77
1. Convenience system, right-hand drive , (LOR)	50
2. Fuse holder C	51
3. Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor	52
4. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Right window regulator motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	53
5. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit	54
6. Exterior mirror adjuster, Driver door control unit, Central locking SAFELOCK function warning lamp, Light 1 for front right door background lighting, Light 2 for front right door background lighting, Light for driver side interior door handle illumination	55
7. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	56
8. Driver door control unit, Front passenger door control unit	57
9. Front passenger door control unit, Front passenger door lock unit	58
10. Window regulator switch in front passenger door, Front passenger door control unit, Light 1 for front left door background lighting, Light 2 for front left door background lighting, Light for passenger side interior door handle illumination, Left window regulator motor	59
11. Front passenger door control unit, Passenger side exterior mirror, Front passenger side fold-in mirror motor	60
12. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	61
13. Rear left door control unit, Rear left door lock unit, Rear left window regulator motor	62
14. Rear left window regulator switch, in door, Rear left door control unit, Rear left window regulator motor	63
15. Rear left door control unit, Rear left door lock unit	64
16. Rear right door contact switch, Rear right door control unit, Rear right door lock unit, Rear right window regulator motor	65
17. Rear right window regulator switch, in door, Rear right door control unit, Rear right window regulator motor	66
18. Rear right door control unit, Rear right door lock unit	67
19. Interior mirror, Rain and light sensor, Data bus diagnostic interface	68
20. Front left footwell light, Front right footwell light, Front interior light, Luggage compartment light	69
21. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light, Interior light	70
22. Rear lid handle release button, Rear lid lock unit, Luggage compartment light 2	71
23. Rear lid control unit, Motor 1 for rear lid	72
24. Rear lid control unit. Motor 2 for rear lid	73

25. Rear lid closure button, Anti-trapping sender 3, Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid	74
26. Anti-trapping sender, Rear lid power opening sender, Anti-trapping sender 2, Rear lid power opening sender 2, Rear lid control unit, Rear lid power opening control unit, Interface for entry and start system	75
27. Onboard supply control unit	76
28. Centre switch module in dash panel, Onboard supply control unit	77
004 - Fuse assignment	78-118
1. Fuse assignment	78
2. Fuse holder A	79
3. Fuse holder B	80
4. Starter relay 1, Starter relay 2, Fuse holder B	81
5. High heat output relay, Horn relay, Fuse holder B	82
6. Main relay, Terminal 30 voltage supply relay, Fuse holder B	83
7. Fuse holder B	84
8. Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Control unit for NOx sender 2, Fuse holder B	85
9. Fuse holder B	86
10. Heated windscreen relay, Heated windscreen relay 2, Fuse holder B	87
11. Automatic glow period control unit, Low heat output relay, Fuse holder B	88
12. Engine/motor control unit, Engine component power supply relay, Fuse holder B	89
13. Engine/motor control unit	90
14. Coupling point in engine compartment, left	91
15. Coupling point in engine compartment, left	92
16. Actuator for engine temperature regulation, Coupling point in engine compartment, left	93
17. Coolant regulating valve, Coupling point in engine compartment, left	94
18.	95
19. Onboard supply control unit	96
20. Fuse holder C	97
21. Fuse holder C	98
22. Fuse holder C	99
23. Fuse holder C	100
24. Fuse holder C	101
25. Heated rear window relay, Fuse holder C	102
26. Relay for power sockets, Fuse holder C	103
27. Terminal 15 voltage supply relay, Fuse holder C	104
28. Fuse holder C	105
29. Fuse holder C	106
30. Chip card reader control unit, Fuse holder C	107
31. Fuse holder C, USB connection 1	108
32. Relay for reducing agent metering system, Fuse holder C, Vacuum pump for brakes	109
33. Digital sound package control unit, Fuse holder C	110
34. Fuse holder C	111
35. Emergency call module control unit and communication unit, Fuse holder C	112
36. Fuse holder C	113
37. Air conditioner compressor regulating valve, Fuse holder C, Fuse holder H	114
38. Fuse holder H	115
39. Fuse holder H	116
40. Front passenger seat adjustment thermal fuse 1	117
41. Voltage stabiliser	118
005 - Earthing concept	119-143
1. Earthing concept	119
2. Earth point, on left in engine compartment, Earth connection (engine earth), in engine wiring harness, Earth connection (ignition coils), in engine prewiring harness, Earth point, engine and gearbox earth, Earth point 2, on front of left longitudinal member	120
3. Earth point, on cylinder head, Earth connection 1, in engine compartment wiring harness, Earth connection 4, in engine compartment wiring harness, Earth connection (engine earth), in engine wiring harness, Earth connection (ignition coils), in engine prewiring harness	121
4. Control unit 3 for NOx sender, Earth connection 1, in engine compartment wiring harness, Earth connection 3, in headlight wiring harness, Earth connection 2 in automatic gearbox wiring harness, Earth connection, in left headlight wiring harness, Earth point 3, on front of left longitudinal member	122
5. Particulate sensor, Earth connection 3, in headlight wiring harness, Earth connection, in left headlight wiring harness	123
6. Charge air cooling pump, Auxiliary pump for heating, Earth connection 2, in engine compartment wiring harness. Earth connection. in left headlight wiring harness	124

7. Earth connection, in dual tone horn wiring harness, Earth connection 2, in engine compartment wiring harness, Earth connection 6, in engine compartment wiring harness, Earth point 1, on front of left longitudinal member, Earth point 2, on front of left longitudinal member, Earth point 1, on front of right longitudinal member, Connection (right brake wear indicator), in engine compartment wiring harness	125
8. Earth connection, in dual tone horn wiring harness, Connection 1, in centre console wiring harness	126
9. Earth connection, in dual tone horn wiring harness, Earth connection 3, in engine compartment wiring harness, Earth point, on right headlight, Connection 23 in engine compartment wiring harness	127
10. Earth connection 1 in special vehicle wiring harness, Earth connection 5 in special vehicle wiring harness, Earth connection 6 in special vehicle wiring harness	128
11. Earth point, lower part of left A-pillar, Earth connection 3 in special vehicle wiring harness, Earth connection 4 in special vehicle wiring harness, Earth connection 5 in special vehicle wiring harness	129
12. Earth connection 1, in interior wiring harness, Earth connection 2, in driver side door wiring harness, Earth connection 5, in interior wiring harness, Earth connection 8, in interior wiring harness	130
13. Earth connection 1, in interior wiring harness, Earth connection 3, in interior wiring harness, Earth connection (HRC), in dash panel wiring harness	131
14. Earth connection 3, in interior wiring harness, Earth connection, in roof wiring harness	132
15. Earth connection 1, in dash panel wiring harness, Earth connection 1, in seat adjustment wiring harness, Earth connection, in rear left door wiring harness, Earth connection, in roof wiring harness, Earth point on mounting for seat cross member (front left), Connection 2, in driver seat wiring harness	133
16. USB charging socket 1, Earth connection 1, in dash panel wiring harness, Earth connection 4, in interior wiring harness	134
17. Earth connection 1, in front left wiring harness, Earth connection 1, in radio wiring harness, Earth connection 2, in radio wiring harness, Earth connection 4, in interior wiring harness, Earth point on front of right side member, Earth point on central tube for dash panel, centre left, Earth point on central tube for dash panel, centre right, Earth point on heater element for auxiliary air heating, Connection 2, in main wiring harness	135
18. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Storage compartment with interface for mobile telephone, USB hub, USB connection 1, Earth connection 1, in radio wiring harness, Earth connection 2, in radio wiring harness	136
19. Earth point, lower part of right A-pillar, Earth connection 2, in interior wiring harness, Earth connection 2, in front passenger side door wiring harness, Earth connection 2, in roof wiring harness	137
20. Earth connection 1, in dash panel wiring harness, Earth connection 2, in seat adjustment wiring harness, Earth connection, in rear right door wiring harness, Connection 1, in front passenger seat wiring harness	138
21. Earth point, on right C-pillar, Earth connection, in fuel tank wiring harness, Earth point, centre on rear lid, Earth point on mounting for seat cross member (front right)	139
22. Earth connection, in rear lid wiring harness, Earth connection 7, in interior wiring harness	140
23. Earth connection 7, in interior wiring harness, Earth connection 10, in interior wiring harness, Earth connection 3, in rear lid wiring harness	141
24. Earth connection 1, in front wiring harness, Earth connection 5, in rear wiring harness, Earth point, rear right side panel	142
25. Earth connection 5, in rear wiring harness	143
006 - Anti-lock brake system (ABS) , (L0L)	144-151
1. Anti-lock brake system (ABS) , (L0L)	144
2. Fuse holder B, Fuse holder C	145
3. Vacuum sender, ABS control unit	146
4. Front left speed sensor, Clutch position sender, ABS control unit	147
5. Rear right speed sensor, Front right speed sensor, ABS control unit, Left parking brake motor	148
6. Rear left speed sensor, ABS control unit, Onboard supply control unit, Right parking brake motor	149
7. Electromechanical parking brake button	150
8. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Dash panel insert	151
007 - Airbag systems , (L0R)	152-166
1. Airbag systems , (L0R)	152
2. Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag warning lamp, Fuse holder C	153
3. Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side knee airbag igniter	154
4. Airbag control unit. Steering column electronics control unit. Airbag igniter on driver side.	155

Driver side curtain airbag igniter	
5. Side airbag crash sensor on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on front passenger side	156
6. Side airbag crash sensor on driver side, Airbag control unit, Side airbag igniter on driver side, Front passenger side curtain airbag igniter, Diagnostic connection	157
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear side airbag igniter on passenger side	158
8. Airbag control unit, Rear side airbag igniter on driver side	159
9. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	160
10. Crash sensor for front airbag, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	161
11. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	162
12. Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	163
13. Belt switch for seat row 2, driver side, Airbag control unit	164
14. Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Belt switch 2 for seat row 3, driver side, Belt switch 2 for seat row 3, passenger side, Airbag control unit	165
15. Airbag control unit, Data bus diagnostic interface, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	166
008 - Entry and start authorisation , (4F2),(4I3)	167-171
1. Entry and start authorisation , (4F2),(4I3)	167
2. Starter button, Onboard supply control unit, Interface for entry and start system	168
3. Driver exterior door handle, Front passenger exterior door handle, Onboard supply control unit, Interface for entry and start system	169
4. Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	170
5. Rear lid power opening control unit, Interface for entry and start system	171
009 - Window wash/wipe system, headlight washer system	172-174
1. Window wash/wipe system, headlight washer system	172
2. Windscreen washer fluid level sender, Wiper motor control unit, Onboard supply control unit, Fuse holder B, Washer pump, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	173
3. Onboard supply control unit, Fuse holder C, Rear window wiper motor	174
010 - Adaptive cruise control , (6K2),(6K3)	175-177
1. Adaptive cruise control , (6K2),(6K3)	175
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	176
3. Adaptive cruise control unit, Front camera for driver assist systems	177
011 - Anti-theft alarm system , (7AS)	178-180
1. Anti-theft alarm system , (7AS)	178
2. Button for deactivating interior monitoring and vehicle inclination sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Fuse holder C, Front interior light	179
3. Anti-theft alarm sensor, Onboard supply control unit	180
012 - 12 V sockets	181-182
1. 12 V sockets	181
2. Onboard supply control unit, Fuse holder C, Cigarette lighter, 12 V socket, 12 V socket 2, 12 V socket 3	182
013 - Dual clutch gearbox 0D9 , (0ES)	183-188
1. Dual clutch gearbox 0D9 , (0ES)	183
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	184
3. Mechatronic unit for dual clutch gearbox	185
4. Selector lever, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	186
5. Selector lever, Steering column electronics control unit, Selector lever position display	187
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid	188
014 - Dual clutch gearbox 0CW , (0EG)	189-194
1. Dual clutch gearbox 0CW , (0EG)	189
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	190
3. Mechatronic unit for dual clutch gearbox	191
4. Selector lever, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	192
5. Selector lever, Steering column electronics control unit, Selector lever position display	193
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid	194
015 - Front camera for driver assist svstems . (QK1)	195-196

1. Front camera for driver assist systems , (QK1)	195
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	196
016 - Electromechanical steering	197-199
1. Electromechanical steering	197
2. Power steering control unit, Data bus diagnostic interface, Fuse holder A	198
3. Steering moment sender, Power steering control unit	199
017 - Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)	200-205
1. Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)	200
2. Centre switch module in dash panel, Parking aid button, Park assist steering button, Parking aid control unit, Park assist steering control unit, Fuse holder C	201
3. Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface, Park assist steering control unit	202
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front right sender for park assist steering on right side of vehicle, Parking aid control unit, Park assist steering control unit	203
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear left park assist steering sender, Parking aid control unit, Park assist steering control unit	204
6. Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit, Park assist steering control unit	205
018 - Trailer coupling , (1M6)	206-209
1. Trailer coupling , (1M6)	206
2. Trailer detector control unit, Onboard supply control unit, Fuse holder C	207
3. Button for electric swivelling towing bracket, Trailer detector control unit, Towing bracket	208
4. Trailer detector control unit, Data bus diagnostic interface, Trailer socket, Towing bracket	209
019 - Air conditioning system , (KH6)	210-214
1. Air conditioning system , (KH6)	210
2. Heater and air conditioning controls, Fresh air blower control unit, Air conditioning system control unit, Fuse holder C, Fresh air blower	211
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit, Air conditioner compressor regulating valve	212
4. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioning system control unit, Data bus diagnostic interface, Air recirculation flap control motor	213
5. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air distribution flap control motor	214
020 - Climatronic , (KH7)	215-222
1. Climatronic , (KH7)	215
2. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Rear vent temperature sender, Fresh air blower control unit, Fuse holder C, Fresh air blower	216
3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Air conditioner compressor regulating valve	217
4. Heater and air conditioning controls, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Data bus diagnostic interface	218
5. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Left temperature flap control motor, Right temperature flap control motor	219
6. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	220
7. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Potentiometer for rear temperature flap motor, Defroster flap control motor, Rear temperature flap control motor	221
8. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor	222
021 - Radiator fan	223-225
1. Radiator fan	223
2. Radiator fan control unit, Fuse holder A, Fuse holder B, Radiator fan, Radiator fan 2	224
3. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2, Radiator fan, Radiator fan 2	225
022 - Auxiliary coolant heater , (9M9)	226-228
1. Auxiliary coolant heater , (9M9)	226
2. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Data bus diagnostic interface. Heater coolant shut-off valve. Glow plug with flame monitor. Fuse holder B. Metering pump	227

3. Auxiliary heater control unit, Roof aerial, Remote control receiver for auxiliary coolant heater, Fuse holder C, Combustion air blower, Circulation pump	228
023 - Adjustable seat , (3L5),(3PB),(L0L)	229-231
1. Adjustable seat , (3L5),(3PB),(L0L)	229
2. Operating unit for front left seat adjustment, Fuse holder C, Front left seat pan	230
3. Operating unit for front right seat adjustment, Front passenger seat adjustment thermal fuse 1, Front right seat pan	231
024 - Adjustable seat , (8I2),(8I9),(L0L)	232-235
1. Adjustable seat , (8I2),(8I9),(L0L)	232
2. Driver seat lumbar support adjustment switch, Control unit for driver multicontour seat, Lumbar support for driver seat	233
3. Driver seat massage function button, Control unit for front passenger multicontour seat, Control unit for driver multicontour seat, Front passenger seat adjustment thermal fuse 1, Fuse holder C	234
4. Front passenger seat lumbar support adjustment switch, Front passenger seat massage function button, Control unit for front passenger multicontour seat	235
025 - Seat heating , (L0L),(4A3),(4A4)	236-241
1. Seat heating , (L0L),(4A3),(4A4)	236
2. Onboard supply control unit, Fuse holder C, Seat heating (driver side)	237
3. Heated backrest for driver seat, Seat heating (driver side), Seat heating (front passenger side)	238
4. Heater and air conditioning controls, Data bus diagnostic interface, Heated backrest for front passenger seat, Seat heating (front passenger side)	239
5. Operating and display unit for rear air conditioning system	240
6. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	241
026 - Data bus network	242-256
1. Data bus network	242
2. Fuse holder C, Diagnostic connection	243
3. Data bus diagnostic interface, Diagnostic connection	244
4. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Reversing camera, Fuse holder B	245
5. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Pressure sender for refrigerant circuit, Fresh air blower control unit, Electronically controlled damping control unit, Auxiliary heater control unit, Data bus diagnostic interface, Auxiliary air heater control unit, Remote control receiver for auxiliary coolant heater	246
6. ABS control unit, Adaptive cruise control unit, Parking aid control unit, Power steering control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	247
7. Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for cornering light and headlight range control, Front left headlight, Front right headlight, DC/AC converter with socket, 12 V - 230 V	248
8. Selector lever, Control unit for NOx sender, Control unit 2 for NOx sender, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	249
9. Control unit 3 for NOx sender, Particulate sensor, Data bus diagnostic interface	250
10. Interior mirror, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	251
11. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Rear lid power opening control unit, Interface for entry and start system, Front camera for driver assist systems	252
12. Sliding sunroof adjustment control unit, Front passenger door control unit, Rear right door control unit, Data bus diagnostic interface, Rear lid control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Rear right window regulator motor	253
13. Trailer detector control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Emergency call module control unit and communication unit, Dash panel insert	254
14. Driver door control unit, Rear left door control unit, Steering column electronics control unit, Data bus diagnostic interface, Rear left window regulator motor	255
15. Rain and light sensor, Anti-theft alarm sensor, Alarm horn, Wiper motor control unit, Onboard supply control unit	256
027 - Sliding/tilting sunroof , (3FJ),(3FU)	257-261
1. Sliding/tilting sunroof , (3FJ),(3FU)	257
2. Sliding sunroof adjustment control unit	258
3. Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting	259
4. Sunroof button, Sliding sunroof adjustment control unit	260
5. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	261
028 - Radio navigation system	262-273
1. Radio navigation system	262

2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C, Fuse holder H	263
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone microphone	264
4. Control unit 1 for information electronics, USB hub, Coupling point in interior	265
5. Control unit 1 for information electronics, Connection for external audio sources, USB hub, USB connection 2	266
6. Control unit 1 for information electronics, USB connection 1	267
7. Control unit 1 for information electronics, CD player, USB charging socket 1	268
8. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	269
9. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	270
10. Control unit 1 for information electronics, Radio aerial 2, Left aerial module, Digital radio aerial, Radio aerial	271
11. Control unit 1 for information electronics, Roof aerial, Amplitude modulation (AM) frequency filter, LTE aerial 1	272
12. Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Heated rear window	273
029 - Reversing camera (Rear Assist) , (KA2)	274-275
1. Reversing camera (Rear Assist) , (KA2)	274
2. Data bus diagnostic interface, Control unit 1 for information electronics, Reversing camera, Fuse holder C	275
030 - Mobile telephone systems , (9ZE)	276-278
1. Mobile telephone systems , (9ZE)	276
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, Storage compartment with interface for mobile telephone, Fuse holder C	277
3. Two-way signal amplifier for mobile telephone/data services, Roof aerial	278
031 - Airbag systems , (L0L)	279-290
1. Airbag systems , (L0L)	279
2. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag warning lamp, Fuse holder C	280
3. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Driver side knee airbag igniter	281
4. Driver side belt switch, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	282
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Front passenger side curtain airbag igniter	283
6. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	284
7. Airbag control unit, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	285
8. Crash sensor for front airbag, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Trigger 2 for pedestrian protection, Airbag control unit	286
9. Front passenger side crash sensor for pedestrian protection, Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	287
10. Driver side crash sensor for pedestrian protection, Front pressure hose sensor for pedestrian protection, Airbag control unit	288
11. Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Belt switch for seat row 3, passenger side, Airbag control unit, Data bus diagnostic interface, Diagnostic connection	289
12. Belt switch for seat row 3, driver side, Belt switch 2 for seat row 3, driver side, Belt switch 2 for seat row 3, passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	290
032 - Anti-lock brake system (ABS) , (L0R)	291-298
1. Anti-lock brake system (ABS) , (L0R)	291
2. Fuse holder B, Fuse holder C	292
3. ABS control unit	293
4. Clutch position sender, ABS control unit, Right parking brake motor	294
5. Front right speed sensor, Front left speed sensor, Vacuum sender, ABS control unit, Left parking brake motor	295
6. Rear right speed sensor, Rear left speed sensor, ABS control unit	296
7. Electromechanical parking brake button	297
8. Front right brake pad wear sender. Tyre Pressure Monitoring System control unit. Onboard supply	298



control unit, Data bus diagnostic interface, Dash panel insert	
033 - Multifunction steering wheel	299-301
1. Multifunction steering wheel	299
2. Selector lever, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Fuse holder C	300
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit, Steering column electronics control unit, Engine/motor control unit	301
034 - 1.2l petrol engine , CYVB	302-316
1. 1.2l petrol engine , CYVB	302
2. Battery, Starter, Alternator with voltage regulator, Starter relay 1, Starter relay 2, Fuse holder B	303
3. Main relay, Fuse holder B	304
4. Centre switch module in dash panel, Onboard supply control unit, Engine/motor control unit	305
5. Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	306
6. Brake light switch, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit	307
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit	308
8. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	309
9. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	310
10. Engine speed sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	311
11. Intake manifold sender, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	312
12. Oil pressure switch for reduced oil pressure, Throttle valve module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	313
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Charge air cooling pump	314
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	315
15. Fuel delivery unit, Fuel pump control unit, Dash panel insert	316
035 - 1.4l petrol engine , CZDA	317-335
1. 1.4l petrol engine , CZDA	317
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder B	318
3. Fuse holder B	319
4. Centre switch module in dash panel, Onboard supply control unit, Fuse holder C	320
5. Engine/motor control unit	321
6. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	322
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	323
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit, Vacuum pump for brakes	324
9. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	325
10. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	326
11. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	327
12. Charge pressure sender, Engine speed sender, Engine/motor control unit	328
13. Intake manifold sender, Fuel pressure sender, Engine/motor control unit	329
14. Hall sender, Hall sender 3, Engine/motor control unit	330
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Throttle valve module, Engine/motor control unit	331
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	332
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	333
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	334

19. Fuel delivery unit, Fuel pump control unit, Dash panel insert	335
036 - 1.6l diesel engine , CRKB,DGDA	336-360
1. 1.6l diesel engine , CRKB,DGDA	336
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B	337
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	338
4. Automatic glow period control unit, Fuse holder B	339
5. Low heat output relay, Relay for power sockets, Relay for reducing agent metering system, Fuse holder B, Fuse holder C	340
6. Centre switch module in dash panel, Onboard supply control unit, Auxiliary air heater control unit, Engine/motor control unit	341
7. Engine/motor control unit	342
8. Air mass meter, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit, Heater element for crankcase breather	343
9. Water separator sender, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	344
10. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	345
11. Delivery unit for reducing agent metering system, Oil level and oil temperature sender, Engine/motor control unit, Radiator fan, Auxiliary pump for heating	346
12. Alternator with voltage regulator, Brake light switch, Engine/motor control unit, Charge air cooling pump	347
13. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Engine/motor control unit, Injector for reducing agent	348
14. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	349
15. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system	350
16. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	351
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	352
18. Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	353
19. Hall sender, Fuel temperature sender, Exhaust gas temperature sender 1, Position sender for charge pressure positioner, Engine/motor control unit	354
20. Throttle valve module, Exhaust gas pressure sensor 1, Engine/motor control unit	355
21. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	356
22. Engine speed sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	357
23. Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	358
24. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	359
25. Fuel delivery unit, Fuel pump control unit, Dash panel insert	360
037 - 2.0l diesel engine , DFEA,DFEB,DFGA,DFGB,DFGC,DFHA	361-388
1. 2.0l diesel engine , DFEA,DFEB,DFGA,DFGB,DFGC,DFHA	361
2. Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B	362
3. Battery, Starter, Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	363
4. Automatic glow period control unit, Fuse holder B	364
5. Automatic glow period control unit, Low heat output relay, Fuse holder B	365
6. Relay for power sockets, Relay for reducing agent metering system, Fuse holder C	366
7. Centre switch module in dash panel, Onboard supply control unit, Auxiliary air heater control unit	367
8. Engine/motor control unit	368
9. Air mass meter, Engine/motor control unit, Heater element for crankcase breather	369
10. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	370
11. Engine/motor control unit, Exhaust flap control unit, Control unit for reducing agent heater	371
12. Delivery unit for reducing agent metering system, Engine/motor control unit, Radiator fan	372
13. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	373
14. Brake light switch, Lambda probe 1 before catalytic converter, Engine/motor control unit	374
15. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit, Injector for reducing agent	375

16. Accelerator pedal module, Data bus diagnostic interface, Engine/motor control unit	376
17. Exhaust gas temperature sender 2, Clutch position sender, Exhaust gas temperature sender 3, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	377
18. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	378
19. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2	379
20. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 4	380
21. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	381
22. Hall sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	382
23. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	383
24. Throttle valve module, Engine speed sender, Fuel pressure sender, Engine/motor control unit	384
25. Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit	385
26. Charge pressure sender, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	386
27. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	387
28. Fuel delivery unit, Fuel pump control unit, Dash panel insert	388
038 - Heated windscreen , (4GX)	389-390
1. Heated windscreen , (4GX)	389
2. Heated windscreen relay, Onboard supply control unit, Heated windscreen relay 2, Fuse holder B, Heated windscreen	390
039 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	391-393
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	391
2. Selector lever, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Fuse holder C	392
3. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Heated steering wheel	393
040 - Lane departure warning , (79B),(79D),(7Y1),(7Y5)	394-396
1. Lane departure warning , (79B),(79D),(7Y1),(7Y5)	394
2. Data bus diagnostic interface, Lane change assist control unit 2, Lane change assist warning lamp in left exterior mirror, Fuse holder C, Left exterior mirror	395
3. Lane change assist control unit, Lane change assist warning lamp in right exterior mirror, Right exterior mirror	396
041 - LED headlights , (8IT)	397-401
1. LED headlights , (8IT)	397
2. Onboard supply control unit, Control unit for cornering light and headlight range control, Front left headlight	398
3. Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Fuse holder C	399
4. Front left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	400
5. Onboard supply control unit, Front right headlight	401
042 - DC/AC converter with socket , (9Z3)	402-403
1. DC/AC converter with socket , (9Z3)	402
2. Data bus diagnostic interface, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	403
043 - LED headlights , (8IU)	404-408
1. LED headlights , (8IU)	404
2. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Front left headlight, Fuse holder C	405
3. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight, Front left headlight, Front right headlight	406
4. Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	407
5. Front left vehicle level sender, Control unit for cornering light and headlight range control	408
044 - Electrically adjustable backrest and lumbar support , (7P1),(7P7),(L0L)	409-412
1. Electrically adjustable backrest and lumbar support , (7P1),(7P7),(L0L)	409
2. Operating unit for front left seat adjustment, Front left lumbar support adjustment switch, Fuse holder C, Lumbar support for driver seat, Front left backrest adjustment motor	410
3. Operating unit for front right seat adjustment, Front left lumbar support adjustment switch, Front right lumbar support adjustment switch, Front passenger seat adjustment thermal fuse 1, Lumbar support for front passenger seat. Front right backrest adjustment motor	411

4. Front right lumbar support adjustment switch, Lumbar support for front passenger seat	412
045 - Adaptive chassis control DCC , (2H4)	413-417
1. Adaptive chassis control DCC , (2H4)	413
2. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Fuse holder C	414
3. Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	415
4. Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit	416
5. Centre switch module in dash panel, Electronically controlled damping control unit, Onboard supply control unit, Rear right shock absorber damping adjustment valve	417
046 - Tail light cluster with LED , (8SK)	418-420
1. Tail light cluster with LED , (8SK)	418
2. Onboard supply control unit, Left tail light, Left tail light 2, Right tail light 2	419
3. Onboard supply control unit, Right tail light	420
047 - TV tuner, card reader unit (Japan) , (ER5)	421-426
1. TV tuner, card reader unit (Japan) , (ER5)	421
2. TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV, Fuse holder C	422
3. Control unit 1 for information electronics, TV tuner, Aerial amplifier 1 for TV	423
4. Digital sound package control unit, Chip card reader control unit, Control unit 1 for information electronics	424
5. Chip card reader control unit, Control unit 1 for information electronics, USB hub	425
6. Toll collection sender, Chip card reader control unit, Traffic data aerial	426
048 - Reversing camera (Rear Assist) , (KA1)	427-428
1. Reversing camera (Rear Assist) , (KA1)	427
2. Onboard supply control unit, Control unit 1 for information electronics, Reversing camera, Fuse holder C	428
049 - 1.8l petrol engine , CJSA	429-448
1. 1.8l petrol engine , CJSA	429
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	430
3. Main relay, Fuse holder B	431
4. Centre switch module in dash panel, Start/Stop operation button, Onboard supply control unit, Engine component current supply relay, Fuse holder B, Fuse holder C	432
5. Data bus diagnostic interface, Engine/motor control unit	433
6. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	434
7. Oil level and oil temperature sender, ABS control unit, Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	435
8. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	436
9. Alternator with voltage regulator, Accelerator pedal module, Charge pressure sender, Engine/motor control unit, Radiator fan	437
10. Engine/motor control unit, Coolant shut-off valve	438
11. Intake manifold sender, Engine speed sender, Engine/motor control unit, Actuator for engine temperature regulation	439
12. Throttle valve module, Knock sensor 1, Engine/motor control unit, Charge pressure positioner	440
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	441
14. Engine/motor control unit, Fuel pressure regulating valve, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder , Exhaust cam actuator B for cylinder 3	442
15. Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	443
16. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	444
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	445
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	446
19. Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4	447
20. Stage 3 oil pressure switch, Fuel delivery unit, Hall sender, Fuel pump control unit, Engine/motor control unit. Dash panel insert	448

050 - Adjustable seat , (3L5),(3PE),(L0R)	449-451
1. Adjustable seat , (3L5),(3PE),(L0R)	449
2. Operating unit for front left seat adjustment, Front passenger seat adjustment thermal fuse 1, Front left seat pan	450
3. Operating unit for front right seat adjustment, Fuse holder C, Front right seat pan	451
051 - Adjustable seat , (8I3),(8I9),(L0R)	452-455
1. Adjustable seat , (8I3),(8I9),(L0R)	452
2. Front passenger seat lumbar support adjustment switch, Control unit for front passenger multicontour seat, Lumbar support for front passenger seat	453
3. Front passenger seat massage function button, Control unit for front passenger multicontour seat, Control unit for driver multicontour seat, Fuse holder C, Front passenger seat adjustment thermal fuse 1	454
4. Driver seat lumbar support adjustment switch, Driver seat massage function button, Control unit for driver multicontour seat, Lumbar support for driver seat	455
052 - Seat heating , (4A3),(4A4),(L0R)	456-461
1. Seat heating , (4A3),(4A4),(L0R)	456
2. Onboard supply control unit, Fuse holder C, Seat heating (front passenger side)	457
3. Heated backrest for front passenger seat, Seat heating (front passenger side)	458
4. Heated backrest for driver seat, Seat heating (driver side)	459
5. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Data bus diagnostic interface	460
6. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	461
053 - Electrically adjustable backrest and lumbar support , (7P1),(7P8),(L0R)	462-465
1. Electrically adjustable backrest and lumbar support , (7P1),(7P8),(L0R)	462
2. Operating unit for front left seat adjustment, Front left lumbar support adjustment switch, Front passenger seat adjustment thermal fuse 1, Lumbar support for front passenger seat, Front left backrest adjustment motor	463
3. Operating unit for front right seat adjustment, Front left lumbar support adjustment switch, Front right lumbar support adjustment switch, Fuse holder C, Lumbar support for driver seat, Front right backrest adjustment motor	464
4. Front right lumbar support adjustment switch, Lumbar support for driver seat	465
054 - 2.0l diesel engine , CRVA,CYKB	466-486
1. 2.0l diesel engine , CRVA,CYKB	466
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B	467
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	468
4. Automatic glow period control unit, Fuse holder B	469
5. Low heat output relay, Onboard supply control unit, Fuse holder B, Fuse holder C	470
6. Centre switch module in dash panel, Onboard supply control unit, Engine/motor control unit	471
7. Water separator sender, Engine/motor control unit, Radiator fan	472
8. Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit, Coupling point for exhaust flap control unit	473
9. Air mass meter, Data bus diagnostic interface, Engine/motor control unit, Heater element for crankcase breather, Coupling point in interior, below left	474
10. Lambda probe 1 before catalytic converter, Exhaust gas temperature sender 3, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	475
11. Clutch position sender, ABS control unit, Engine/motor control unit	476
12. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system, Coupling point in interior, below left	477
13. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit, Coupling point in engine compartment, left, Auxiliary pump for heating	478
14. Alternator with voltage regulator, Engine/motor control unit, Glow plug 1, Glow plug 2, Charge air cooling pump	479
15. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 3, Glow plug 3, Glow plug 4	480
16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel pressure sender for low pressure, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	481
17. Throttle valve module, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	482
18. Engine speed sender, Charge pressure sender, Exhaust gas temperature sender 1, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	483
19. Exhaust gas recirculation valve 1, Coolant temperature sender, Charge air temperature sender before charge air cooler. Charge air temperature sender after charge air cooler. Engine/motor	484

control unit	
20. Exhaust gas recirculation valve 2, Fuel temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	485
21. Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 4	486
055 - Taxi equipment , (F4E),(F4F),(F5E),(F5R),(F5Z)	487-499
1. Taxi equipment , (F4E),(F4F),(F5E),(F5R),(F5Z)	487
2. Fuse holder B, Fuse holder H	488
3. Fuse holder H	489
4. Onboard supply control unit, Voltage stabiliser	490
5. Taxi alarm active button, Special vehicle control unit	491
6. Centre switch module in dash panel, Interior light switch (taxi), Taxi sign switch, Taxi alarm off button, Park assist steering button, Parking aid control unit, Special vehicle control unit	492
7. Hands-free system button, Passive Taxi alarm button, Data bus diagnostic interface, Control unit for taxi alarm remote control, Special vehicle control unit, Remote controlled taxi alarm aerial	493
8. Special vehicle control unit, Coupling point on dash panel, right, Coupling point on right D-pillar	494
9. Two-way radio loudspeaker volume control 1, Radio channel selection switch, Special vehicle control unit, Two-way radio loudspeaker, 2-way radio unit microphone, Coupling point on dash panel, right, Coupling point on right D-pillar	495
10. Mirror taximeter, Special vehicle control unit, Coupling point in interior	496
11. Reader unit for taxi charge system, Mirror taximeter, Coupling point on dash panel, centre, Coupling point in luggage compartment, right	497
12. Coupling point for data transmission operating unit in special vehicle, Coupling point in luggage compartment, right, Coupling point for interface control unit in special vehicle	498
13. Coupling point on dash panel, centre, Coupling point on dash panel, right, Coupling point for printer port, special vehicles, Coupling point for roof, Coupling point in luggage compartment, right, Coupling point for interface control unit in special vehicle	499
056 - Air conditioning system , (KH6)	500-505
1. Air conditioning system , (KH6)	500
2. Fresh air blower control unit, Fuse holder C, Fresh air blower	501
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit	502
4. Heater and air conditioning controls, Air conditioning system control unit	503
5. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface, Air conditioner compressor, Air recirculation flap control motor	504
6. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Evaporator temperature sensor, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Temperature flap control motor, Air distribution flap control motor	505
057 - Climatronic , (KH7)	506-514
1. Climatronic , (KH7)	506
2. Fresh air blower control unit, Fuse holder C, Fresh air blower	507
3. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Air quality sensor, Pressure sender for refrigerant circuit	508
4. Heater and air conditioning controls, Rear vent temperature sender	509
5. Heater and air conditioning controls	510
6. Heater and air conditioning controls, Data bus diagnostic interface, Air conditioner compressor	511
7. Heater and air conditioning controls, Sunlight penetration photosensor, Footwell vent temperature sender, Front left chest vent temperature sensor, Front right chest vent temperature sensor	512
8. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Left temperature flap control motor, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor	513
9. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Evaporator temperature sensor, Potentiometer for rear temperature flap control motor, Potentiometer for front air distribution flap control motor, Defroster flap control motor, Rear temperature flap control motor, Front air distribution flap control motor	514
058 - Driving aids for disabled persons with special vehicle control unit , (F6M)	515-518
1. Driving aids for disabled persons with special vehicle control unit , (F6M)	515
2. Rotary light switch, Special vehicle control unit, Fuse holder H	516
3. Special vehicle control unit	517
4. Special vehicle control unit	518
059 - Special vehicle , (F6S),(F6T)	519-542
1. Special vehicle , (F6S),(F6T)	519
2. Fuse holder H	520

3. Two-way radio voltage relay, Fuse holder C, Fuse 1 on fuse holder G, Fuse holder H, Fuse 1 on fuse holder J, Fuse 2 on fuse holder J	521
4. Fuse holder F	522
5. Battery isolation relay, Data bus diagnostic interface, Special vehicle control unit, Relay for power sockets	523
6. Ignition/starter switch, Rotary light switch, Steering column electronics control unit, Special vehicle control unit	524
7. Blocking diode, Onboard supply control unit, Steering column electronics control unit, Special vehicle control unit, Blocking diode 2, Interface for entry and start system	525
8. Switch to trip alarm, Alarm system foot switch, Special vehicle control unit, Control unit 1 for information electronics, Two-way radio	526
9. Operating unit with buttons for special functions, Special vehicle control unit, Accident data memory	527
10. Hands-free system button, Hands-free system button 2, Special vehicle control unit	528
11. Front stop command light, Rear stop command light	529
12. Special signal system changeover button, Rotating light and siren system control unit, Special vehicle interface control unit	530
13. Rotating light and siren system control unit, Special vehicle interface control unit	531
14. Special vehicle interface control unit	532
15. Special vehicle interface control unit, Ethernet socket	533
16. Special vehicle interface control unit, Interface for MIB CAN bus, special vehicle interface	534
17. Special vehicle interface control unit, Interface for MIB CAN bus, special vehicle interface, Two-way radio loudspeaker, Two-way radio loudspeaker 2	535
18. Special vehicle interface control unit	536
19. Camera for in-car video surveillance, Memory for in-car video surveillance, Camera 2 for in-car video surveillance	537
20. Coupling point on left A-pillar, Coupling point on right A-pillar, Coupling point on left B-pillar, bottom, Coupling point on right B-pillar, bottom	538
21. Load area illumination switch, Flashing light in rear lid, Flashing light 2 in rear lid, Flashing light 3 in rear lid	539
22. Flashing light 4 in rear lid, Charging station 1, Charging station 2, Charging station 3, Surround lighting 1 in rear lid	540
23. Left additional turn signal, Right additional turn signal, Charging station 4	541
24. Coupling point on right A-pillar, bottom, Coupling point in luggage compartment, centre	542
060 - Sound system DYNAUDIO , (9VW)	543-546
1. Sound system DYNAUDIO , (9VW)	543
2. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Centre loudspeaker, Fuse holder C	544
3. Digital sound package control unit, Control unit 1 for information electronics, TV tuner, Front left bass loudspeaker	545
4. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker	546
061 - LED headlights , (8IU),(8Q5)	547-551
1. LED headlights , (8IU),(8Q5)	547
2. Output module 1 for left LED headlight, Onboard supply control unit, Output module for left headlight, Front left headlight, Fuse holder C	548
3. Output module 1 for right LED headlight, Onboard supply control unit, Output module for right headlight, Front left headlight, Front right headlight	549
4. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	550
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	551
062 - Emergency call module , (NZ4)	552-555
1. Emergency call module , (NZ4)	552
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	553
3. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit	554
4. Emergency call module control unit and communication unit, Roof aerial, Telephone microphone	555
063 - 1.6l diesel engine , DGDA	556-579
1. 1.6l diesel engine , DGDA	556
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B	557
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	558
4. Automatic glow period control unit, Fuse holder B	559
5. Low heat output relav. Relav for power sockets. Relav for reducina aagent meterina svstem. Fuse	560

holder B, Fuse holder C	
6. Centre switch module in dash panel, Onboard supply control unit, Auxiliary air heater control unit, Engine/motor control unit	561
7. Engine/motor control unit	562
8. Air mass measurement module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Heater element for crankcase breather	563
9. Engine/motor control unit, Exhaust flap control unit, Control unit for reducing agent heater	564
10. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater	565
11. Oil level and oil temperature sender, Engine/motor control unit, Radiator fan, Auxiliary pump for heating	566
12. Alternator with voltage regulator, Brake light switch, Engine/motor control unit, Charge air cooling pump	567
13. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Data bus diagnostic interface, Engine/motor control unit, Control unit for NOx sender 2	568
14. Accelerator pedal module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Injector for reducing agent	569
15. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	570
16. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	571
17. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	572
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	573
19. Hall sender, Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	574
20. Throttle valve module, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	575
21. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	576
22. Coolant temperature sender, Fuel pressure sender, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	577
23. Charge pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	578
24. Fuel delivery unit, Fuel pump control unit, Dash panel insert	579
064 - TV tuner, card reader unit (Japan) , (ER5)	580-584
1. TV tuner, card reader unit (Japan) , (ER5)	580
2. TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV, Fuse holder C	581
3. Chip card reader control unit, Control unit 1 for information electronics, TV tuner, Aerial amplifier 1 for TV	582
4. Chip card reader control unit, Traffic data aerial, USB hub	583
5. Toll collection sender, Chip card reader control unit	584
065 - Radio navigation system	585-596
1. Radio navigation system	585
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C, Fuse holder H	586
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone microphone	587
4. Chip card reader control unit, Control unit 1 for information electronics, USB hub	588
5. Control unit 1 for information electronics, Connection for external audio sources, USB hub	589
6. Control unit 1 for information electronics, USB connection 1	590
7. Control unit 1 for information electronics, CD player, USB charging socket 1	591
8. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	592
9. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Left aerial module, Radio aerial	593
10. Control unit 1 for information electronics, Radio aerial 2, Digital radio aerial	594
11. Control unit 1 for information electronics, Roof aerial, Amplitude modulation (AM) frequency filter, LTE aerial 1	595
12. Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Heated rear window	596
066 - Special vehicle , (F4Q),(F4X),(F5X),(F6J)	597-624
1. Special vehicle . (F4Q).(F4X).(F5X).(F6J)	597



2. Battery, Relay and fuse carrier A for special vehicles, Relay and fuse carrier B for special vehicles	598
3. Relay and fuse carrier C for special vehicles, Relay and fuse carrier D for special vehicles, Relay and fuse carrier G for special vehicles	599
4. Relay and fuse carrier G for special vehicles, Relay and fuse carrier H for special vehicles	600
5. Relay and fuse carrier J for special vehicles, Relay and fuse carrier K for special vehicles, Relay and fuse carrier L for special vehicles	601
6. Relay and fuse carrier L for special vehicles, Relay and fuse carrier M for special vehicles	602
7. Relay and fuse carrier E for special vehicles, Relay and fuse carrier N for special vehicles, Relay and fuse carrier P for special vehicles, Relay and fuse carrier Q for special vehicles	603
8. Fuse holder C, Relay and fuse carrier E for special vehicles, Coupling point for front flashing lights in special vehicle, Coupling point for special signals siren	604
9. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Special vehicle control unit, Interface for entry and start system	605
10. Blocking diode, Special vehicle control unit, Blocking diode 2, Push-in bridge	606
11. Data bus diagnostic interface, Special vehicle control unit	607
12. Special vehicle control unit, Coupling point in luggage compartment, left, Coupling point for additional turn signal, left-side, Coupling point for additional turn signal, right-side	608
13. Ignition bypass button, Button for tonal sequence standby, Special vehicle control unit, Coupling point for luggage compartment light on special vehicles	609
14. Special vehicle control unit	610
15. Switch to trip alarm, 2-way radio unit microphone, Coupling point for two-way radio in special vehicle	611
16. Two-way radio loudspeaker, Two-way radio loudspeaker 2, 2-way radio unit microphone 2, Coupling point for two-way radio in special vehicle, Coupling point 2 for two-way radio in special vehicle	612
17. Flashing light in windscreen for blue flashing light, Charging station for torch, Charging station for hand-held 2-way radio, Charging station 2 for hand-held 2-way radio, Charging station 2 for torch, Charging station 1, Charging station 3	613
18. Coupling point for in-car video surveillance display unit, 12 V socket, Charging station 2 for hand-held 2-way radio, Charging station 4, 12 V socket for special vehicles, 12 V socket 2 for special vehicles, 12 V socket 3 for special vehicles, Display unit for in-car video surveillance	614
19. Camera for in-car video surveillance, Camera 2 for in-car video surveillance, Coupling point for in-car video surveillance camera, Coupling point for in-car video surveillance camera 2, Coupling point for in-car video surveillance memory, Display unit for in-car video surveillance	615
20. Button 1 for in-car video surveillance, Button 2 for in-car video surveillance, Coupling point for in-car video surveillance memory	616
21. Button 3 for in-car video surveillance, Coupling point for operating unit for special signals	617
22. Special signal system with light bar and lettering, Coupling point for special signal system aerial, Coupling point for CAN bus for special signal system, Coupling point 1 for aerial, special vehicles, Coupling point for special signal system voltage supply, Coupling point for additional turn signals of special signal system	618
23. Special signal system with light bar and lettering, Coupling point 2 for operating unit for special signals, Coupling point for special signal system loudspeaker, Coupling point for siren system control unit in special vehicle	619
24. Coupling point 2 for operating unit for special signals, 2-pin connector, Coupling point for siren system control unit in special vehicle, Coupling point for accident data memory	620
25. Coupling point 2 for spare wiring on special vehicles, Coupling point for interface control unit in special vehicle	621
26. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	622
27. Flashing light in rear lid, Flashing light 2 in rear lid, Coupling point for rear lid, Surround lighting 1 in rear lid	623
28. Flashing light 3 in rear lid, Flashing light 4 in rear lid	624
067 - Special vehicle , (F6B),(F6C),(F6E),(F6K)	625-648
1. Special vehicle , (F6B),(F6C),(F6E),(F6K)	625
2. Battery, Relay and fuse carrier A for special vehicles, Relay and fuse carrier B for special vehicles	626
3. Relay and fuse carrier C for special vehicles, Relay and fuse carrier D for special vehicles, Relay and fuse carrier G for special vehicles	627
4. Relay and fuse carrier G for special vehicles, Relay and fuse carrier H for special vehicles	628
5. Relay and fuse carrier J for special vehicles, Relay and fuse carrier K for special vehicles, Relay and fuse carrier L for special vehicles	629
6. Relay and fuse carrier L for special vehicles, Relay and fuse carrier M for special vehicles	630
7. Relay and fuse carrier E for special vehicles, Relay and fuse carrier N for special vehicles, Relay and fuse carrier P for special vehicles, Relay and fuse carrier Q for special vehicles	631
8. Fuse holder C. Relay and fuse carrier E for special vehicles. Coupling point for front flashing	632

lights in special vehicle, Coupling point for special signals siren	633
9. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Special vehicle control unit, Interface for entry and start system	634
10. Blocking diode, Special vehicle control unit, Blocking diode 2, Push-in bridge	635
11. Data bus diagnostic interface, Special vehicle control unit	636
12. Special vehicle control unit	637
13. Coupling point for two-way radio in special vehicle	638
14. Two-way radio loudspeaker, 2-way radio unit microphone, Two-way radio loudspeaker 2, Coupling point for two-way radio in special vehicle	639
15. Flashing light in windscreen for blue flashing light, 2-way radio unit microphone 2, Coupling point 2 for two-way radio in special vehicle, Charging station for torch, Charging station 2 for torch, Charging station 1	640
16. Charging station for hand-held 2-way radio, Charging station 2 for hand-held 2-way radio, Charging station 3, Charging station 4, 12 V socket 3 for special vehicles	641
17. 12 V socket, 12 V socket for special vehicles, 12 V socket 2 for special vehicles, Socket for blue flashing light, Socket 2 for blue flashing light, Socket 3 for blue flashing light, Socket 4 for blue flashing light	642
18. Front stop command light, Coupling point for operating unit for special signals	643
19. Rear stop command light, Rotating light and siren system control unit, Coupling point 2 for operating unit for special signals	644
20. Rotating light and siren system control unit, Coupling point 2 for operating unit for special signals, Coupling point for accident data memory	645
21. Coupling point 2 for spare wiring on special vehicles, Coupling point for interface control unit in special vehicle	646
22. Coupling point for spare wiring on special vehicles, Coupling point 3 for spare wiring on special vehicles	647
23. Flashing light in rear lid, Flashing light 2 in rear lid, Coupling point for rear lid, Surround lighting 1 in rear lid	648
24. Flashing light 3 in rear lid, Flashing light 4 in rear lid	649-668
068 - Basic equipment	649
1. Basic equipment	650
2. Horn relay, Fuse holder B, Fuse holder C	651
3. Heated rear window relay, Fuse holder C	652
4. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	653
5. Onboard supply control unit, Front left headlight, Front right headlight	654
6. Reversing light switch, Brake fluid level warning contact, Bonnet contact switch, Treble horn, Bass horn, Onboard supply control unit, Left fog light bulb, Right fog light bulb	655
7. Rotary light switch, Onboard supply control unit, Engine/motor control unit	656
8. Hazard warning light switch, Glove compartment light switch, Onboard supply control unit, Front interior light, Glove compartment light	657
9. Onboard supply control unit, Rear interior light, Rear centre reading light	658
10. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	659
11. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2, Right tail light cluster 2, Left number plate light, Right number plate light	660
12. Tank flap release, Onboard supply control unit, Right tail light cluster, High-level brake light bulb, Luggage compartment light	661
13. Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit, Heated rear window	662
14. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower, Air recirculation flap control motor	663
15. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Temperature flap control motor, Air distribution flap control motor	664
16. Turn signal switch, Intermittent wiper switch, Multifunction display call-up button, Steering column electronics control unit	665
17. Cruise control system switch, Cruise control system (CCS) SET button, Steering column electronics control unit	666
18. Ignition/starter switch, Horn plate, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	667
19. Immobiliser reader coil, Control unit in dash panel insert, Dash panel insert	668
20. Dash panel insert	669-671
069 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZH),(SP8)	669
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZH),(SP8)	670
2. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit. Onboard supply control unit. Steering column electronics	671

control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit	671
070 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	672-674
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	672
2. Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Fuse holder C	673
3. Steering column electronics control unit, Heated steering wheel	674
071 - 1.5l petrol engine , DADA,DPCA	675-694
1. 1.5l petrol engine , DADA,DPCA	675
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	676
3. Main relay, Fuse holder B	677
4. Fuse holder C, Vacuum pump for brakes	678
5. Centre switch module in dash panel, Onboard supply control unit	679
6. Engine/motor control unit	680
7. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	681
8. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	682
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit	683
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	684
11. Engine/motor control unit	685
12. Engine/motor control unit	686
13. Charge pressure control module, Engine/motor control unit	687
14. Oil pressure sender, Charge pressure sender, Engine speed sender, Knock sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	688
15. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	689
16. Throttle valve module, Engine temperature regulation module, Engine/motor control unit, Fuel metering valve	690
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Inlet camshaft control valve 1	691
18. Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	692
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	693
20. Fuel delivery unit, Fuel pump control unit, Dash panel insert	694
072 - 1.0l petrol engine , DKRB	695-711
1. 1.0l petrol engine , DKRB	695
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	696
3. Main relay, Fuse holder B	697
4. Vacuum pump relay, Onboard supply control unit, Fuse holder B, Fuse holder C	698
5. Centre switch module in dash panel, Onboard supply control unit, Engine/motor control unit	699
6. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Radiator fan	700
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	701
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Data bus diagnostic interface, Engine/motor control unit	702
9. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system, Vacuum pump for brakes	703
10. Oil level and oil temperature sender, Power steering control unit, Steering column electronics control unit, Engine/motor control unit	704
11. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	705
12. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	706
13. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit	707
14. Knock sensor 1. Coolant temperature sender. Fuel pressure sender. Engine/motor control unit.	708

Fuel pressure regulating valve	
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	709
16. Engine/motor control unit, Injector, cylinder 3, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Charge air cooling pump	710
17. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Ignition coil 3 with output stage, Spark plug 3	711
073 - Emergency call module , (NZ2),(NZ4)	712-716
1. Emergency call module , (NZ2),(NZ4)	712
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Fuse holder C	713
3. Airbag control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	714
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	715
5. Emergency call module control unit and communication unit, Aerial, LTE aerial 1, LTE aerial 2	716
074 - Radio navigation system	717-729
1. Radio navigation system	717
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C, Fuse holder H	718
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	719
4. Chip card reader control unit, Control unit 1 for information electronics, USB hub	720
5. Control unit 1 for information electronics, USB hub	721
6. Control unit 1 for information electronics, USB charging socket 1	722
7. Data bus diagnostic interface, Control unit 1 for information electronics, Telephone microphone	723
8. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	724
9. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	725
10. Control unit 1 for information electronics, Radio aerial 2, Left aerial module, Digital radio aerial, Radio aerial	726
11. Control unit 1 for information electronics, Roof aerial, Amplitude modulation (AM) frequency filter, LTE aerial 1	727
12. Onboard supply control unit, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, USB connection 1, Heated rear window	728
13. USB connection 1	729
075 - Mobile telephone systems , (9IJ)	730-732
1. Mobile telephone systems , (9IJ)	730
2. Onboard supply control unit, Control unit 1 for information electronics, Interface for entry and start system, Storage compartment with interface for mobile telephone, Fuse holder C	731
3. Two-way signal amplifier for mobile telephone/data services, Roof aerial, Storage compartment with interface for mobile telephone	732
076 - Dual clutch gearbox 0GC , (0IJ)	733-737
1. Dual clutch gearbox 0GC , (0IJ)	733
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	734
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	735
4. Selector lever, Selector lever locked in position P switch, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid	736
5. Selector lever, Onboard supply control unit	737
077 - Sound system , (8AR),(9VW)	738-742
1. Sound system , (8AR),(9VW)	738
2. Digital sound package control unit, Data bus diagnostic interface, Fuse holder C	739
3. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Centre loudspeaker	740
4. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	741
5. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker	742
078 - 2.0l diesel engine , DTRC,DTSB	743-772
1. 2.0l diesel engine , DTRC,DTSB	743
2. Battery, Starter, Battery monitor control unit, Fuse holder B	744
3. Heater and air conditioning controls, Auxiliary air heater control unit, Fuse holder B	745
4. Fuse holder B	746
5. Fuse holder B	747
6. Fuse holder C	748

7. Centre switch module in dash panel, Onboard supply control unit	749
8. Engine/motor control unit	750
9. Air mass measurement module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	751
10. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	752
11. Accelerator pedal module, Engine/motor control unit, Heater element for crankcase breather, Injector for reducing agent	753
12. Brake light switch, Exhaust gas temperature sender 4, Engine/motor control unit, Radiator fan	754
13. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	755
14. Control unit 3 for NOx sender, Particulate sensor, Engine/motor control unit	756
15. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	757
16. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system	758
17. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	759
18. Delivery unit for reducing agent metering system, Engine/motor control unit	760
19. Oil level and oil temperature sender, Engine/motor control unit, Exhaust flap control unit, Injector 2 for reducing agent	761
20. Alternator with voltage regulator, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	762
21. Engine/motor control unit, Valve for oil pressure control, Glow plug 3, Glow plug 1, Glow plug 2	763
22. Oil pressure sender, Pressure differential sender, Engine/motor control unit, Fuel pressure regulating valve, Glow plug 4	764
23. Charge pressure sender, Coolant temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Coolant temperature sender for charge air cooler, Engine/motor control unit	765
24. Engine outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel metering valve	766
25. Throttle valve module, Exhaust gas recirculation valve 1, Engine/motor control unit	767
26. Exhaust gas recirculation valve 2, Engine/motor control unit, Charge pressure positioner	768
27. Fuel pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	769
28. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Inlet camshaft position sender, Engine/motor control unit	770
29. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	771
30. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert	772
079 - Lane departure warning , (79B),(79D),(7Y1),(7Y5)	773-775
1. Lane departure warning , (79B),(79D),(7Y1),(7Y5)	773
2. Lane change assist control unit, Lane change assist control unit 2, Lane change assist warning lamp in left exterior mirror, Fuse holder C, Left exterior mirror	774
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist warning lamp in right exterior mirror, Right exterior mirror	775
080 - Fuse assignment	776-821
1. Fuse assignment	776
2. Battery, Alternator with voltage regulator, Power steering control unit, Auxiliary air heater control unit, Fuse holder A, Radiator fan	777
3. ABS control unit, Battery monitor control unit, Wiper motor control unit, Fuse holder B	778
4. Starter, Clutch position sender, Mechatronic unit for dual clutch gearbox, Starter relay 1, Starter relay 2, Fuse holder B	779
5. Treble horn, Bass horn, High heat output relay, Horn relay, Fuse holder B, Auxiliary air heater element	780
6. Air mass meter, Main relay, Terminal 30 voltage supply relay, Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	781
7. Oil level and oil temperature sender, Charge pressure control solenoid valve, Fuse holder B	782
8. Brake light switch, Fuse holder B, Charge air cooling pump	783
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Control unit for NOx sender 2, Fuse holder B	784
10. Heated windscreen relay, Heated windscreen relay 2, Fuse holder B, Heated windscreen	785
11. Automatic glow period control unit, Low heat output relay, Fuse holder B	786
12. Auxiliary heater control unit, Engine component power supply relay, Fuse holder B, Vacuum pump for brakes	787
13. Coolant shut-off valve. Exhaust gas recirculation cooler changeover valve. Coolant valve for	788

cylinder head, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator B for cylinder 3, Coupling point in engine compartment, left	
14. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4, Glow plug 3, Glow plug 4, Coupling point in engine compartment, left	789
15. Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1, Coupling point in engine compartment, left	790
16. Function unit for active oil separation, Valve for oil pressure control, Actuator for engine temperature regulation, Exhaust cam actuator for cylinder 3, Glow plug 2, Coupling point in engine compartment, left, Auxiliary pump for heating	791
17. Turbocharger air recirculation valve, Fuel pressure regulating valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Coolant regulating valve, Piston cooling jet control valve, Glow plug 1, Coupling point in engine compartment, left	792
18. Alarm horn, Fuel pump control unit, Vacuum pump for brakes	793
19. Fuse holder C	794
20. Heater and air conditioning controls, Selector lever, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Remote control receiver for auxiliary heater, Fuse holder C	795
21. Rotary light switch, Operating and display unit for rear air conditioning system, Electromechanical parking brake button, Rain and light sensor, Fuse holder C, 12 V socket 3, USB charging socket 1	796
22. Anti-theft alarm sensor, Steering column electronics control unit, Fuse holder C, Diagnostic connection	797
23. Fresh air blower control unit, Rear lid control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for front left belt tensioner, Fuse holder C	798
24. Front passenger door control unit, Rear right door control unit, Control unit for front right belt tensioner, Fuse holder C, Rear right window regulator motor	799
25. Heated rear window relay, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C	800
26. Interior mirror, Relay for power sockets, Fuse holder C	801
27. Terminal 15 voltage supply relay, Parking aid control unit, Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems, Fuse holder C, 12 V socket, 12 V socket 2	802
28. Adaptive cruise control unit, Control unit for cornering light and headlight range control, Front left headlight, Front right headlight, Fuse holder C	803
29. Airbag control unit, Airbag warning lamp, Fuse holder C	804
30. Control unit for electronic steering column lock, Front left headlight, Front right headlight, Fuse holder C, Rear window wiper motor	805
31. Chip card reader control unit, Two-way signal amplifier for mobile telephone/data services, TV tuner, Storage compartment with interface for mobile telephone, USB hub, Fuse holder C, USB connection 1	806
32. Interface for entry and start system, Reversing camera, Fuse holder C, Coupling point 2 for special vehicle, criminal investigation department	807
33. Delivery unit for reducing agent metering system, Relay for reducing agent metering system, Fuse holder C	808
34. Sliding sunroof adjustment control unit, Driver door control unit, Rear left door control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Fuse holder C, Rear left window regulator motor	809
35. Trailer detector control unit, Fuse holder C	810
36. Operating unit for front left seat adjustment, Front left lumbar support adjustment switch, Control unit for driver multicontour seat, Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C	811
37. Control unit for reducing agent heater, Fuse holder C	812
38. Electronically controlled damping control unit, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	813
39. Air conditioner compressor regulating valve, Fuse holder C, Fuse holder H	814
40. Fuse holder H	815
41. Centre switch module in dash panel, Taxi alarm active button, Special vehicle control unit, Fuse holder H	816
42. Voltage stabiliser, Fuse holder H, Coupling point on dash panel, centre, Coupling point in luggage compartment, right	817
43. Mirror taximeter. Control unit for taxi alarm remote control. Coupling point on dash panel.	818

right, Coupling point on right D-pillar, Coupling point in interior	
44. Operating unit for front right seat adjustment, Front right lumbar support adjustment switch, Engine/motor control unit, Control unit for front passenger multicontour seat, Front passenger seat adjustment thermal fuse 1	819
45. Engine/motor control unit	820
46. Onboard supply control unit, Engine/motor control unit	821
081 - 1.5l petrol engine , DXDB	822-845
1. 1.5l petrol engine , DXDB	822
2. Battery, Starter, Battery monitor control unit, Fuse holder B	823
3. Fuse holder B	824
4. Centre switch module in dash panel, Onboard supply control unit, Fuse holder C	825
5. Engine/motor control unit, Radiator fan	826
6. Accelerator pedal module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	827
7. Brake light switch, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit	828
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	829
9. Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump	830
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	831
11. Data bus diagnostic interface, Engine/motor control unit	832
12. Engine/motor control unit	833
13. Engine/motor control unit	834
14. Engine temperature regulation module, Knock sensor 1, Engine/motor control unit	835
15. Dual exhaust gas temperature sensor 1, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	836
16. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	837
17. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	838
18. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	839
19. Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Exhaust camshaft control valve 1	840
20. Engine/motor control unit, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Inlet camshaft control valve 1	841
21. Throttle valve module, Function unit for active oil separation, Engine/motor control unit, Exhaust cam actuator for cylinder 3	842
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	843
23. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	844
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Ignition coil 4 with output stage, Spark plug 4	845
801 - - Fitting locations: Earth points - 3	846-860
1. Earth points	846-860
1.1 Earth points in front part of vehicle	846-855
1.1.1 Front from left	847
1.1.2 Front from right	847
1.1.3 1.0l petrol engine, DKRB	848
1.1.4 1.2l petrol engine, CYVB	849
1.1.5 1.4l petrol engine, CZDA	850
1.1.6 1.5l petrol engine, DADA, DPCA	851
1.1.7 1.8l petrol engine, CJSA	852
1.1.8 Dual clutch gearbox, 0CW	853
1.1.9 Dual clutch gearbox, 0D9, 0GC	854
1.1.10 Manual gearbox	855
1.2 Earth points in middle part of vehicle	856-857
1.2.1 Interior from left	856
1.2.2 Interior from right	857
1.3 Earth points in rear part of vehicle	858-860
1.3.1 On right in luggage compartment, rear lid	858
1.3.2 Left luggage compartment	859-860
802 - -Fitting locations: Fuses - 3	861-953
1. Fuses	861-953

1.1 Overview of fuse holders	861-862
1.2 Fitting location of fuse holder F -SF-, only for special vehicles	863
1.2.1 Fuse assignment for fuse holder F -SF-, only for special vehicles, from August 2016	863
1.3 Fuse assignment for fuse holder F -SF-	864
1.3.1 Fuse assignment of fuse holder F -SF-, from August 2016	864
1.4 Fitting location of fuses in luggage compartment for special vehicles	865
1.4.1 Fitting location of fuses in luggage compartment for special vehicles, police/criminal investigation department/public authority vehicles, from January 2018	865
1.5 Fuse assignment of fuses in luggage compartment for special vehicles	866
1.5.1 Fuse assignment of fuses in luggage compartment for special vehicles, police/criminal investigation department/public authority vehicles, from January 2018	866
1.6 Fitting location of relay and fuse carrier G for special vehicles -SRSG-	867
1.6.1 Fitting location of relay and fuse carrier G for special vehicles -SRSG- , police/criminal investigation department/public authority vehicles, from January 2018	867
1.7 Fuse assignment for relay and fuse carrier G for special vehicles -SRSG-	868
1.7.1 Fuse assignment for relay and fuse carrier G for special vehicles -SRSG- , police/criminal investigation department/public authority vehicles, from January 2018	868
1.8 Fitting location of fuse holder C -SC-	869-870
1.8.1 Fitting location of fuse holder C -SC-, LHD models	869
1.8.2 Fitting location of fuse holder C -SC-, RHD models	870
1.9 Fuse assignment for fuse holder C -SC-	871-910
1.9.1 Fuse assignment for fuse holder C -SC-, from September 2015	871-874
1.9.2 Fuse assignment for fuse holder C -SC-, from May 2016	875-878
1.9.3 Fuse assignment for fuse holder C -SC-, from November 2016	879-883
1.9.4 Fuse assignment for fuse holder C -SC-, from May 2017	884-887
1.9.5 Fuse assignment for fuse holder C -SC-, from November 2017	888-892
1.9.6 Fuse assignment for fuse holder C -SC-, from July 2018	893-896
1.9.7 Fuse assignment for fuse holder C -SC-, from November 2018	897-901
1.9.8 Fuse assignment for fuse holder C -SC-, from July 2019	902-906
1.9.9 Fuse assignment for fuse holder C -SC-, from July 2020	907-910
1.10 Fuse assignment of front passenger seat adjustment thermal fuse 1 -S46-	911
1.10.1 Fuse assignment of front passenger seat adjustment thermal fuse 1 -S46-, left-hand drive, from September 2015	911
1.10.2 Fuse assignment of front passenger seat adjustment thermal fuse 1 -S46-, right-hand drive, from September 2015	912
1.11 Fitting location of fuse holder H -SH-, only for special vehicles	912
1.11.1 Fitting location of fuse holder H -SH-	912
1.12 Fuse assignment for fuse holder H -SH-	913-917
1.12.1 Fuse assignment of fuse holder H -SH-, taxi equipment, from February 2016	913
1.12.2 Fuse assignment of fuse holder H -SH-, taxi equipment, from May 2017	914
1.12.3 Fuse assignment of fuse holder H -SH-, driving aids, from September 2016	915
1.12.4 Fuse assignment of fuse holder H -SH-, police/criminal investigation department, from November 2016	916
1.12.5 Fuse assignment of fuse holder H -SH-, series model, from May 2017	917
1.12.6 Fuse assignment of fuse holder H -SH-, series model, from July 2020	918
1.13 Fitting location of fuses in interior for special vehicles	918-919
1.13.1 Fitting location of fuses in interior for special vehicles, police/criminal investigation department/public authority vehicles, from January 2018	918-919
1.14 Fuse assignment of fuses in interior for special vehicles	920
1.14.1 Fuse assignment of fuses in interior for special vehicles, police/criminal investigation department/public authority vehicles, from January 2018	920
1.15 Fitting location of fuse holder B -SB-	921
1.16 Fuse assignment for fuse holder B -SB-	922-946
1.16.1 Fuse assignment for fuse holder B -SB-, from September 2015	922-924
1.16.2 Fuse assignment for fuse holder B -SB-, from January 2016	925-927
1.16.3 Fuse assignment for fuse holder B -SB-, from May 2017	928-931
1.16.4 Fuse assignment for fuse holder B -SB-, from November 2017	932-934
1.16.5 Fuse assignment for fuse holder B -SB-, from July 2018	935-938
1.16.6 Fuse assignment for fuse holder B -SB-, from November 2018	939-942
1.16.7 Fuse assignment for fuse holder B -SB-, from November 2020	943-946
1.17 Fitting location of fuse holder A -SA-	947-948
1.17.1 Fitting location of fuse holder A -SA-, from September 2015	947-948
1.18 Fuse assignment for fuse holder A -SA-	949
1.18.1 Fuse assignment for fuse holder A -SA-, from September 2015	949
1.19 Fitting location of fuse 1 -S131-	950-951
1.19.1 Fitting location of fuse 1 -S131-	950



1.19.2 Fuse assignment of fuse 1 -S131-	951
1.20 Fitting location of fuse 2 -S132-	952-953
1.20.1 Fitting location of fuse 2 -S132-	952
1.20.2 Fuse assignment of fuse 2 -S132-	953

951
952-953
952
953