



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Identification</b>	<b>2</b>
2.1 Allocation of PR number - brakes	2
<b>3 Technical data</b>	<b>3</b>
3.1 Technical data for brakes	3
<b>4 Brake test</b>	<b>5</b>
4.1 General information	5
4.2 Checking vehicles with front-wheel drive	5
<b>45 - Anti-lock brake system</b>	<b>6</b>
<b>1 General information</b>	<b>6</b>
1.1 Repair instructions for repair work on ABS	7
<b>2 Overview of fitting locations</b>	<b>8</b>
2.1 ABS	8
2.2 ABS/ESP	9
<b>3 Control unit and hydraulic unit</b>	<b>11</b>
3.1 Assembly overview - control unit and hydraulic unit	11
3.2 Removing and installing control unit and hydraulic unit	13
3.3 Connecting brake lines to hydraulic unit	21
<b>4 Sensors</b>	<b>23</b>
4.1 Assembly overview - speed sensor on front axle	23
4.2 Removing and installing speed sensor on front axle	24
4.3 Assembly overview - speed sensor on rear axle	24
4.4 Removing and installing speed sensor on rear axle	26
4.5 Removing and installing steering angle sender G85	26
4.6 Removing and installing yaw rate sender and lateral acceleration sender	27
<b>46 - Brakes - mechanism</b>	<b>28</b>
<b>1 Front brake</b>	<b>28</b>
1.1 Assembly overview - front brake	28
1.2 Removing and installing brake pads	31
1.3 Removing and installing brake caliper	36
<b>2 Rear brake</b>	<b>41</b>
2.1 Assembly overview - rear brakes	41
2.2 Resetting drum brakes	42
2.3 Removing and installing brake shoes	42
<b>3 Parking brake</b>	<b>46</b>
3.1 Assembly overview - parking brake	46
3.2 Removing and installing rear brake cable	47
3.3 Adjusting parking brake	50
<b>4 Brake pedal</b>	<b>51</b>
4.1 Assembly overview - brake pedal	51
4.2 Separating brake pedal from brake servo	53
4.3 Connecting brake pedal to brake servo	54
4.4 Removing and installing brake pedal	54
4.5 Removing and installing mounting bracket	55
<b>47 - Brakes - hydraulics</b>	<b>57</b>
<b>1 Front brake caliper</b>	<b>57</b>



1.1	Assembly overview – front brake caliper	57
1.2	Removing and installing brake caliper piston	59
<b>2</b>	<b>Brake servo and brake master cylinder</b>	<b>63</b>
2.1	Assembly overview - brake servo/brake master cylinder	63
2.2	Removing and installing brake light switch	66
2.3	Removing and installing brake master cylinder	69
2.4	Removing and installing brake servo	74
<b>3</b>	<b>Vacuum system</b>	<b>81</b>
3.1	Assembly overview – vacuum pump	81
3.2	Checking non-return valve	82
3.3	Removing and installing brake servo pressure sensor	83
3.4	Removing and installing electrical vacuum pump for brakes	83
3.5	Checking vacuum system	84
<b>4</b>	<b>Brake lines</b>	<b>89</b>
4.1	Repairing brake lines	89
<b>5</b>	<b>Hydraulic system</b>	<b>94</b>
5.1	General notes on brake fluid	94
5.2	Bleeding hydraulic system following standard procedure	94
5.3	Subsequent bleeding of hydraulic system	95
5.4	Leakage test:	97