



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety indications</b>	<b>1</b>
1.1 Safety measures for test drives with testing and measuring equipment	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Contact corrosion	2
2.2 Connection installation and fastening	2
<b>27 - Starter, current supply, CCS</b>	<b>3</b>
<b>1 Battery</b>	<b>3</b>
1.1 Battery A - assembly overview	3
1.2 Battery - remove and install	4
1.3 Battery - disconnect and connect	6
1.4 Battery Console A - remove and install	9
1.5 Battery A - check	11
1.6 Battery A - charging	11
<b>2 Alternator</b>	<b>12</b>
2.1 Generator - assembly overview	12
2.2 Generator (Alternator) C - remove and install	13
2.3 Generator (Alternator) C - check	15
2.4 Poly-V belt pulley - remove and install	16
2.5 Voltage Regulator C1 - Disassembly and Assembly	21
<b>3 Starter</b>	<b>25</b>
3.1 StarterB - assembly overview	25
3.2 Starter B - remove and install	26
3.3 Starter B - check	27
<b>4 Speed regulator (GRA).</b>	<b>28</b>
<b>90 - Gauges, instruments</b>	<b>29</b>
<b>1 Instrument cluster</b>	<b>29</b>
1.1 Instrument cluster K - assembly overview	29
1.2 Instrument cluster K - remove and install	31
1.3 Combined instrument K - replace	33
1.4 Instrument cluster K - pin assignment	34
<b>2 Horns</b>	<b>35</b>
2.1 Treble tone horn H2 - assembly overview	35
2.2 Treble tone horn H2 - remove and install	36
2.3 Horn plate H	37
<b>92 - Windscreen wash/wipe system</b>	<b>38</b>
<b>1 Windscreen wiper system</b>	<b>38</b>
1.1 Wiper system - assembly overview	39
1.2 Windscreen wiper blade resting position - adjust	40
1.3 Windscreen wiper blade - remove and install	42
1.4 Windscreen wiper arms - remove and install	43
1.5 Windscreen wiper rubber - replace	45
1.6 Windscreen wiper mechanism - remove and install	47
1.7 Windscreen wiper motor V - disassemble and assemble	49
1.8 Rain and light sensor G397 - remove and install	51
1.9 Rain and light sensor - repair	54
<b>2 Windscreen washer system</b>	<b>57</b>
2.1 Windscreen washer system - assembly overview	57
2.2 Reservoir for the windscreen and rear window washer system - remove and install	58



2.3	Windscreen washer pump V5 and/or Rear window washer pump V13 - remove and install	60
2.4	Windscreen washer system spray nozzles - replace	61
2.5	Windscreen washer system spray nozzles - adjust	62
<b>3</b>	<b>Rear window wiper system</b>	<b>63</b>
3.1	Rear window wiper system - assembly overview	63
3.2	Rear window wiper blade - remove and install	64
3.3	Rear window wiper arm - remove and install	65
3.4	Rear window wiper arm - adjust	66
3.5	Rear window wiper motor - remove and install	67
<b>4</b>	<b>Rear window washer system</b>	<b>69</b>
4.1	Rear window washer system - assembly overview	69
4.2	Rear window washer system spray nozzle - replace	70
<b>94</b>	<b>- Lights, bulbs, switches - exterior</b>	<b>72</b>
<b>1</b>	<b>Main headlights</b>	<b>72</b>
1.1	Main headlights - assembly overview	72
1.2	Main Headlights - remove and install	73
1.3	Main headlights - Position adjustment	75
1.4	Front turn signal bulb M5 and/or M7 - replace	77
1.5	Headlights - Install housing repair kit	79
1.6	Main beam/dipped beam lamp (version 1) - replace	82
1.7	Main beam/dipped beam lamp (version 2) - replace	83
1.8	Front side light M1 and/or M3 - replace	84
<b>2</b>	<b>Fog lights</b>	<b>87</b>
2.1	Fog lights - Assembly overview	87
2.2	Fog lights - Assembly overview	88
2.3	Fog lights - remove and install	89
2.4	Fog lights - remove and install	90
2.5	Fog light lamp - replace	91
<b>3</b>	<b>Headlights - check adjustment</b>	<b>93</b>
3.1	Check headlight adjustment (with the new inspection display without 15° adjustment line).	94
3.2	Headlights - adjust	96
<b>4</b>	<b>Turn signal repeater</b>	<b>99</b>
4.1	Side indicator lights incorporated to external rear-view mirrors	99
<b>5</b>	<b>Tail lights</b>	<b>100</b>
5.1	Tail lights - Assembly overview	100
5.2	Tail light - remove and install	101
5.3	Bulb support - disassemble and assemble	103
5.4	Tail light bulb - replace	104
5.5	Fog light lamp - replace	104
5.6	Tail light and brake light bulb - replace	105
5.7	Reverse gear light bulb - replace	105
5.8	Turn signal bulb - replace	106
<b>6</b>	<b>Auxiliary brake light</b>	<b>107</b>
6.1	Brakelight bulb M25 - remove and install	107
<b>7</b>	<b>License plate light</b>	<b>110</b>
7.1	Number plate light - remove and install	110
7.2	License plate light X - replace the light bulb	111
<b>8</b>	<b>Steering column switch module (SMLS)</b>	<b>112</b>
8.1	Steering column combination switch (SMLS) - E595 - remove and install (version 1)	113
8.2	Steering column combination switch (SMLS) - E595 - remove and install (version 2)	114
8.3	Steering lock set - remove and install	116
8.4	Ignition switch (version 1) - remove and install	118
8.5	Ignition switch (version 2) - remove and install	119



8.6	Test the ignition and starter switches .....	120
8.7	Key cylinder - remove and install .....	121
<b>9</b>	<b>Auxiliary parking system .....</b>	<b>124</b>
9.1	Locating defects and indicating faults .....	125
9.2	Parking aid - assembly overview .....	125
9.3	Warning buzzer for rear parking aid H15 - remove and install .....	126
9.4	Adjust the volume and frequency of the rear parking aid warning buzzer .....	126
9.5	Rear parking aid sensor - remove and install .....	126
9.6	Control unit for parking aid - remove and install .....	129
9.7	Adjust the parking aid control unit .....	130
<b>96</b>	<b>- Lights, bulbs, switches - interior .....</b>	<b>131</b>
<b>1</b>	<b>Control elements and lights on the dash board .....</b>	<b>131</b>
1.1	Light switch - remove and install .....	131
1.2	Centre dash board switch module - remove and install .....	132
<b>2</b>	<b>Control elements and lights on front doors .....</b>	<b>134</b>
2.1	Switch elements in door lining .....	134
2.2	Front left window control switch E40 and/or E41 - remove and install .....	136
2.3	Rear-view mirror adjustment switch E43 with Switch for rear-view mirror adjustment E48 - removal and installation .....	137
2.4	Switch for int. locking, driver side E150 - remove and install .....	138
<b>3</b>	<b>Roof lining control elements and lights .....</b>	<b>139</b>
3.1	Front interior light W1- remove and install .....	139
3.2	Front interior light W1 with reading light .....	141
<b>4</b>	<b>Anti-theft alarm system .....</b>	<b>145</b>
4.1	Anti-theft alarm system horn H8 - remove and install .....	145
<b>5</b>	<b>Vehicle immobilizer .....</b>	<b>146</b>
5.1	Immobilizer control unit J362 - remove and install .....	146
5.2	Reader coil - remove and install .....	147
<b>6</b>	<b>12 Volt socket .....</b>	<b>148</b>
6.1	12 volt socket U5 - assembly overview .....	148
6.2	12 volt socket U5 - remove and install .....	148
6.3	12 Volt socket U5 - replace .....	151
<b>97</b>	<b>- Wiring .....</b>	<b>154</b>
<b>1</b>	<b>Relay support, fuse supports, fuse boxes .....</b>	<b>154</b>
1.1	Fuse box - remove and install .....	154
1.2	Fuse holder and relay support in the fuse box - remove and install .....	156
1.3	Fuse holder and relay support behind the driver-side dash board - remove and install .....	159
<b>2</b>	<b>Control units .....</b>	<b>166</b>
2.1	Onboard supply control unit - remove and install .....	166
2.2	Data bus diagnostics interface - remove and install .....	170
<b>3</b>	<b>Connectors .....</b>	<b>171</b>
3.1	Connectors and electric cables harnesses - repair .....	171
<b>4</b>	<b>Unlocking and disassembling the terminals .....</b>	<b>172</b>
<b>5</b>	<b>Aerial cable repairs .....</b>	<b>173</b>
<b>6</b>	<b>Vehicle diagnostic, testing and information system .....</b>	<b>174</b>
6.1	Online system test .....	174