



Contents

00 - Technical data	1
1 Basic instructions	1
2 Vehicle identification data	2
2.1 Vehicle identification number	2
2.2 Type plate	2
2.3 Vehicle data sticker	3
3 Vehicle identification data	5
3.1 Vehicle identification number	5
3.2 Type plate	5
3.3 Vehicle data sticker	6
4 Safety information	8
5 Gas vehicles	9
6 Body work for which HV electrical system must be de-energised	10
6.1 The following body work requires the HV electrical system to be de-energised.	10
7 Moulded foam inserts	11
8 Galvanized body parts, high- and higher-strength and hot-formed body panels	12
8.1 Installing	12
8.2 Overview	13
9 Galvanized body parts, high- and higher-strength and hot-formed body panels	17
9.1 Installing	17
9.2 Overview	17
10 Gaps	21
10.1 Body, front	21
10.2 Body, centre	22
10.3 Body, rear	24
11 Gaps	26
11.1 Body, front	26
11.2 Body, centre	27
11.3 Body, rear	29
12 Body dimensions	31
12.1 Body, front	31
12.2 Body, centre	33
12.3 Body, rear	41
12.4 Floor panel, front	42
12.5 Floor panel, centre	43
12.6 Floor panel, rear	44
13 Body dimensions	46
13.1 Body, front	46
13.2 Body, centre	48
13.3 Body, rear	54
13.4 Floor panel, front	55
13.5 Floor panel, centre	56
13.6 Floor panel, rear	57
14 Alignment jig	59
14.1 Overview	59
14.2 Overview	59
14.3 Portal gauge	60
50 - Body - front	61
1 Renewing right bracket	61
1.1 Tools	61



1.2	Removing	61
1.3	Installing	63
2	Renewing right bracket	66
2.1	Tools	66
2.2	Removing	66
2.3	Installing	68
3	Renewing left bracket	71
3.1	Tools	71
3.2	Removing	71
3.3	Installing	73
4	Renewing mounting bracket for subframe	76
4.1	Tools	76
4.2	Removing	76
4.3	Installing	79
5	Renewing mounting bracket for subframe	83
5.1	Tools	83
5.2	Removing	83
5.3	Installing	86
6	Renewing bumper bracket	90
6.1	Tools	90
6.2	Removing	90
6.3	Installing	92
7	Renewing bumper bracket	95
7.1	Tools	95
7.2	Removing	95
7.3	Installing	97
8	Renewing upper wheel housing longitudinal member	100
8.1	Tools	101
8.2	Removing	101
8.3	Installing	106
9	Renewing front wheel housing	110
9.1	Tools	111
9.2	Removing	111
9.3	Installing	114
10	Renewing front longitudinal member	119
10.1	Tools	120
10.2	Removing	120
10.3	Installing	123
11	Renewing front longitudinal member	128
11.1	Tools	129
11.2	Removing	129
11.3	Installing	132
12	Repairing threads for securing subframe	137
12.1	Contents of thread repair kit	138
12.2	Repairing threads	139
51 - Body - centre		143
1	Renewing roof - vehicles without panorama tilting sunroof	143
1.1	Tools	144
1.2	Removing	144
1.3	Installing	146
2	Renewing roof - vehicles with panorama tilting sunroof	157
2.1	Tools	158
2.2	Removing	158



2.3	Installing	160
3	Renewing roof side member, 2-door	172
3.1	Tools	173
3.2	Removing	173
3.3	Installing	175
4	Renewing roof side member, 4-door	181
4.1	Tools	182
4.2	Removing	182
4.3	Installing	184
5	Renewing front cross member for roof	190
5.1	Tools	191
5.2	Removing	191
5.3	Installing	192
6	Renewing front roof cross member - vehicles with panorama tilting sunroof	194
6.1	Tools	195
6.2	Removing	195
6.3	Installing	196
7	Renewing roof reinforcement - models without panorama tilting sunroof	199
7.1	Tools	200
7.2	Removing	200
7.3	Installing	201
8	Renewing rear roof cross member	203
8.1	Tools	204
8.2	Removing	204
8.3	Installing	206
9	Renewing A-pillar	208
9.1	Tools	209
9.2	Removing	209
9.3	Installing	212
10	Renewing A-pillar reinforcement - part section	219
10.1	Tools	220
10.2	Removing	220
10.3	Installing	224
11	Renewing B-pillar - 4-door	232
11.1	Tools	233
11.2	Removing	233
11.3	Installing	235
12	Renewing B-pillar reinforcement (2-door models)	248
12.1	Tools	249
12.2	Removing	249
12.3	Installing	252
13	Renewing B-pillar reinforcement (4-door models)	261
13.1	Tools	262
13.2	Removing	262
13.3	Installing	265
14	Renewing outer side member - 2-door	276
14.1	Tools	278
14.2	Removing	278
14.3	Installing	280
15	Renewing side member reinforcement - centre part section	283
15.1	Tools	284
15.2	Removing	284
15.3	Installing	285



16	Renewing rear side member reinforcement (2-door)	289
16.1	Tools	290
16.2	Removing	290
16.3	Installing	291
53	Body - rear	295
1	Renewing cross panel	295
1.1	Tools	296
1.2	Removing	296
1.3	Installing	297
2	Renewing sealing channel reinforcement	300
2.1	Tools	301
2.2	Removing	301
2.3	Installing	303
3	Renewing lock carrier	307
3.1	Tools	308
3.2	Removing	308
3.3	Installing	309
4	Renewing tail light mounting	311
4.1	Tools	312
4.2	Removing	312
4.3	Installing	313
5	Renewing luggage compartment floor	317
5.1	Tools	318
5.2	Removing	318
5.3	Installing	319
6	Renewing C-pillar reinforcement - part section	324
6.1	Tools	325
6.2	Removing	325
6.3	Installing	327
7	Renewing cover plate for rear longitudinal member	330
7.1	Tools	331
7.2	Removing	331
7.3	Installing	332
8	Renewing rear axle mounting bracket	337
8.1	Tools	338
8.2	Removing	338
8.3	Installing	339
9	Renewing rear axle mounting bracket	342
9.1	Tools	343
9.2	Removing	343
9.3	Installing	344
10	Renewing rear longitudinal member - part section	347
10.1	Tools	348
10.2	Removing	348
10.3	Installing	350
11	Renewing side panel - 2-door	353
11.1	Tools	354
11.2	Removing	354
11.3	Installing	356
12	Renewing side panel - 4-door	363
12.1	Tools	364
12.2	Removing	364
12.3	Installing	366



13	Renewing outer wheel housing liner	372
13.1	Tools	373
13.2	Removing	373
13.3	Installing	375