



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety precautions when handling refrigerants	1
1.3 Safety measures when working on vehicles with a start/stop system	2
1.4 Safety precautions when working in the vicinity of high-voltage components	2
2 General information	3
2.1 Notes concerning odours in air conditioned vehicles	3
2.2 Type plates	3
3 Repair notes	5
3.1 Working on refrigerant circuit	5
3.2 General repair instructions	5
3.3 Refrigerant circuit seals	5
4 Technical data	7
4.1 Refrigerant capacity	7
4.2 Refrigerant oil capacities	7
4.3 Oil distribution	8
80 - Heating	9
1 Overview of fitting locations - heating	9
1.1 Overview of fitting locations - components not located in passenger compartment	9
1.2 Overview of fitting locations - components located in front section of passenger compartment	11
2 Actuators	13
2.1 Removing and installing temperature flap actuator	13
2.2 Removing and installing defroster and air distribution flap actuator	13
2.3 Removing and installing flexible shaft for air distribution	13
2.4 Removing and installing flexible shaft for temperature flap	13
3 Heater	14
3.1 Assembly overview – heater unit	14
3.2 Removing and installing fresh air blower V2	15
3.3 Removing and installing fresh air blower series resistor with overheating fuse N24	15
3.4 Removing and installing heat exchanger	15
3.5 Removing and installing heater unit	15
3.6 Dismantling and assembling heater unit	15
4 Air duct	16
4.1 Assembly overview - air duct and air distribution in passenger compartment	16
4.2 Removing and installing centre vent	16
4.3 Removing vents on driver side or front passenger side	16
4.4 Removing and installing footwell vent on driver side or front passenger side	16
4.5 Removing and installing intermediate piece for defroster vent	16
4.6 Removing and installing intermediate piece for centre vent	16
4.7 Removing and installing fresh air intake	16
4.8 Removing and installing forced ventilation for passenger compartment	17
4.9 Checking forced ventilation for passenger compartment	17
5 Operating and display unit	18
5.1 Overview of operating and display unit	18
5.2 Removing and installing operating and display unit	18
5.3 Multi-pin connector pin assignment on back of operating and display unit	18
6 Other controlling and regulating components	20
6.1 Removing and installing ambient temperature sensor G17	20



87 - Air conditioning system	21
1 Overview of fitting locations - air conditioning system	21
1.1 Overview of fitting locations - components not located in passenger compartment	21
1.2 Overview of fitting locations - components located in front section of passenger compartment	24
2 Refrigerant circuit	26
2.1 System overview - refrigerant circuit	26
2.2 Removing and installing high-pressure sender G65	28
2.3 Removing and installing expansion valve	30
2.4 Removing and installing condenser	33
2.5 Removing and installing desiccant bag or cartridge	37
2.6 Removing and installing evacuating and charging valves on low and high-pressure side	42
2.7 Commissioning air conditioning system after filling refrigerant circuit	45
2.8 Removing and installing refrigerant line between condenser and evaporator	46
2.9 Removing and installing refrigerant line between condenser and air conditioner compressor	51
2.10 Removing and installing refrigerant line between air conditioner compressor and evaporator	56
3 Air conditioner compressor	62
3.1 Assembly overview - drive unit of air conditioner compressor	62
3.2 Assembly overview - pulley	63
3.3 Removing air conditioning compressor from and installing on bracket	64
3.4 Removing and installing air conditioner compressor	69
3.5 Removing and installing air conditioning system magnetic clutch N25	77
4 Control motors/actuators	80
4.1 Overview of fitting locations – front control motors	80
4.2 Removing and installing temperature flap control motor V68	82
4.3 Removing and installing centre flap control motor V70	85
4.4 Removing and installing air flow flap control motor V71	87
4.5 Removing and installing defroster flap control motor V107	90
4.6 Removing and installing temperature flap actuator	93
4.7 Removing and installing fresh air/recirculated air flap actuator	96
4.8 Removing and installing flexible shaft for air distribution	98
4.9 Removing and installing flexible shaft for temperature flap	99
4.10 Removing and installing fresh air/recirculated air flap cable	99
5 Front heater and air conditioning unit	101
5.1 Assembly overview - add-on parts of heater and air conditioning unit and of air intake box	101
5.2 Assembly overview – evaporator housing	110
5.3 Removing and installing evaporator	112
5.4 Removing and installing evaporator temperature sensor G308	119
5.5 Removing and installing heater and air conditioning unit	120
5.6 Dismantling and assembling heater and air conditioning unit	131
5.7 Removing and installing dust and pollen filter	133
5.8 Removing and installing fresh air blower V2	134
5.9 Removing and installing fresh air blower series resistor with overheating fuse N24	138
5.10 Removing and installing fresh air blower control unit J126	139
5.11 Removing and installing heat exchanger	142
5.12 Removing and installing condensation drain	144
5.13 Checking condensation drain	144
6 Air duct	146
6.1 Assembly overview - air duct and air distribution in passenger compartment	146
6.2 Removing and installing centre vent	147
6.3 Removing and installing defroster vent	147
6.4 Removing and installing dash panel vent, side	148
6.5 Removing and installing right or left vent	148



6.6	Removing and installing air duct for defroster vent	148
6.7	Removing and installing air duct for centre dash panel vent	149
6.8	Removing and installing right or left footwell vent	150
6.9	Checking forced ventilation for passenger compartment	150
6.10	Removing and installing forced ventilation for passenger compartment	150
6.11	Removing and installing fresh air intake	151
7	Operating and display unit	154
7.1	Overview of operating and display unit	154
7.2	Removing and installing operating and display unit	157
8	Other controlling and regulating components	161
8.1	Removing and installing ambient temperature sensor G17	161
8.2	Removing and installing sunlight penetration photosensor G107	161
8.3	Removing and installing humidity sender for air conditioning system G260	162
8.4	Repairing humidity sender for air conditioning system G260	165
8.5	Removing and installing centre vent temperature sender G191	166
8.6	Removing and installing footwell vent temperature sender G192	167