



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b>  | <b>1</b>  |
| <b>1 Safety information</b>   | <b>1</b>  |
| 1.1 Safety measures when working on vehicles with a start/stop system | 1         |
| <b>2 Identification</b>   | <b>2</b>  |
| 2.1 Gearbox identification  | 2         |
| <b>3 Repair instructions</b>  | <b>4</b>  |
| 3.1 General repair instructions                                       | 4         |
| <b>4 Technical data</b>   | <b>8</b>  |
| 4.1 Allocation gearbox - engine                                       | 8         |
| 4.2 Capacities  | 10        |
| 4.3 Calculation of gear ratios  | 10        |
| <b>5 Overview - power transmission</b>                                | <b>11</b> |
| <b>6 Electrical components</b>  | <b>13</b> |
| 6.1 Overview of fitting locations - electrical components             | 13        |
| <b>30 - Clutch</b>  | <b>15</b> |
| <b>1 Clutch mechanism</b>   | <b>15</b> |
| 1.1 Overview of fitting locations – clutch mechanism                  | 15        |
| 1.2 Assembly overview - pedal cluster                                 | 17        |
| 1.3 Assembly overview - clutch hydraulics                             | 21        |
| 1.4 Assembly overview - clutch release mechanism                      | 27        |
| 1.5 Removing and installing bearing bush                              | 29        |
| 1.6 Removing and installing clutch pedal                              | 30        |
| 1.7 Removing and installing over-centre spring                        | 33        |
| 1.8 Removing and installing extension spring                          | 35        |
| 1.9 Removing and installing mounting bracket                          | 37        |
| 1.10 Removing and installing clutch master cylinder                   | 48        |
| 1.11 Removing and installing clutch slave cylinder                    | 50        |
| 1.12 Removing and installing lines for clutch mechanism               | 53        |
| 1.13 Bleeding clutch mechanism  | 58        |
| 1.14 Removing and installing clutch pedal switch F36                  | 60        |
| 1.15 Checking clutch master cylinder and clutch slave cylinder        | 61        |
| 1.16 Removing and installing clutch position sender G476              | 62        |
| 1.17 Repairing clutch release mechanism                               | 65        |
| <b>2 Clutch</b>   | <b>68</b> |
| 2.1 Assembly overview - clutch  | 68        |
| 2.2 Removing and installing clutch                                    | 68        |
| <b>34 - Controls, housing</b>   | <b>74</b> |
| <b>1 Selector mechanism</b>   | <b>74</b> |
| 1.1 Installation position - selector mechanism                        | 74        |
| 1.2 Overview - selector mechanism                                     | 75        |
| 1.3 Assembly overview – gear knob and cover                           | 76        |
| 1.4 Assembly overview - Gear lever and selector housing               | 78        |
| 1.5 Assembly overview – selector cables                               | 81        |
| 1.6 Removing and installing gear knob                                 | 83        |
| 1.7 Emblem identification   | 86        |
| 1.8 Removing and installing selector mechanism                        | 87        |
| 1.9 Repairing selector mechanism                                      | 90        |
| 1.10 Adjusting selector mechanism                                     | 96        |
| 1.11 Checking selector mechanism                                      | 98        |
| 1.12 Dismantling and assembling selector mechanism                    | 99        |



|  |  |            |
|--|--|------------|
| 1.13                                   | Removing and installing selector cable                       | 104        |
| 1.14                                   | Renewing selector shaft seal                                 | 105        |
| <b>2</b>                               | <b>Removing and installing gearbox</b>                       | <b>108</b> |
| 2.1                                    | Specified torques for gearbox                                | 108        |
| 2.2                                    | Removing gearbox   | 108        |
| 2.3                                    | Installing gearbox   | 130        |
| <b>3</b>                               | <b>Assembly mountings</b>                                    | <b>142</b> |
| 3.1                                    | Assembly overview - assembly mountings                       | 142        |
| <b>4</b>                               | <b>Transporting gearbox</b>                                  | <b>147</b> |
| <b>5</b>                               | <b>Dismantling and assembling gearbox</b>                    | <b>149</b> |
| 5.1                                    | Schematic overview - gearbox                                 | 149        |
| 5.2                                    | Assembly overview - gearbox                                  | 149        |
| 5.3                                    | Assembly overview - clutch housing                           | 150        |
| 5.4                                    | Assembly overview - selector unit                            | 151        |
| 5.5                                    | Assembly overview - shafts, differential, selector mechanism | 152        |
| 5.6                                    | Removing and installing selector unit with gearbox installed | 153        |
| 5.7                                    | Renewing selector shaft sleeve                               | 158        |
| 5.8                                    | Dismantling and assembling gearbox                           | 159        |
| <b>6</b>                               | <b>Gearbox housing, clutch housing</b>                       | <b>167</b> |
| 6.1                                    | Assembly overview - gearbox housing and clutch housing       | 167        |
| <b>7</b>                               | <b>Securing to engine and gearbox support</b>                | <b>170</b> |
| <b>8</b>                               | <b>Gear oil</b>  | <b>172</b> |
| 8.1                                    | Checking gear oil level                                      | 172        |
| 8.2                                    | Draining and filling gear oil                                | 172        |
| <b>35 - Gears, shafts</b>              |  | <b>175</b> |
| <b>1</b>                               | <b>Input shaft</b>   | <b>175</b> |
| 1.1                                    | Assembly overview - input shaft                              | 175        |
| 1.2                                    | Dismantling and assembling input shaft                       | 177        |
| 1.3                                    | Adjusting input shaft  | 185        |
| 1.4                                    | Renewing input shaft seal                                    | 189        |
| <b>2</b>                               | <b>Output shaft</b>  | <b>192</b> |
| 2.1                                    | Assembly overview - output shaft                             | 192        |
| 2.2                                    | Dismantling and assembling output shaft                      | 195        |
| 2.3                                    | Adjusting output shaft                                       | 210        |
| <b>3</b>                               | <b>Reverse shaft</b>   | <b>216</b> |
| 3.1                                    | Removing and installing reverse shaft                        | 216        |
| <b>39 - Final drive - differential</b> |  | <b>217</b> |
| <b>1</b>                               | <b>Oil seals</b>   | <b>217</b> |
| 1.1                                    | Overview of fitting locations - seals                        | 217        |
| 1.2                                    | Renewing left seal   | 217        |
| 1.3                                    | Renewing right oil seal                                      | 220        |
| <b>2</b>                               | <b>Differential</b>  | <b>221</b> |
| 2.1                                    | Assembly overview - differential                             | 221        |
| 2.2                                    | Dismantling and assembling differential                      | 223        |
| 2.3                                    | Adjusting differential                                       | 231        |
| <b>3</b>                               | <b>Adjustment overview</b>                                   | <b>235</b> |