



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical Data	2
2.1 Correspondence (gearbox / engine)	2
2.2 Supply capacity (gearbox oil)	2
2.3 Gear ratio calculation "i"	2
3 Transmission assembly scheme	3
3.1 Transmission assembly scheme	3
4 Safety warnings	5
4.1 General safety standards	5
4.2 Vehicle towing instructions	5
4.3 Safety measures in drive tests with Vehicle Diagnostics, Testing, and Information System	6
5 Repair instructions	7
5.1 General repair instructions	7
6 Electrical components	11
6.1 Electrical components - assembly overview	11
30 - Clutch	12
1 Clutch mechanism	12
1.1 Clutch actuator VX64 - assembly overview	12
1.2 Clutch release mechanism - assembly overview	14
1.3 Ball-head pin - check and replace	15
1.4 Clutch actuator VX64 - remove and install	16
1.5 Clutch release mechanism - repair	22
2 Clutch	24
2.1 Clutch - assembly overview	24
2.2 Clutch - remove and install	25
34 - Controls, housing	29
1 Gear selection mechanism - adjust	29
1.1 Gear selector lever - assembly overview	29
1.2 Gear selector lever handle and upper cover - assembly overview	31
1.3 Gear selector lever and lower mounting - assembly overview	32
1.4 Gear selector lever handle - remove and install	33
1.5 Upper gear selector lever cover - remove and install	33
1.6 Gear selector lever boot - adjust	34
1.7 Gear selector lever - remove and install	35
1.8 Gear selector lever lower mounting - remove and install	36
1.9 Gear selector VX65 - assembly overview	38
1.10 Gear selector VX65 - remove and install	39
2 Gearbox - remove and install	49
2.1 Transmission - removal	49
2.2 Gearbox - installation	57
2.3 Transmission - tightening torques	60
3 Assembly mountings	61
3.1 Auxiliary frame - assembly overview	61
4 Gearbox - transport	63
5 Gearbox oil	65
5.1 Gearbox oil - check level	65



5.2	Gearbox oil - drain and fill	65
6	Gearbox - disassemble and assemble	68
6.1	Gearbox - schematic overview	68
6.2	gearbox - assembly overview	69
6.3	Clutch housing - assembly overview	70
6.4	Input shaft, output shaft, differential, gear selector, and selector forks	71
6.5	Selector shaft bushing - replace	72
6.6	Gearbox - disassemble and assemble	73
7	Gearbox and clutch housings	79
7.1	Transmission housing and transmission housing - assembly overview	79
8	Transmission - fasten to support	81
8.1	Transmission - fasten to the Support T10484	81
35	Gears, shafts	83
1	Input shaft	83
1.1	Input shaft (driving) - assembly overview	83
1.2	Input shaft (driving) - disassemble and assemble	85
1.3	Input shaft (driving) - adjust	92
1.4	Input shaft seal - replace	97
2	Output shaft	99
2.1	Output shaft - general overview of assembly	99
2.2	Output shaft - disassemble and assemble	102
2.3	Output shaft - adjust	111
3	Reverse gear shaft	117
3.1	Reverse gear shaft - remove and install	117
39	Final drive - differential	118
1	Gearbox seals	118
1.1	Gearbox seals - assembly overview	118
1.2	Gearbox seals - replace	119
2	Differential	121
2.1	Differential - general overview of assembly	121
2.2	Differential - disassemble and assemble	122
2.3	Differential - install	127
3	Input shaft, output shaft, and differential - adjust	132
4	Gearbox control unit	133
4.1	Electrical components - assembly overview	133
4.2	Automated gearbox control unit J514 - remove and install	133
4.3	Transmission input speed sensor G182 - remove and install	133