



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1</b> <b>— Change history —</b> .....	<b>1</b>
<b>2</b> <b>Safety instructions</b> .....	<b>2</b>
2.1 Safety measures regarding work on the fuel supply .....	2
2.2 Safety measures in test drives using testing and measurement devices .....	3
2.3 Safety measures when working on the cooling system .....	4
2.4 Safety measures when working on the ignition system .....	5
<b>3</b> <b>Identification</b> .....	<b>6</b>
3.1 Engine number/engine characteristics .....	6
<b>4</b> <b>Repair instructions</b> .....	<b>8</b>
4.1 Cleaning rules .....	8
4.2 General instructions .....	8
4.3 General repair instructions .....	8
4.4 Foreign bodies on the engine .....	9
4.5 Contact corrosion .....	9
4.6 Connection installation and fastening .....	9
4.7 Radiator and capacitor installation .....	9
<b>10 - Removing and installing engine</b> .....	<b>10</b>
<b>1</b> <b>Engine - remove and install</b> .....	<b>10</b>
1.1 Engine - removal .....	10
1.2 Engine - separate gearbox .....	18
1.3 Secure the engine to the engine and gearbox swivelling stand .....	20
1.4 Engine - installation .....	22
<b>2</b> <b>Power-drive unit supports</b> .....	<b>24</b>
2.1 Power unit brackets - assembly overview .....	24
2.2 Power unit bracket (engine side) - remove and install .....	26
2.3 Power-drive unit supports (gearbox side) - remove and install .....	27
2.4 Pendulum support (torque limiter) - remove and install .....	30
2.5 Support the engine in assembly position .....	30
2.6 Power-drive group support (engine side) - adjust .....	33
2.7 Additional notes and installation works in vehicles with air conditioning .....	33
<b>13 - Crankshaft group</b> .....	<b>35</b>
<b>1</b> <b>Cylinder block (pulley side)</b> .....	<b>35</b>
1.1 Poly-V belt mechanism - assembly overview .....	35
1.2 Poly-V belt mechanism - assembly overview .....	36
1.3 Cylinder block (pulley side) - assembly overview .....	37
1.4 Poly-V belt - remove and install .....	39
1.5 Poly-V belt - remove and install .....	41
1.6 Poly-V belt tensioner - remove and install .....	43
1.7 Engine console - remove and install .....	44
1.8 Crankshaft pulley (vibration damper) - remove and install .....	45
1.9 Crankshaft seal (pulley side) - replace .....	46
<b>2</b> <b>Cylinder block (gearbox side)</b> .....	<b>50</b>
2.1 Cylinder block (gearbox side) - assembly overview .....	50
2.2 Flywheel - remove and install .....	51
2.3 Crankshaft flange (flywheel side) - replace .....	52
<b>3</b> <b>Crankshaft</b> .....	<b>61</b>
3.1 Crankshaft - dimensions .....	61
<b>4</b> <b>Pistons and conrods</b> .....	<b>62</b>
4.1 Pistons and conrods - assembly overview .....	62



4.2	Pistons - remove and install	64
4.3	Pistons, rings, and cylinders - check	65
4.4	Conrod and cap (new part) - separate	67
4.5	Conrod radial clearance - check	68
4.6	Oil spray jet and valve - remove and install	68
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>70</b>
<b>1</b>	<b>Cylinder head - assembly and disassembly</b>	<b>70</b>
1.1	Cylinder head - assembly overview	70
1.2	Engine cylinder head - remove and install	72
1.3	Cylinder head cover with exhaust and inlet camshafts - remove and install	78
1.4	Compression - check	87
<b>2</b>	<b>Toothed belt drive</b>	<b>91</b>
2.1	Toothed belt - remove and install	91
2.2	Valve timing - check	102
2.3	Valve timing - adjust	106
<b>3</b>	<b>Camshaft mechanism</b>	<b>119</b>
3.1	Camshaft mechanism - assembly overview	119
3.2	Crankshaft - check axial clearance	121
3.3	Crankshaft seal - replace	122
3.4	Inlet camshaft regulator - remove and install	138
3.5	Exhaust camshaft sprocket - remove and install	144
3.6	Camshaft adjustment valve 1 N205 - remove and install	149
3.7	Valve stem sealant - replace	149
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>156</b>
4.1	Valve guides - check	156
4.2	Valves - check	156
4.3	Valve dimensions	157
<b>17</b>	<b>- Lubrication</b>	<b>158</b>
<b>1</b>	<b>Crankcase/oil pump</b>	<b>158</b>
1.1	Crankcase/oil pump - assembly overview	158
1.2	Engine oil	161
1.3	Lower sump - remove and install	162
1.4	Upper crankcase - remove and install	163
1.5	Oil pump - remove and install	167
<b>2</b>	<b>Engine crankcase ventilation</b>	<b>170</b>
2.1	Engine crankcase ventilation - assembly overview	170
2.2	Crankcase ventilation device - remove and install	171
<b>3</b>	<b>Oil filter/ Oil pressure switch F1</b>	<b>173</b>
3.1	Oil pressure switch F1 - remove and install	173
3.2	Oil pressure and Oil pressure switch F1 - check	174
3.3	Oil filter - remove and install	176
<b>19</b>	<b>- Cooling</b>	<b>178</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>178</b>
1.1	Hose connection diagram for cooling system	178
1.2	Cooling system - check air-tightness	178
1.3	Coolant tank flap - check safety valve	180
1.4	Cooling system - drainage and replenishment	181
<b>2</b>	<b>Water pump/coolant adjustment</b>	<b>190</b>
2.1	Water pump - assembly overview	190
2.2	Water pump - remove and install	192
2.3	Thermostat valve - assembly overview	196
2.4	Thermostat valve - removal and installation	198



2.5	Water pump toothed belt - remove and install	203
2.6	Water pump sprocket - remove and install	206
2.7	Coolant temperature sensor G62 - remove and install	207
<b>3</b>	<b>Radiator/ Radiator fan V7</b>	<b>210</b>
3.1	Radiator/ Radiator fan V7 - assembly overview	210
3.2	Radiator - remove and install	212
3.3	Radiator fan V7 air deflector - remove and install	215
3.4	Radiator fan V7 - remove and install	218
<b>20</b>	<b>Fuel supply system</b>	<b>221</b>
<b>1</b>	<b>Fuel reservoir</b>	<b>221</b>
1.1	Fuel tank - assembly overview	221
1.2	Cold start system components - remove and install	225
1.3	Fuel reservoir - remove and install	226
1.4	Fuel tank - drain	230
<b>2</b>	<b>Fuel pump (pre-supply pump) G6 / Fuel gauge sensor G</b>	<b>237</b>
2.1	Fuel pump (pre-supply pump) G6 and Fuel gauge sensor G - assembly overview	237
2.2	Fuel pump (pre-supply pump) G6 / Fuel gauge sensor G - remove and install	239
2.3	Fuel gauge sensor G - remove and install	243
<b>3</b>	<b>Quick-release fastener with button</b>	<b>245</b>
3.1	Quick-release fastener with button - disconnect	245
<b>4</b>	<b>Fuel filter</b>	<b>249</b>
4.1	Fuel filter - remove and install	249
<b>5</b>	<b>Activated charcoal filter system</b>	<b>250</b>
5.1	Activated charcoal filter system - operation	250
5.2	Activated charcoal filter system - assembly overview	251
5.3	Fuel tank ventilation system - check	252
5.4	Activated charcoal filter - remove and install	258
<b>6</b>	<b>Engine power electronic adjustment (electronic accelerator)</b>	<b>263</b>
6.1	Accelerator pedal module (electric throttle) - assembly overview	263
6.2	Accelerator pedal module (electric throttle) - remove and install	264
<b>7</b>	<b>Fuel pump (pre-supply pump) G6</b>	<b>266</b>
7.1	Fuel pump (pre-supply pump) G6 - check	266
<b>24</b>	<b>Mixture preparation - injection</b>	<b>287</b>
<b>1</b>	<b>Injection system</b>	<b>287</b>
1.1	Injection system - assembly overview	287
1.2	Combustion system - assembly overview	290
<b>2</b>	<b>Injection valves</b>	<b>292</b>
2.1	Fuel rail with injection valves - assembly overview	292
2.2	Injection valves - remove and install	295
2.3	Injection valves - check	299
<b>3</b>	<b>Air cleaner</b>	<b>305</b>
3.1	Air filter - assembly overview	305
3.2	Air filter - remove and install	306
<b>4</b>	<b>Intake manifold</b>	<b>307</b>
4.1	Intake manifold - assembly overview	307
4.2	Intake manifold - remove and install	308
4.3	Throttle butterfly valve control unit J338 - remove and install	310
4.4	Throttle valve control unit J338 - clean	312
<b>5</b>	<b>Transmitters and sensors</b>	<b>313</b>
5.1	Intake manifold pressure sensor G71 with Air intake temperature sensor G42 - remove and install	313
<b>6</b>	<b>Engine control unit J623</b>	<b>315</b>



6.1	Engine control unit J623 - assembly overview	315
6.2	Engine control unit J623 - remove and install	316
6.3	Engine control unit J623 support - remove and install	319
<b>7</b>	<b>Lambda probe</b>	<b>320</b>
7.1	Lambda probe - remove and install	320
<b>26</b>	<b>- Exhaust system</b>	<b>324</b>
<b>1</b>	<b>Silencer/exhaust pipes</b>	<b>324</b>
1.1	Silencer - assembly overview	324
1.2	Silencer/exhaust pipes - separation	325
1.3	Silencer - remove and install	326
1.4	Exhaust system - check air-tightness	328
1.5	Double clamp - installation position	329
<b>2</b>	<b>Exhaust system</b>	<b>330</b>
2.1	Front exhaust pipe - assembly overview	330
2.2	Catalytic converter - remove and install	331
<b>28</b>	<b>- Ignition system</b>	<b>334</b>
<b>1</b>	<b>Ignition system</b>	<b>334</b>
1.1	Ignition system - assembly overview	334
1.2	Ignition coils with final power stage - assembly overview	335
1.3	Spark plugs Q - technical data	336
1.4	Ignition coil with final power stage - remove and install	336
1.5	Knock sensor 1 G61 - remove and install	339
1.6	Hall Sensor G40 - remove and install	340
1.7	Engine speed sensor G28 - remove and install	341
1.8	Glow plug relay J52 and Glow plug activation control unit J370 - remove and install	344