



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
<b>10 - Removing and installing engine</b>	<b>7</b>
<b>1 Removing and installing engine</b>	<b>7</b>
1.1 Removing engine	7
1.2 Separating engine and gearbox	14
1.3 Securing engine on engine and gearbox support	16
1.4 Installing engine	18
<b>2 Assembly mountings</b>	<b>20</b>
2.1 Assembly overview - assembly mountings	20
2.2 Removing and installing engine mounting	22
2.3 Removing and installing gearbox mounting	22
2.4 Removing and installing pendulum support	23
2.5 Supporting engine in installation position	24
2.6 Adjusting assembly mountings	35
2.7 Checking adjustment of assembly mountings	35
<b>13 - Crankshaft group</b>	<b>36</b>
<b>1 Cylinder block (pulley end)</b>	<b>36</b>
1.1 Assembly overview - poly V-belt drive	36
1.2 Assembly overview - cylinder block (pulley end)	36
1.3 Removing and installing poly-V belt	38
1.4 Removing and installing engine support	41
1.5 Renewing crankshaft oil seal - belt pulley end	43
<b>2 Cylinder block, gearbox end</b>	<b>46</b>
2.1 Assembly overview - cylinder block, gearbox end	46
2.2 Removing and installing flywheel	47
2.3 Removing and installing sealing flange on gearbox side	48
<b>3 Crankshaft</b>	<b>60</b>
3.1 Crankshaft dimensions	60
<b>4 Pistons and conrods</b>	<b>61</b>
4.1 Assembly overview - pistons and conrods	61
4.2 Checking pistons and cylinder bores	63
4.3 Separating new conrod	65
4.4 Setting piston to TDC position	66
<b>15 - Cylinder head, valve gear</b>	<b>69</b>
<b>1 Cylinder head</b>	<b>69</b>



1.1	Assembly overview - cylinder head	69
1.2	Removing and installing cylinder head	72
1.3	Removing and installing camshaft housing	78
1.4	Checking compression	83
<b>2</b>	<b>Toothed belt drive</b>	<b>85</b>
2.1	Assembly overview - toothed belt	85
2.2	Removing and installing toothed belt	87
2.3	Preassembling and installing valve timing tool	108
2.4	Checking valve timing	116
2.5	Adjusting valve timing	120
2.6	Removing toothed belt from camshaft	131
<b>3</b>	<b>Valve gear</b>	<b>138</b>
3.1	Assembly overview - valve gear	138
3.2	Measuring axial play of camshaft	139
3.3	Removing and installing camshaft adjuster	140
3.4	Removing and installing toothed belt pulley	146
3.5	Removing and installing camshaft oil seal	150
3.6	Removing and installing valve stem seals	160
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>171</b>
4.1	Checking valve guides	171
<b>17 - Lubrication</b>		<b>172</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>172</b>
1.1	Assembly overview - sump/oil pump	172
1.2	Engine oil:	176
1.3	Removing and installing sump	176
1.4	Removing and installing oil pump	181
<b>2</b>	<b>Crankcase ventilation</b>	<b>184</b>
2.1	Assembly overview - crankcase breather system	184
2.2	Removing and installing oil separator	185
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>189</b>
3.1	Removing and installing oil pressure switch F1	189
3.2	Checking oil pressure and oil pressure switch	190
3.3	Removing and installing oil filter housing	192
<b>19 - Cooling</b>		<b>194</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>194</b>
1.1	Connection diagram - coolant hoses	194
1.2	Checking cooling system for leaks	194
1.3	Draining and adding coolant	198
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>206</b>
2.1	Assembly overview - coolant pump	206
2.2	Assembly overview - thermostat	209
2.3	Removing and installing coolant pump	212
2.4	Removing and installing thermostat	217
2.5	Removing and installing toothed belt for coolant pump	223
2.6	Removing and installing coolant temperature sender G62	226
2.7	Removing and installing radiator fan thermal switch F18	229
<b>3</b>	<b>Radiator, radiator fan</b>	<b>232</b>
3.1	Assembly overview - radiator/radiator fan	232
3.2	Removing and installing radiator	234
3.3	Removing and installing radiator cowl with radiator fan	239
3.4	Removing and installing radiator fan V7	241
<b>24 - Mixture preparation - injection</b>		<b>245</b>



<b>1</b>	<b>Injection system</b>	<b>245</b>
1.1	Overview of fitting locations - injection system	245
1.2	Assembly overview - fuel system	248
<b>2</b>	<b>Injectors</b>	<b>251</b>
2.1	Assembly overview - fuel rail with injectors	251
2.2	Removing and installing injectors	251
2.3	Checking injectors	253
2.4	Cleaning injectors	258
<b>3</b>	<b>Air filter</b>	<b>260</b>
3.1	Assembly overview - air filter housing	260
3.2	Removing and installing air filter housing	260
<b>4</b>	<b>Intake manifold</b>	<b>262</b>
4.1	Assembly overview – intake manifold	262
4.2	Removing and installing intake manifold	264
4.3	Removing and installing throttle valve module GX3	267
4.4	Cleaning throttle valve module GX3	269
<b>5</b>	<b>Senders and sensors</b>	<b>271</b>
5.1	Removing and installing intake manifold sender GX9	271
<b>6</b>	<b>Engine control unit</b>	<b>273</b>
6.1	Assembly overview – motor control unit	273
6.2	Removing and installing engine control unit J623	274
6.3	Removing and installing engine (motor) control unit J623 with protective housing	278
<b>7</b>	<b>Lambda probe</b>	<b>280</b>
7.1	Assembly overview - Lambda probe	280
7.2	Removing and installing Lambda probe	284
<b>26</b>	<b>- Exhaust system</b>	<b>289</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>289</b>
1.1	Assembly overview – silencers	289
1.2	Separating exhaust pipes from silencers	290
1.3	Removing and installing silencer	291
1.4	Checking exhaust system for leaks	293
1.5	Installation position of clamp	294
<b>2</b>	<b>Emission control</b>	<b>296</b>
2.1	Assembly overview – emission control	296
2.2	Removing and installing catalytic converter	299
<b>28</b>	<b>- Ignition system</b>	<b>303</b>
<b>1</b>	<b>Ignition system</b>	<b>303</b>
1.1	Assembly overview - ignition system	303
1.2	Removing and installing ignition coils with output stage	305
1.3	Removing and installing knock sensor 1 G61	308
1.4	Removing and installing Hall sender	309
1.5	Removing and installing engine speed sender G28	310