



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety instructions	2
2.1 Safety measures regarding work on the fuel supply	2
2.2 Safety measures in test drives using testing and measurement devices	3
2.3 Safety measures when working on the cooling system	4
2.4 Safety measures when working on the ignition system	5
3 Identification	6
3.1 Engine number/engine characteristics	6
4 Repair instructions	8
4.1 Cleanliness rules	8
4.2 General instructions	8
4.3 General repair instructions	8
4.4 Foreign bodies on the engine	9
4.5 Contact corrosion	9
4.6 Connection installation and fastening	9
4.7 Radiator and capacitor installation	9
10 - Removing and installing engine	10
1 Engine - remove and install	10
1.1 Engine - removal	10
1.2 Engine - separate gearbox	24
1.3 Engine in the gearbox and engine support - secure	26
1.4 Engine - installation	28
2 Power-drive unit supports	31
2.1 Power unit brackets - assembly overview	31
2.2 Power unit bracket (engine) - remove and install	33
2.3 Power unit bracket (gearbox) - remove and install	34
2.4 Pendulum support (torque limiter) - remove and install	35
2.5 Support the engine in assembly position	36
2.6 Support for power-unit - adjust	44
2.7 Additional notes and installation works in vehicles with air conditioning	44
13 - Crankshaft group	46
1 Cylinder block (pulley side)	46
1.1 Poly-V belt mechanism - assembly overview	46
1.2 Poly-V belt - remove and install	48
1.3 Poly-V belt tensioner - remove and install	50
1.4 Crankshaft pulley (vibration damper) - remove and install	50
1.5 Engine console - remove and install	55
1.6 Crankshaft seal (pulley side) - replace	57
2 Cylinder block (gearbox side)	61
2.1 Cylinder block (gearbox side) - assembly overview	61
2.2 Flywheel - remove and install	63
2.3 Crankshaft flange (flywheel side) - replace	65
3 Crankshaft	78
3.1 Crankshaft dimensions	78
3.2 Crankshaft axial clearance - check	78
4 Pistons and conrods	80
4.1 Pistons and conrods - assembly overview	80
4.2 Pistons - remove and install	83
4.3 Pistons, rings, and cylinders - check	84



4.4	Conrod and cap (new part) - separate	87
4.5	Conrod radial clearance - check	87
4.6	Oil spray jet and valve - remove and install	88
15	Cylinder head, valve gear	90
1	Engine cylinder head	90
1.1	Engine cylinder head - assembly overview	90
1.2	Cylinder head cover with exhaust and inlet camshafts - assembly overview	92
1.3	Cylinder head - remove and install	94
1.4	Cylinder head cover with exhaust and inlet camshafts - remove and install	100
1.5	Cylinder compression - check	105
2	Toothed belt drive	108
2.1	Console, upper and lower cover of the toothed belt - assembly overview	108
2.2	Toothed belt - assembly overview	108
2.3	Toothed belt - remove and install	110
2.4	Valve timing - check	114
2.5	Camshaft toothed belt - remove	127
3	Camshaft mechanism	143
3.1	Camshaft mechanism - assembly overview	143
3.2	Crankshaft - check axial clearance	145
3.3	Crankshaft seal - replace	146
3.4	Camshaft regulators - remove and install	153
3.5	Camshaft adjustment valve 1 N205 and Exhaust camshaft adjustment valve 1 N318 - remove and install	154
3.6	Valve stem sealant - replace	155
4	Inlet and exhaust valves	165
4.1	Valve guides - check	165
4.2	Valves - check	166
4.3	Valve dimensions	166
17	Lubrication	167
1	Crankcase/oil pump	167
1.1	Crankcase/oil pump - assembly overview	167
1.2	Lower sump - remove and install	170
1.3	Upper crankcase - remove and install	172
1.4	Oil pump - remove and install	176
1.5	Engine oil	178
2	Engine oil cooler	180
2.1	Engine oil cooler - assembly overview	180
2.2	Engine oil cooler - remove and install	180
3	Engine crankcase ventilation	182
3.1	Engine crankcase ventilation - assembly overview	182
3.2	Crankcase ventilation device - remove and install	183
4	Oil filter/Oil pressure switch F1	187
4.1	Oil filter/Oil pressure switch F1 - assembly overview	187
4.2	Oil filter - remove and install	187
4.3	Oil pressure switch 0.3...0.6 bar F1 - remove and install	188
4.4	Oil pressure and Oil pressure switch F1 - check	190
19	Cooling	193
1	Cooling system/coolant	193
1.1	Hose connection diagram for cooling system	193
1.2	Cooling system - check air-tightness	194
1.3	Coolant tank flap - check safety valve	196
1.4	Cooling system - drainage and replenishment	197



2	Water pump/coolant adjustment	208
2.1	Water pump/thermostatic valves - assembly overview	208
2.2	Air intake cooling pump V188 - assembly overview	211
2.3	Coolant temperature sensor - assembly overview	211
2.4	Air intake cooling pump V188 - remove and install	212
2.5	Water pump - remove and install	214
2.6	Thermostat valve - remove and install	219
2.7	Water pump toothed belt - remove and install	225
2.8	Water pump sprocket - remove and install	228
2.9	Coolant temperature sensor G62 - remove and install	229
2.10	Coolant temperature sensor on the radiator outlet G83 - remove and install	230
3	Cooling system pipes	232
3.1	Coolant system line - assembly overview	232
3.2	Cooling system line - remove and install	232
4	Radiator/radiator fan	235
4.1	Radiator/radiator fan - Assembly overview	235
4.2	Fan housing and radiator fan - Assembly overview	237
4.3	Radiator - remove and install	238
4.4	Intake air cooling circuit radiator - remove and install	243
4.5	Fan housing - remove and install	246
4.6	Radiator fan V7 - remove and install	246
20	Fuel supply system	248
1	Fuel tank	248
1.1	Fuel tank - assembly overview	248
1.2	Fuel tank - remove and install	251
1.3	Fuel tank - drain	256
2	Fuel pump (pre-supply pump) G6/Fuel gauge sensor G	265
2.1	Fuel pump (pre-supply pump) G6 and Fuel gauge sensor G - assembly overview	265
2.2	Fuel pump (pre-supply pump) G6/Fuel gauge sensor G - remove and install	267
2.3	Fuel gauge sensor G - remove and install	271
3	Quick-release fastener with button	274
3.1	Quick-release fastener with button - disconnect	274
4	Fuel filter	280
4.1	Fuel filter - remove and install	280
5	Activated charcoal filter system	282
5.1	Activated charcoal filter system - operation	282
5.2	Activated charcoal filter system - assembly overview	283
5.3	Fuel tank ventilation system - check	284
5.4	Activated charcoal filter - remove and install	292
6	Engine power electronic adjustment (electronic accelerator)	297
6.1	Accelerator pedal module (electric throttle) - assembly overview	297
6.2	Accelerator pedal module (electric throttle) - remove and install	297
7	Fuel pump (pre-supply pump) G6	300
7.1	Fuel pump (pre-supply pump) G6 - check	300
7.2	Fuel pump control unit J538 - remove and install	329
8	Transmitters and sensors	331
8.1	Ethanol concentration sensor G708 - remove and install	331
21	Turbocharging/supercharging	333
1	Exhaust gas turbocharger	333
1.1	Exhaust gas turbocharger - Assembly overview	333
1.2	Exhaust gas turbocharger - remove and install	336
1.3	Load pressure control V465 - remove and install	340



1.4	Turbocharger nozzle - remove and install	342
2	Supercharging air system	345
2.1	Supercharging air system - Assembly overview	345
2.2	Air duct - remove and install	347
2.3	Supercharging air intercooler - remove and install	348
2.4	Load pressure sensor GX26 - remove and install	349
2.5	Charge air system - check air-tightness	350
24	Mixture preparation - injection	353
1	Injection system	353
1.1	Injection system - assembly overview	353
1.2	Fuel system - relieve pressure	357
2	Air cleaner	359
2.1	Air filter - assembly overview	359
2.2	Air filter - remove and install	359
3	Intake manifold	363
3.1	Intake manifold - assembly overview	363
3.2	Intake manifold - remove and install	365
3.3	Throttle butterfly valve control unit GX3 - remove and install	369
3.4	Throttle valve control unit GX3 - clean	370
4	Injection valves	372
4.1	Fuel rail with injection valves - assembly overview	372
4.2	Fuel distributor - removal and installation	374
4.3	Injection valves - remove and install	375
4.4	Injection valves - clean	381
5	Transmitters and sensors	383
5.1	Intake manifold sensor GX9 - remove and install	383
5.2	Fuel pressure sensor G247 - remove and install	384
5.3	Fuel pressure sensor G247 - check	385
6	High pressure pump	388
6.1	High pressure pump - assembly overview	388
6.2	High pressure pump - remove and install	390
6.3	High pressure line - remove and install	392
7	Lambda probe	395
7.1	Lambda probe - assembly overview	395
7.2	Lambda probe 1 before the catalytic converter GX10/Lambda probe 1 after the catalytic converter GX7 - remove and install	396
8	Engine control unit J623	399
8.1	Engine control unit J623 - assembly overview	399
8.2	Engine control unit J623 - remove and install	399
8.3	Engine control unit J623 support - remove and install	401
26	Exhaust system	403
1	Silencer/exhaust pipes	403
1.1	Rear muffler with supports - assembly overview	403
1.2	Silencer/exhaust pipes - detach	404
1.3	Silencer - remove and install	406
1.4	Exhaust system - tension free alignment	408
1.5	Exhaust system - check air-tightness	408
1.6	Double clamp - installation position	409
2	Exhaust system	411
2.1	Front exhaust pipe with catalytic converter - assembly overview	411
2.2	Front exhaust pipe with catalytic converter - remove and install	414
28	Ignition system	418



1	Ignition system	418
1.1	Ignition system - assembly overview	418
1.2	Spark plugs Q - technical data	420
1.3	Ignition coil with final power stage - remove and install	420
1.4	Knock sensor 1 G61 - remove and install	423
1.5	Hall Sensor G40 - remove and install	424
1.6	Engine speed sensor G28 - remove and install	425