



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 General information</b>	<b>4</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
<b>20 - Fuel supply system</b>	<b>5</b>
<b>1 Fuel</b>	<b>5</b>
1.1 Assembly overview - fuel tank	5
1.2 Emptying fuel tank	7
1.3 Removing and installing fuel tank	16
<b>2 Fuel delivery unit, fuel gauge sender</b>	<b>23</b>
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	23
2.2 Removing and installing fuel delivery unit, fuel gauge sender	27
2.3 Removing and installing fuel gauge sender G	34
<b>3 Plug-in connectors</b>	<b>36</b>
3.1 Separating plug-in connectors	36
<b>4 Fuel filter</b>	<b>43</b>
<b>5 Activated charcoal filter system</b>	<b>44</b>
5.1 Assembly overview – activated charcoal filter system	44
5.2 Checking fuel tank breather	45
5.3 Removing and installing activated charcoal filter	55
<b>6 Accelerator pedal</b>	<b>59</b>
6.1 Assembly overview - accelerator module	59
6.2 Removing and installing accelerator pedal module GX2	59
<b>7 Fuel supply</b>	<b>62</b>
7.1 Checking fuel system pressurisation pump G6	62
7.2 Removing and installing fuel pump control unit J538	99