



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on vehicles with a gas system	2
2 Identification	5
2.1 Engine number/engine data	5
3 General information	6
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	6
20 - Fuel supply system	7
1 Fuel system	7
1.1 Overview of fitting locations - fuel system	7
2 Fuel	9
2.1 Assembly overview - fuel tank	9
2.2 Emptying fuel tank	11
2.3 Removing and installing fuel tank	15
2.4 Assembly overview - fuel tank shut-off valve	21
2.5 Assembly overview - filler neck	23
2.6 Closing fuel tank shut-off valve N361 / N362 by mechanical means	23
2.7 Removing and installing solenoid of fuel tank shut-off valve N361 / N362	24
2.8 Removing and installing fuel tank shut-off valve	26
2.9 Removing and installing filling connection	32
2.10 Removing and installing natural gas fuel tanks	36
2.11 Determining residual pressure in natural gas fuel tank	49
2.12 Assembly overview - natural gas fuel tank	59
2.13 Emptying natural gas fuel tanks	65
2.14 Aligning securing strap pads	73
2.15 Bonding protective film to natural gas fuel tank	74
2.16 Releasing pressure in high-pressure line	80
3 Fuel delivery unit, fuel gauge sender	82
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	82
3.2 Removing and installing fuel delivery unit, fuel gauge sender	83
3.3 Removing and installing fuel gauge sender G	86
4 Plug-in connectors	88
4.1 Separating plug-in connectors	88
5 Fuel filter	92
6 Activated charcoal filter system	93
6.1 Assembly overview – activated charcoal filter system	93
6.2 Removing and installing activated charcoal filter	94
6.3 Checking fuel tank breather	95
7 Accelerator pedal	101
7.1 Assembly overview - accelerator module	101
7.2 Removing and installing accelerator pedal module GX2	102
8 Fuel pump	104
8.1 Checking fuel system pressurisation pump G6	104