

001 - Basic equipment	1-15
1. Basic equipment	1
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	2
3. Terminal 15 voltage supply relay, Onboard supply control unit	3
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	4
5. Steering column combination switch, Onboard supply control unit	5
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	6
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit, Front interior light	7
8. Rotary light switch, Onboard supply control unit	8
9. Rotary light switch, Hazard warning lights button, Heated rear window button, Onboard supply control unit	9
10. Main and dip beam relay, Onboard supply control unit, Front left headlight	10
11. Onboard supply control unit, Front right headlight	11
12. Reversing light switch, Onboard supply control unit, Left tail light cluster, Right tail light cluster	12
13. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	13
14. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	14
15. Control unit in dash panel insert, Dash panel insert	15
002 - Convenience system, 2-door vehicle	16-21
1. Convenience system, 2-door vehicle	16
2. Driver side central locking lock unit, Onboard supply control unit	17
3. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	18
4. Mirror adjustment switch, Onboard supply control unit	19
5. Front right window regulator switch, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger side exterior mirror	20
6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	21
003 - Fuse assignment	22-41
1. Fuse assignment	22
2. Fuse holder A	23
3. Fuse holder A, Fuse holder B	24
4. Fuse holder B	25
5. Air conditioning system relay, Main relay, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	26
6. Fuse 3 on fuse holder C, Fuse 4 on fuse holder C	27
7. Steering column combination switch, Steering angle sender, Fuse 5 on fuse holder C	28
8. Fuse 6 on fuse holder C	29
9. Terminal 15 voltage supply relay, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C	30
10. Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	31
11. Main and dip beam relay, Terminal 75 voltage supply relay 1, Emergency braking function sensor unit, Relay for emergency braking function, Fuse 14 on fuse holder C, Fuse 15 on fuse holder C	32
12. Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C	33
13. Fuse 20 on fuse holder C, Fuse 21 on fuse holder C	34
14. Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C	35
15. Fuse 27 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C	36
16. Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 36 on fuse holder C	37
17. Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	38
18. Fuel pump relay, Fuse 42 on fuse holder C, Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C	39
19. Fuse 46 on fuse holder C, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 50 on fuse holder C	40
20. Voltage converter, Start/Stop operation button, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse 3 on fuse holder D, Fuse 4 on fuse holder D, Fuse 51 on fuse holder C	41

004 - 1.0l petrol engine , CHYA,CHYB	42-55
1. 1.0l petrol engine , CHYA,CHYB	42
2. Fuse holder C	43
3. Fuse holder C	44
4. Main relay, Engine/motor control unit, Terminal 75 voltage supply relay 1, Fuse holder C	45
5. Ignition/starter switch, Onboard supply control unit, Engine/motor control unit	46
6. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	47
7. High-pressure sender, Air conditioning system relay, Radiator fan control unit, Air conditioning system control unit, Onboard supply control unit, Engine/motor control unit	48
8. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	49
9. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	50
10. Lambda probe, Lambda probe after catalytic converter, Throttle valve module, Onboard supply control unit, Engine/motor control unit	51
11. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	52
12. Brake light switch, Clutch pedal switch, Engine speed sender, Knock sensor 1, Onboard supply control unit, Engine/motor control unit, Camshaft control valve 1	53
13. Oil pressure switch, Fuel delivery unit, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, Dash panel insert	54
14. Starter, Alternator, Starter inhibitor relay, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	55
005 - Power assisted steering	56-57
1. Power assisted steering	56
2. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Electromechanical power steering warning lamp, Fuse holder C, Electromechanical power steering motor	57
006 - Anti-lock brake system (ABS)	58-60
1. Anti-lock brake system (ABS)	58
2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Fuse holder C	59
3. Brake fluid level warning contact, Parking brake contact switch, ABS control unit, Brake fluid level warning lamp, ABS warning lamp, Traction control system warning lamp, Brake system warning lamp	60
007 - Air conditioning system with manual regulation , (9AB)	61-64
1. Air conditioning system with manual regulation , (9AB)	61
2. Rotary light switch, High-pressure sender, Air conditioning system relay, Air conditioning system control unit, Fuse holder C, Fuse 2 on fuse holder C, Air conditioner compressor	62
3. Air conditioning system relay, Air conditioning system control unit	63
4. Fresh air blower switch, Evaporator temperature sensor, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fuse 37 on fuse holder C	64
008 - Manually controlled heater , (9AA)	65-66
1. Manually controlled heater , (9AA)	65
2. Rotary light switch, Heater control unit, Fresh air blower series resistor with overheating fuse, Fuse holder C, Fresh air blower	66
009 - Panoramic sliding sunroof , (3FB)	67-68
1. Panoramic sliding sunroof , (3FB)	67
2. Sliding sunroof adjustment, Sliding sunroof adjustment control unit, Onboard supply control unit, Fuse holder C, Sliding sunroof motor	68
010 - Rear parking aid (PDC) , (7X1)	69-70
1. Rear parking aid (PDC) , (7X1)	69
2. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	70
011 - Radio system , (8UA),(8UB)	71-75
1. Radio system , (8UA),(8UB)	71
2. Onboard supply control unit, Data bus diagnostic interface, Radio, Front left treble loudspeaker, Fuse holder C	72
3. Radio, Front left loudspeaker, Front right loudspeaker, Rear left loudspeaker, Front right treble loudspeaker	73
4. Radio, Rear right loudspeaker, Roof aerial, Aerial, Aerial filter, Digital radio aerial	74
5. Portable navigation and infotainment system, Interface for portable navigation and infotainment system, Radio	75
012 - Heated seats	76-78
1. Heated seats	76

2. Rotary light switch, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit, Fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated ackrest for front passenger seat	77
3. Centre switch module in dash panel, Centre switch module 2 in dash panel, Button for left seat heating, Button for right seat heating, Heated front seats control unit	78
013 - Airbag systems	79-84
1. Airbag systems	79
2. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Fuse holder C	80
3. Steering column combination switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	81
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	82
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	83
6. Front airbag crash sensor for driver side, Airbag control unit, Dash panel insert, Airbag warning lamp, Diagnostic connection	84
014 - Radiator fan with air conditioning system	85-86
1. Radiator fan with air conditioning system	85
2. Radiator fan control unit, Engine control unit, Radiator fan	86
015 - Radiator fan with no air conditioning system , (9AA)	87-88
1. Radiator fan with no air conditioning system , (9AA)	87
2. Radiator fan thermal switch, Radiator fan	88
016 - Data bus network	89-93
1. Data bus network	89
2. ABS control unit, Airbag control unit, Control unit in dash panel insert, Onboard supply control unit	90
3. Parking aid control unit, Onboard supply control unit, Engine/motor control unit, Diagnostic connection	91
4. Selector lever, Steering column combination switch, Steering angle sender, Power steering control unit, Automated manual gearbox control unit, Onboard supply control unit, Control unit for structure-borne sound, Emergency braking function sensor unit	92
5. Alternator, Rain and light sensor, Sliding sunroof adjustment control unit, Climatronic control unit, Battery monitor control unit, Onboard supply control unit, Portable navigation and infotainment system, Radio, Amplifier	93
017 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AT)	94-99
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AT)	94
2. Front left speed sensor, ABS control unit, Fuse holder C	95
3. Steering column combination switch, Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Steering angle sender, ABS control unit	96
4. Parking brake contact switch, Steering angle sender, Power steering control unit, Dash panel insert, ABS warning lamp, Brake system warning lamp	97
5. Brake fluid level warning contact, Emergency braking function sensor unit, Relay for emergency braking function, Dash panel insert, Parking brake warning lamp, Warning lamp for electronic stabilisation program and TCS	98
6. Tyre Pressure Monitoring System button, Button for emergency braking function, Onboard supply control unit	99
018 - 1.0l petrol engine with start/stop system , CHYA,CHYB	100-115
1. 1.0l petrol engine with start/stop system , CHYA,CHYB	100
2. Fuse holder C	101
3. Fuse holder C	102
4. Fuse holder C	103
5. Air conditioning system relay, Main relay, Air conditioning system control unit, Engine/motor control unit, Terminal 75 voltage supply relay 1, Fuse holder B	104
6. Ignition/starter switch, Radiator fan control unit, Engine/motor control unit	105
7. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	106
8. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	107
9. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	108
10. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	109
11. Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender. Throttle valve module. Onboard supply control unit. Engine/motor control unit	110

12. Brake light switch, Engine speed sender, Knock sensor 1, Clutch position sender, Onboard supply control unit, Engine/motor control unit, Camshaft control valve 1	111
13. Oil pressure switch, Fuel delivery unit, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, Dash panel insert	112
14. Brake servo pressure sensor, Gearbox neutral position sender, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Dash panel insert	113
15. Voltage converter, Bonnet contact switch, Onboard supply control unit	114
16. Starter, Alternator, Start/Stop operation button, Battery monitor control unit, Onboard supply control unit, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	115
019 - Convenience system, 4-door vehicle	116-122
1. Convenience system, 4-door vehicle	116
2. Driver side central locking lock unit, Onboard supply control unit	117
3. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver side exterior mirror	118
4. Mirror adjustment switch, Onboard supply control unit	119
5. Front right window regulator switch, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger side exterior mirror	120
6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	121
7. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit	122
020 - Automated manual gearbox	123-126
1. Automated manual gearbox	123
2. Rotary light switch, Selector lever, Automated manual gearbox control unit, Parking lock solenoid, Fuse holder C	124
3. Gearbox input speed sender, Automated manual gearbox control unit, Onboard supply control unit, Clutch actuator, Clutch actuator motor	125
4. Automated manual gearbox control unit, Gear actuator, Gear actuator motor 1, Gear actuator motor 2	126
021 - 1.0l natural gas engine EcoFuel , CPGA	127-146
1. 1.0l natural gas engine EcoFuel , CPGA	127
2. Fuse holder C	128
3. Fuse holder C	129
4. Fuse holder C	130
5. Main relay, Engine/motor control unit, Fuse holder B	131
6. Ignition/starter switch, Engine/motor control unit	132
7. Steering column combination switch, Onboard supply control unit, Engine/motor control unit	133
8. Lambda probe, Lambda probe after catalytic converter, Onboard supply control unit, Engine/motor control unit	134
9. Onboard supply control unit, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	135
10. Onboard supply control unit, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	136
11. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	137
12. High-pressure sender, Air conditioning system relay, Air conditioning system control unit, Onboard supply control unit, Engine/motor control unit	138
13. Engine speed sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Onboard supply control unit, Engine/motor control unit	139
14. Hall sender, Knock sensor 1, Throttle valve module, Onboard supply control unit, Engine/motor control unit	140
15. Brake light switch, Clutch position sender, Onboard supply control unit, Engine/motor control unit, Camshaft control valve 1	141
16. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Onboard supply control unit, Engine/motor control unit, High-pressure valve for gas mode	142
17. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	143
18. Starter, Alternator, Start/Stop operation button, Bonnet contact switch, Battery monitor control unit, Onboard supply control unit, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	144
19. Voltage converter, Onboard supply control unit	145
20. Oil pressure switch, Fuel delivery unit, Relay for gas shut-off valves, Dash panel insert, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2	146
022 - Radiator fan with air conditioning system , (9AB),(9AK)	147-148
1. Radiator fan with air conditioning system , (9AB),(9AK)	147
2. Engine/motor control unit, Fuse holder C, Radiator fan, Radiator fan	148
023 - Airbag systems for RHD vehicles , (L0R)	149-155
1. Airbag systems for RHD vehicles . (L0R)	149

2. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Fuse holder C	150
3. Steering column combination switch, Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Driver seat belt tensioner igniter 1	151
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Seat occupied sensor on front passenger side, Airbag control unit, Front passenger seat belt tensioner igniter 1	152
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	153
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	154
7. Front airbag crash sensor for driver side, Airbag control unit, Dash panel insert, Airbag warning lamp, Diagnostic connection	155
024 - Sound system , (8RU),(9VG)	156-159
1. Sound system , (8RU),(9VG)	156
2. Amplifier, Fuse holder C	157
3. Front left loudspeaker, Front right loudspeaker, Amplifier, Front left treble loudspeaker, Front right treble loudspeaker	158
4. Rear left loudspeaker, Rear right loudspeaker, Amplifier, Subwoofer	159
025 - Basic equipment	160-175
1. Basic equipment	160
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	161
3. Terminal 15 voltage supply relay, Onboard supply control unit	162
4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	163
5. Steering column combination switch, Onboard supply control unit	164
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	165
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit, Front interior light	166
8. Rotary light switch, Onboard supply control unit	167
9. Rotary light switch, Onboard supply control unit	168
10. Hazard warning lights button, Heated rear window button, Onboard supply control unit	169
11. Main and dip beam relay, Onboard supply control unit, Front left headlight	170
12. Onboard supply control unit, Front right headlight	171
13. Reversing light switch, Onboard supply control unit, Left tail light cluster, Right tail light cluster	172
14. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	173
15. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	174
16. Control unit in dash panel insert, Dash panel insert	175
026 - Convenience system	176-190
1. Convenience system	176
2. Onboard supply control unit, Fuse holder C	177
3. Onboard supply control unit	178
4. Onboard supply control unit	179
5. Onboard supply control unit	180
6. Driver door contact switch, Onboard supply control unit, Central locking SAFELOCK function warning lamp	181
7. Onboard supply control unit, Driver side exterior mirror	182
8. Mirror adjustment switch, Onboard supply control unit	183
9. Onboard supply control unit, Passenger side exterior mirror	184
10. Front right window regulator switch, Onboard supply control unit	185
11. Onboard supply control unit, Front passenger door lock unit	186
12. Onboard supply control unit, Front passenger door lock unit	187
13. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	188
14. Rear left central locking lock unit, Onboard supply control unit	189
15. Rear right central locking lock unit, Onboard supply control unit	190
027 - Basic equipment	191-206
1. Basic equipment	191
2. Onboard supply control unit, Terminal 75 voltage supply relay 1	192
3. Terminal 15 voltage supply relay. Onboard supply control unit. Heated rear window	193

4. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor	194
5. Steering column combination switch, Onboard supply control unit, Windscreen and rear window washer pump	195
6. Turn signal switch, Steering column combination switch, Airbag coil connector and return ring with slip ring, Treble horn, Bass horn, Airbag control unit, Onboard supply control unit	196
7. Ignition/starter switch, Wiper motor control unit, Onboard supply control unit	197
8. Rotary light switch, Light switch, Onboard supply control unit	198
9. Rotary light switch, Onboard supply control unit, Front interior light	199
10. Hazard warning lights button, Heated rear window button, Onboard supply control unit	200
11. Main and dip beam relay, Onboard supply control unit, Front left headlight	201
12. Onboard supply control unit, Front right headlight	202
13. Reversing light switch, Onboard supply control unit, Left tail light cluster, Right tail light cluster	203
14. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter, Diagnostic connection	204
15. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface, Fuel pump control unit, Dash panel insert	205
16. Control unit in dash panel insert, Dash panel insert	206
028 - Fuse assignment	207-226
1. Fuse assignment	207
2. Fuse holder A	208
3. Fuse holder A, Fuse holder B	209
4. Fuse holder B	210
5. Rotary light switch, Air conditioning system relay, Main relay, Fuse 1 on fuse holder C, Fuse 2 on fuse holder C	211
6. Rotary light switch, Fuse 3 on fuse holder C, Fuse 4 on fuse holder C	212
7. Rotary light switch, Steering column combination switch, Fuse 5 on fuse holder C	213
8. Rotary light switch, Fuse 6 on fuse holder C	214
9. Rotary light switch, Terminal 15 voltage supply relay, Fuse 9 on fuse holder C, Fuse 10 on fuse holder C	215
10. Rotary light switch, Fuse 7 on fuse holder C, Fuse 8 on fuse holder C, Fuse 11 on fuse holder C, Fuse 12 on fuse holder C, Fuse 13 on fuse holder C	216
11. Rotary light switch, Main and dip beam relay, Terminal 75 voltage supply relay 1, Emergency braking function sensor unit, Relay for emergency braking function, Fuse 15 on fuse holder C	217
12. Rotary light switch, Fuse 14 on fuse holder C, Fuse 16 on fuse holder C, Fuse 17 on fuse holder C, Fuse 18 on fuse holder C, Fuse 19 on fuse holder C	218
13. Rotary light switch, Fuse 20 on fuse holder C, Fuse 21 on fuse holder C	219
14. Rotary light switch, Fuse 22 on fuse holder C, Fuse 23 on fuse holder C, Fuse 24 on fuse holder C, Fuse 25 on fuse holder C, Fuse 26 on fuse holder C	220
15. Rotary light switch, Fuse 27 on fuse holder C, Fuse 28 on fuse holder C, Fuse 29 on fuse holder C, Fuse 30 on fuse holder C, Fuse 31 on fuse holder C	221
16. Rotary light switch, Fuse 32 on fuse holder C, Fuse 33 on fuse holder C, Fuse 34 on fuse holder C, Fuse 36 on fuse holder C	222
17. Rotary light switch, Fuse 37 on fuse holder C, Fuse 38 on fuse holder C, Fuse 39 on fuse holder C, Fuse 40 on fuse holder C, Fuse 41 on fuse holder C	223
18. Rotary light switch, Fuel pump relay, Fuse 42 on fuse holder C, Fuse 43 on fuse holder C, Fuse 44 on fuse holder C, Fuse 45 on fuse holder C, Fuse 46 on fuse holder C	224
19. Rotary light switch, Fuse 47 on fuse holder C, Fuse 48 on fuse holder C, Fuse 50 on fuse holder C, Fuse 51 on fuse holder C	225
20. Voltage converter, Start/Stop operation button, Starter relay 1, Starter relay 2, Fuse 1 on fuse holder D, Fuse 2 on fuse holder D, Fuse 3 on fuse holder D, Fuse 4 on fuse holder D	226
029 - Basic equipment	227-254
1. Basic equipment	227
2. Fuse holder A, Fuse holder B, Fuse holder C	228
3. Fuse holder C	229
4. Fuse holder C	230
5. Fuse holder C	231
6. Fuse holder C	232
7. Fuse holder C	233
8. Terminal 15 voltage supply relay, Fuse holder C	234
9. Main and dip beam relay, Side light relay, Relay and fuse carrier 1	235
10. Onboard supply control unit	236
11. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	237

12. Onboard supply control unit, Front left headlight	238
13. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	239
14. Onboard supply control unit, Front right headlight	240
15. Turn signal switch, Steering column combination switch, Onboard supply control unit	241
16. Steering column combination switch, Onboard supply control unit	242
17. Steering column combination switch, Onboard supply control unit	243
18. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	244
19. Rotary light switch, Onboard supply control unit	245
20. Rotary light switch, Onboard supply control unit, Cigarette lighter	246
21. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	247
22. Onboard supply control unit, Left tail light cluster, Driver door lock unit	248
23. Reversing light switch, Onboard supply control unit, Right tail light cluster	249
24. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	250
25. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Front interior light, Luggage compartment light	251
26. Onboard supply control unit, Diagnostic connection, Number plate light	252
27. Control unit in dash panel insert, Dash panel insert	253
28. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	254
030 - Fuse assignment	255-285
1. Fuse assignment	255
2. Fuse holder A	256
3. Fuse holder B	257
4. Fuse holder C	258
5. Fuse holder C	259
6. Fuse holder C	260
7. Fuse holder C	261
8. Fuse holder C	262
9. Fuse holder C	263
10. Fuse holder C	264
11. Fuse holder C	265
12. Fuse holder C	266
13. Fuse holder C	267
14. Fuse holder C	268
15. Fuse holder C	269
16. Fuse holder C	270
17. Fuse holder C	271
18. Fuse holder C	272
19. Fuse holder C	273
20. Fuse holder C	274
21. Fuel pump relay, Main and dip beam relay, Relay for emergency braking function, Relay and fuse carrier 1	275
22. Main relay, Side light relay, Relay and fuse carrier 1	276
23. Starter inhibitor relay, Relay for gas shut-off valves, Relay and fuse carrier 1	277
24. Air conditioning system relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	278
25. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Relay and fuse carrier 1	279
26. Voltage converter	280
27. Steering column combination switch	281
28. Steering column combination switch, Engine/motor control unit	282
29. Onboard supply control unit, Engine/motor control unit	283
30. Onboard supply control unit	284
31. Onboard supply control unit	285
031 - Radio system , (I6U),(I6V),(8UB)	286-291
1. Radio system , (I6U),(I6V),(8UB)	286
2. Onboard supply control unit, Radio, Fuse holder C	287
3. Radio, Internal microphone, USB connection 1	288
4. Radio, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker	289
5. Radio, Rear left loudspeaker, Rear right loudspeaker	290
6. Radio, Roof aerial, Radio aerial 2, Left aerial module	291
032 - Reversing camera (Rear Assist) . (KA1)	292-293

1. Reversing camera (Rear Assist) , (KA1)	292
2. Reversing light switch, Onboard supply control unit, Control unit 1 for information electronics, Reversing camera, Fuse holder C	293
033 - Climatronic , (9AK)	294-299
1. Climatronic , (9AK)	294
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fuse holder B, Fuse holder C, Fresh air blower	295
3. Air conditioning system relay, Climatronic control unit, Onboard supply control unit, Air conditioner compressor	296
4. High-pressure sender, Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Temperature flap	297
5. Climatronic control unit, Centre flap, Defroster flap	298
6. Climatronic control unit, Air flow flap	299
034 - Seat heating , (4A3)	300-303
1. Seat heating , (4A3)	300
2. Rotary light switch, Onboard supply control unit, Data bus diagnostic interface, Heated front seats control unit, Fuse holder C	301
3. Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	302
4. Centre switch module in dash panel, Centre switch module 2 in dash panel, Button for left seat heating, Heated front seats control unit	303
035 - Anti-lock brake system (ABS) , (1AT)	304-308
1. Anti-lock brake system (ABS) , (1AT)	304
2. Front left speed sensor, ABS control unit, Fuse holder C	305
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, ABS control unit	306
4. Brake fluid level warning contact, Parking brake contact switch, Emergency braking function sensor unit, Relay for emergency braking function, Dash panel insert, ABS warning lamp, Brake system warning lamp, Parking brake warning lamp, Warning lamp for electronic stabilisation program and TCS	307
5. Tyre Pressure Monitoring System button, Button for emergency braking function, Onboard supply control unit	308
036 - Basic equipment	309-337
1. Basic equipment	309
2. Fuse holder A, Fuse holder B, Fuse holder C	310
3. Fuse holder C	311
4. Fuse holder C	312
5. Fuse holder C	313
6. Fuse holder C	314
7. Fuse holder C	315
8. Terminal 15 voltage supply relay, Fuse holder C	316
9. Main and dip beam relay, Side light relay, Relay and fuse carrier 1	317
10. Onboard supply control unit	318
11. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	319
12. Onboard supply control unit, Front left headlight	320
13. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	321
14. Onboard supply control unit, Front right headlight	322
15. Turn signal switch, Steering column combination switch, Onboard supply control unit	323
16. Steering column combination switch, Onboard supply control unit	324
17. Steering column combination switch, Onboard supply control unit	325
18. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	326
19. Rotary light switch, Onboard supply control unit	327
20. Rotary light switch, Onboard supply control unit, Cigarette lighter	328
21. Rotary light switch, Onboard supply control unit	329
22. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	330
23. Onboard supply control unit, Left tail light cluster, Driver door lock unit	331
24. Reversing light switch, Onboard supply control unit, Right tail light cluster	332
25. Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	333
26. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Front interior light, Luggage compartment light	334
27. Onboard supply control unit, Diagnostic connection, Number plate light	335
28. Control unit in dash panel insert, Dash panel insert	336
29. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit. Ambient temperature sensor. Coolant shortage indicator sender. Control unit in dash	337

panel insert, Dash panel insert	
037 - Fuse assignment	338-369
1. Fuse assignment	338
2. Fuse holder A	339
3. Fuse holder B	340
4. Fuse holder C	341
5. Fuse holder C	342
6. Fuse holder C	343
7. Fuse holder C	344
8. Fuse holder C	345
9. Fuse holder C	346
10. Fuse holder C	347
11. Fuse holder C, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	348
12. Fuse holder C	349
13. Fuse holder C	350
14. Fuse holder C	351
15. Fuse holder C	352
16. Fuse holder C	353
17. Fuse holder C, Radiator fan	354
18. Fuse holder C, Radiator fan	355
19. Fuse holder C	356
20. Fuse holder C	357
21. Voltage converter, Rotary light switch	358
22. Fuel pump relay, Main and dip beam relay, Relay for emergency braking function, Relay and fuse carrier 1	359
23. Main relay, Side light relay, Relay and fuse carrier 1	360
24. Starter inhibitor relay, Relay for gas shut-off valves, Relay and fuse carrier 1	361
25. Air conditioning system relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	362
26. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Terminal 75 voltage supply relay 1, Relay and fuse carrier 1	363
27. Steering column combination switch	364
28. Steering column combination switch	365
29. Onboard supply control unit, Engine/motor control unit	366
30. Onboard supply control unit	367
31. Onboard supply control unit	368
32. Onboard supply control unit	369
038 - Fuse assignment	370-400
1. Fuse assignment	370
2. Fuse holder A	371
3. Fuse holder B	372
4. Fuse holder C	373
5. Fuse holder C	374
6. Fuse holder C	375
7. Fuse holder C	376
8. Fuse holder C	377
9. Fuse holder C	378
10. Fuse holder C, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	379
11. Fuse holder C	380
12. Fuse holder C	381
13. Fuse holder C	382
14. Fuse holder C	383
15. Fuse holder C	384
16. Fuse holder C	385
17. Fuse holder C	386
18. Fuse holder C	387
19. Fuse holder C	388
20. Rotary light switch	389
21. Fuel pump relay, Main relay, Relay and fuse carrier 1	390
22. Main and dip beam relay, Starter inhibitor relay, Relay for emergency braking function, Relay and fuse carrier 1	391
23. Air conditioning system relay, Relay for gas shut-off valves, Relay and fuse carrier 1	392
24. Terminal 75 voltage supply relay 1, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	393
25. Daytime running lights changeover relay, Terminal 15 voltage supply relay, Relay and fuse carrier 1	394

26. Voltage converter	395
27. Steering column combination switch	396
28. Steering column combination switch, Engine/motor control unit	397
29. Onboard supply control unit, Engine/motor control unit	398
30. Onboard supply control unit	399
31. Onboard supply control unit	400
039 - 1.0l natural gas engine EcoFuel , CPGA	401-419
1. 1.0l natural gas engine EcoFuel , CPGA	401
2. Fuse holder B, Fuse holder C	402
3. Fuse holder C	403
4. Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	404
5. Onboard supply control unit	405
6. Main relay, Engine/motor control unit	406
7. Steering column combination switch, High-pressure sender, Air conditioning system control unit, Engine/motor control unit	407
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	408
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	409
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	410
11. Accelerator pedal module, Engine/motor control unit	411
12. Engine speed sender, Coolant temperature sender, Throttle valve module, Engine/motor control unit	412
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit	413
14. Brake light switch, Knock sensor 1, Clutch position sender, Engine/motor control unit, Camshaft control valve 1	414
15. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Engine/motor control unit, High-pressure valve for gas mode	415
16. Engine/motor control unit	416
17. Starter, Alternator, Bonnet contact switch, Battery monitor control unit, Starter relay 1, Starter relay 2	417
18. Voltage converter, Start/stop operation button, Relay for gas shut-off valves, Start/stop operation warning lamp, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2	418
19. Oil pressure switch, Fuel delivery unit, Dash panel insert	419
040 - 1.0l petrol engine , CHYA,CHYB,(7L3),(7L6)	420-438
1. 1.0l petrol engine , CHYA,CHYB,(7L3),(7L6)	420
2. Fuse holder B, Fuse holder C	421
3. Fuse holder C	422
4. Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	423
5. Onboard supply control unit	424
6. Onboard supply control unit, Engine/motor control unit	425
7. High-pressure sender, Air conditioning system control unit, Engine/motor control unit	426
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	427
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Ignition coil 1 with output stage, Ignition coil 2 with output stage	428
10. Accelerator pedal module, Engine/motor control unit, Ignition coil 3 with output stage	429
11. Accelerator pedal module, Clutch position sender, Engine/motor control unit, Camshaft control valve 1	430
12. Brake light switch, Engine speed sender, Throttle valve module, Engine/motor control unit	431
13. Intake manifold sender, Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	432
14. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Engine/motor control unit	433
15. Oil pressure switch, Fuel delivery unit, Engine/motor control unit, Dash panel insert	434
16. Main relay, Engine/motor control unit, Terminal 75 voltage supply relay 1	435
17. Voltage converter, Alternator, Bonnet contact switch	436
18. Battery monitor control unit	437
19. Starter, Start/stop operation button, Starter inhibitor relay, Starter relay 1, Starter relay 2, Start/stop operation warning lamp	438
041 - 1.0l petrol engine , CHZA	439-458
1. 1.0l petrol engine , CHZA	439
2. Starter, Battery monitor control unit, Fuse holder B	440
3. Voltage converter. Fuse holder C	441

4. Fuse holder C	442
5. Main relay, Terminal 75 voltage supply relay 1, Starter relay 1, Starter relay 2, Fuse and relay carrier	443
6. Onboard supply control unit, Data bus diagnostic interface	444
7. Engine/motor control unit	445
8. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	446
9. Brake light switch, Clutch pedal switch, Clutch position sender, Engine/motor control unit	447
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air conditioning system control unit, Engine/motor control unit	448
11. Radiator outlet coolant temperature sender, Engine/motor control unit	449
12. Alternator, Oil pressure sender, High-pressure sender, Engine/motor control unit	450
13. Start/stop operation button, Engine/motor control unit, Start/stop operation warning lamp, Vacuum pump for brakes	451
14. Hall sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	452
15. Intake manifold sender, Coolant temperature sender, Fuel pressure sender, Air conditioning system relay, Engine/motor control unit	453
16. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit	454
17. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	455
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge air cooling pump	456
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	457
20. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	458
042 - Multifunction steering wheel , (2PP),(2ZH)	459-461
1. Multifunction steering wheel , (2PP),(2ZH)	459
2. Steering column combination switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Airbag igniter on driver side, Fuse holder C	460
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	461
043 - Background lighting , (QQ3)	462-463
1. Background lighting , (QQ3)	462
2. Rotary light switch, Onboard supply control unit, Fuse holder C, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting	463
044 - Basic equipment	464-491
1. Basic equipment	464
2. Fuse holder A, Fuse holder B, Fuse holder C	465
3. Fuse holder C	466
4. Fuse holder C	467
5. Fuse holder C	468
6. Terminal 15 voltage supply relay, Fuse holder C	469
7. Main and dip beam relay, Fuse holder C, Relay and fuse carrier 1	470
8. Onboard supply control unit	471
9. Treble horn, Bass horn, Onboard supply control unit, Left turn signal repeater bulb	472
10. Onboard supply control unit, Front left headlight	473
11. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Right turn signal repeater bulb	474
12. Onboard supply control unit, Front right headlight	475
13. Turn signal switch, Steering column combination switch, Onboard supply control unit	476
14. Steering column combination switch, Onboard supply control unit	477
15. Steering column combination switch, Onboard supply control unit	478
16. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	479
17. Rotary light switch, Onboard supply control unit	480
18. Rotary light switch, Onboard supply control unit, Cigarette lighter	481
19. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	482
20. Onboard supply control unit, Left tail light cluster, Driver door lock unit	483
21. Reversing light switch, Onboard supply control unit, Right tail light cluster	484
22. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	485
23. Onboard supply control unit, High-level brake light bulb, Heated rear window	486
24. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit	487
25. Onboard supply control unit, Front interior light, Luggage compartment light	488
26. Onboard supply control unit. Diagnostic connection. Number plate light	489

27. Control unit in dash panel insert, Dash panel insert	490
28. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	491
045 - 1.0l petrol engine , DKRA,DKLC	492-511
1. 1.0l petrol engine , DKRA,DKLC	492
2. Starter, Battery monitor control unit, Fuse holder B	493
3. Voltage converter, Fuse holder C	494
4. Fuse holder C	495
5. Main relay, Starter relay 1, Starter relay 2, Fuse and relay carrier	496
6. Onboard supply control unit, Data bus diagnostic interface	497
7. Engine/motor control unit	498
8. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	499
9. Brake light switch, Clutch position sender, Engine/motor control unit	500
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air conditioning system control unit, Engine/motor control unit	501
11. Radiator outlet coolant temperature sender, Engine/motor control unit	502
12. High-pressure sender, Air conditioning system relay, Engine/motor control unit, Vacuum pump for brakes	503
13. Alternator with voltage regulator, Start/stop operation button, Engine/motor control unit, Start/stop operation warning lamp	504
14. Charge pressure sender, Engine/motor control unit, Charge pressure positioner	505
15. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	506
16. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	507
17. Throttle valve module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	508
18. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel pressure regulating valve, Charge air cooling pump	509
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Air conditioner compressor	510
20. Fuel delivery unit, Pressure sensor for activated charcoal filter air flushing, Coolant temperature sender, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Dash panel insert	511
046 - Actuator for structure-borne sound	512-513
1. Actuator for structure-borne sound	512
2. Onboard supply control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	513
047 - 1.0l petrol engine , CHYE	514-531
1. 1.0l petrol engine , CHYE	514
2. Starter, Start/Stop operation button, Starter inhibitor relay, Starter relay 1, Starter relay 2, Start/Stop operation warning lamp	515
3. Fuse holder B, Fuse holder C	516
4. Fuse holder C	517
5. Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	518
6. Onboard supply control unit	519
7. Engine/motor control unit	520
8. High-pressure sender, Air conditioning system control unit, Engine/motor control unit	521
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Camshaft control valve 1	522
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Ignition coil 1 with output stage, Ignition coil 2 with output stage	523
11. Accelerator pedal module, Engine/motor control unit, Ignition coil 3 with output stage	524
12. Accelerator pedal module, Clutch position sender, Engine/motor control unit	525
13. Brake light switch, Throttle valve module, Engine speed sender, Engine/motor control unit	526
14. Intake manifold sender, Hall sender, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	527
15. Brake servo pressure sensor, Gearbox neutral position sender, Fuel pump relay, Engine/motor control unit	528
16. Main relay, Engine/motor control unit, Terminal 75 voltage supply relay 1, Vacuum pump	529
17. Oil pressure switch, Fuel delivery unit, Dash panel insert	530
18. Voltage converter, Alternator with voltage regulator, Bonnet contact switch, Battery monitor control unit	531
048 - Airbag systems , (4UF)	532-543
1. Airbag systems , (4UF)	532
2. Key-operated switch to deactivate airbag on front passenger side. Airbag control unit. Onboard	533

supply control unit, Data bus diagnostic interface, Fuse holder C, Diagnostic connection	
3. Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	534
4. Steering column combination switch, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Airbag igniter on driver side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	535
5. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit	536
6. Side airbag crash sensor on driver side, Airbag control unit	537
7. Side airbag crash sensor on front passenger side, Airbag control unit	538
8. Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	539
9. Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side	540
10. Rear belt switch, driver side, Airbag control unit, Rear belt tensioner igniter on passenger side	541
11. Rear belt switch, passenger side, Airbag control unit	542
12. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side	543
049 - Front camera for driver assist systems , (QK1)	544-545
1. Front camera for driver assist systems , (QK1)	544
2. Onboard supply control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	545
050 - Basic equipment	546-571
1. Basic equipment	546
2. Fuse holder A, Fuse holder B, Fuse holder C	547
3. Fuse holder C	548
4. Fuse holder C	549
5. Terminal 15 voltage supply relay, Fuse holder C	550
6. Onboard supply control unit	551
7. Treble horn, Onboard supply control unit	552
8. Onboard supply control unit, Front left headlight	553
9. Headlight range control regulator, Onboard supply control unit, Left fog light bulb, Right fog light bulb	554
10. Onboard supply control unit, Front right headlight	555
11. Turn signal switch, Steering column combination switch, Onboard supply control unit	556
12. Steering column combination switch, Onboard supply control unit	557
13. Steering column combination switch, Onboard supply control unit	558
14. Steering column combination switch, Wiper motor control unit, Onboard supply control unit, Engine/motor control unit	559
15. Onboard supply control unit, Cigarette lighter	560
16. Rotary light switch, Onboard supply control unit	561
17. Centre switch module in dash panel, Centre switch module 2 in dash panel, Onboard supply control unit	562
18. Onboard supply control unit, Left tail light cluster, Driver door lock unit	563
19. Reversing light switch, Onboard supply control unit, Right tail light cluster	564
20. Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	565
21. Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Heated rear window	566
22. Rear lid handle release button, Onboard supply control unit, Front interior light, Luggage compartment light	567
23. Rain and light sensor, Onboard supply control unit, Left number plate light, Right number plate light	568
24. Onboard supply control unit, Diagnostic connection	569
25. Control unit in dash panel insert, Dash panel insert	570
26. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	571
051 - Fuse assignment	572-599
1. Fuse assignment	572
2. Fuse holder A, Radiator fan	573
3. Fresh air blower control unit, Fuse holder A, Fuse holder B	574
4. Fuse holder B, Fuse holder C	575
5. Control unit for structure-borne sound, Fuse holder C	576
6. Warning lamp for airbag deactivated on front passenger side, Front camera for driver assist systems, Fuse holder C	577
7. Fuse holder C	578
8. Fuse holder C. Light conductor for front centre console backround lighting. Light conductor for	579

front passenger side background lighting, Light conductor for driver side background lighting	
9. Fuse holder C	580
10. Fuse holder C	581
11. Fuse holder C	582
12. Fuse holder C	583
13. Fuse holder C	584
14. Fuse holder C	585
15. Pressure sensor for activated charcoal filter air flushing, Fuse holder C	586
16. Oil pressure sender, Fuse holder C	587
17. Rotary light switch, Fuse holder C	588
18. Rotary light switch, Fuel pump relay, Relay and fuse carrier 1	589
19. Starter inhibitor relay, Relay for gas shut-off valves, Fuel tank shut-off valve 2, Relay and fuse carrier 1	590
20. Air conditioning system relay, Starter relay 1, Relay and fuse carrier 1	591
21. Main relay, Terminal 75 voltage supply relay 1, Starter relay 2, Relay and fuse carrier 1	592
22. Front right window regulator switch, Terminal 15 voltage supply relay, Relay and fuse carrier 1	593
23. Voltage converter, Operating unit for window regulator in driver door	594
24. Steering column combination switch	595
25. Engine/motor control unit	596
26. Onboard supply control unit, Engine/motor control unit	597
27. Onboard supply control unit	598
28. Onboard supply control unit	599
052 - 1.0l petrol engine , DSGC	600-617
1. 1.0l petrol engine , DSGC	600
2. Starter, Battery monitor control unit, Fuse holder A, Fuse holder B	601
3. Voltage converter, Fuse holder C	602
4. Fuse holder C	603
5. Main relay, Starter relay 1, Starter relay 2, Fuse and relay carrier	604
6. Onboard supply control unit, Data bus diagnostic interface	605
7. Engine/motor control unit	606
8. Engine temperature regulation module, Inlet camshaft position sender, Engine/motor control unit	607
9. Brake light switch, Knock sensor 1, Brake servo pressure sensor, Fuel pressure sender for low pressure, Clutch position sender, Engine/motor control unit	608
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Air conditioning system control unit, Engine/motor control unit	609
11. Accelerator pedal module, Engine/motor control unit	610
12. Start/Stop operation button, High-pressure sender, Exhaust camshaft position sender, Engine/motor control unit, Start/Stop operation warning lamp	611
13. Intake manifold sender, Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	612
14. Air conditioning system relay, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Activated charcoal filter solenoid valve 2, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	613
15. Throttle valve module, Coolant temperature sender, Engine outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	614
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Air conditioner compressor	615
17. Alternator with voltage regulator, Radiator fan control unit	616
18. Fuel delivery unit, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	617
801 - - Fitting locations: Earth points - 3	618-621
1. Earth points	618-621
1.1 Earth points in front part of vehicle	618-619
1.2 Earth points in middle part of vehicle	620
1.3 Earth points in rear part of vehicle	621
802 - - Fitting locations: Fuses - 3	622-699
1. Fuses	622-699
1.1 Overview of fuse holders	622-623
1.2 Fitting location of fuse holder A -SA-	624
1.3 Fuse assignment for fuse holder A -SA-	625-626
1.3.1 Fuse assignment for fuse holder A -SA-, sales type 121, from August 2011	625
1.3.2 Fuse assignment for fuse holder A -SA-, sales type 121, 122, from May 2013	625
1.3.3 Fuse assignment for fuse holder A -SA-, sales type 123, from November 2019	626
1.3.4 Fuse assignment for fuse holder A -SA-, sales type 123, from November 2020	627
1.4 Fitting location of fuse holder B -SB-	627
1.5 Fuse assignment for fuse holder B -SB-	628-631

1.5.1 Fuse assignment for fuse holder B -SB-, sales type 121, from August 2011	628
1.5.2 Fuse assignment for fuse holder B -SB-, sales type 121, from May 2013	628
1.5.3 Fuse assignment for fuse holder B -SB-, sales type 121, from November 2015	629
1.5.4 Fuse assignment for fuse holder B -SB-, sales type 122, from May 2016	629
1.5.5 Fuse assignment for fuse holder B -SB-, sales type 123, from November 2019	630
1.5.6 Fuse assignment for fuse holder B -SB-, sales type 123, from September 2020	631
1.6 Fuse holder C -SC-	632-696
1.6.1 Fitting location of fuse holder C -SC-, left-hand drive models, from August 2011	632
1.6.2 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2015	633
1.6.3 Fitting location of fuse holder C -SC-, right-hand drive models, from August 2011	634-635
1.6.4 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2015	636
1.6.5 Fuse assignment for fuse holder C -SC-, sales type 121, from August 2011	637-639
1.6.6 Fuse assignment for fuse holder C -SC-, sales type 121, from May 2013	640-643
1.6.7 Fuse assignment for fuse holder C -SC-, sales type 121, from November 2014	644-647
1.6.8 Fuse assignment for fuse holder C -SC-, sales type 121, from May 2015	648-650
1.6.9 Fuse assignment for fuse holder C -SC-, sales type 121, from November 2015	651-656
1.6.10 Fuse assignment for fuse holder C -SC-, sales type 122, from May 2016	657-663
1.6.11 Fuse assignment for fuse holder C -SC-, sales type 122, from November 2016	664-669
1.6.12 Fuse assignment for fuse holder C -SC-, sales type 122, from November 2017	670-675
1.6.13 Fuse assignment for fuse holder C -SC-, sales type 122, from July 2018	676-682
1.6.14 Fuse assignment for fuse holder C -SC-, sales type 123, from November 2019	683-686
1.6.15 Fuse assignment for fuse holder C -SC-, sales type 123, from September 2020	687-691
1.6.16 Fuse assignment for fuse holder C -SC-, sales type 123, from June 2021	692-696
1.7 Fuse holder D -SD-	697-699
1.7.1 Fitting location of fuse holder D -SD-, left-hand drive	697
1.7.2 Fuse assignment for fuse holder D -SD-, sales type 121, from August 2011	698
1.7.3 Fuse assignment for fuse holder D -SD-, sales type 121, from May 2013	698-699
803 - - Fitting locations: Relays - 3	700-710
1. Relays	700-710
1.1 Overview of relay carriers	700
1.2 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on left under dash panel	701-705
1.2.1 Relay assignment for relay and fuse carrier 1 -SR1-, left-hand drive models, from August 2011	701
1.2.2 Relay assignment for relay and fuse carrier 1 -SR1-, left-hand drive models, from May 2015	702-703
1.2.3 Relay assignment for relay and fuse carrier 1 -SR1-, left-hand drive models, from November 2019	704-705
1.3 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on right under dash panel	706-710
1.3.1 Relay assignment for relay and fuse carrier 1 -SR1-, right-hand drive models, from August 2011	706
1.3.2 Relay assignment for relay and fuse carrier 1 -SR1-, right-hand drive models, from May 2015	707-708
1.3.3 Relay assignment for relay and fuse carrier 1 -SR1-, right-hand drive models, from November 2019	709-710
804 - - Fitting locations: control units in engine compartment - 3	711-730
1. Control units in engine compartment	711-730
1.1 Overview of control units in engine compartment	711
1.2 Electronic manual gearbox control unit -J514-	712-713
1.3 Radiator fan control unit -J293-	714-719
1.3.1 Radiator fan control unit -J293-, -T4g,T6g-	714-715
1.3.2 Radiator fan control unit -J293-, -T10g-	716-717
1.3.3 Radiator fan control unit -J293-, -T4ag-	718-719
1.4 Engine control unit -J623-	720-722
1.4.1 Engine control unit -J623-	720
1.4.2 Engine control unit -J623-	721-722
1.5 Wiper motor control unit -J400-	723-725
1.6 ABS control unit -J104-	726-727
1.7 Control unit for structure-borne sound -J869-	728-730
805 - - Fitting locations: control units in passenger compartment - 3	731-775
1. Control units in passenger compartment	731-775
1.1 Overview of control units	731-732
1.2 Airbag control unit -J234-	733
1.3 PID (portable navigation and infotainment system) -J982-	734
1.4 Emergency braking function sensor unit -J939-	735-736
1.5 Front camera for driver assist systems -R242-	737-738
1.6 Heater control unit -J162-	739-740
1.7 Air conditioning system control unit -J301-	741-742
1.8 Climatronic control unit -J255-	743-744

1.9 Fuel pump control unit -J538-	745-746
1.10 Sliding sunroof control unit -J245-	747-748
1.11 Rear window wiper motor -V12-	749-750
1.12 Parking aid control unit -J446-	751-752
1.13 Heated front seats control unit -J774-	753-755
1.14 DC/DC voltage converter1 -A19-	756-757
1.15 Control unit in dash panel insert -J285-	758-759
1.16 Power steering control unit -J500-	760-762
1.17 Amplifier -R12-	763-764
1.18 Onboard supply control unit -J519-	765-770
1.19 Radio -R-	771-775
806 - -Fitting locations: coupling stations and connectors of wiring harnesses - 3	776-804
1. Coupling stations and connectors of wiring harnesses	776-804
1.1 Overview of coupling stations and connectors	776-779
1.2 Coupling stations for electronic manual gearbox	780
1.3 Coupling station on heater and air conditioner unit, -T2bh-	781
1.4 Coupling station on right A-pillar, in front right door	782
1.5 Coupling station in centre of dash panel, -T2bm-, -T2bn-, -J983-, -T12b-	783
1.6 Switch module in centre of dash panel, -EX22-, -EX35-, -T16b-, -T16c-	784-785
1.7 Coupling station under front right seat, -T2ao-, -T3m-, -T2ap-, -T2x-	786
1.8 Coupling station for panorama sliding roof, -T2p-, -T4p-	787
1.9 Coupling station on aerial, -T2bl-	788
1.10 Coupling station in rear bumper on left	789
1.11 Coupling station in rear lid, -T5c-, -T5d-, -T5m-, -T5o-	790
1.12 Coupling station under front left seat, -T2an-, -T3c-, -T2v-	791
1.13 Switch module in centre console, -EX23-, -T8c-	792
1.14 Diagnostic connection, -U31-, -T16f-	793-795
1.15 Coupling station on left A-pillar -T28-, in front left door -T8f-	796
1.16 Coupling station on front left in engine compartment, -T4f-, -T14-	796
1.17 Coupling station for radiator fan, -T3o-	797
1.18 Coupling station for accelerator, -T6p- 1	798
1.19 Coupling station on left B-pillar, -T28b-	799
1.20 Coupling station on right B-pillar, -T28c-	800
1.21 Coupling station for fuel delivery unit, -T10i-	801
1.22 Coupling station for background lighting, -T2eh-, -T2eg-	802
1.23 Coupling station under bench seat, -T4aq-	803-804