

| | |
|---|-------|
| 001 - Basic equipment | 1-29 |
| 1. Basic equipment | 1 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 2 |
| 3. Ignition/starter switch, Onboard supply control unit | 3 |
| 4. Onboard supply control unit | 4 |
| 5. Onboard supply control unit | 5 |
| 6. Onboard supply control unit | 6 |
| 7. Onboard supply control unit | 7 |
| 8. Bonnet contact switch, Onboard supply control unit | 8 |
| 9. Onboard supply control unit, Rear left fog light bulb, Right tail light bulb, Left tail light, Right tail light, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb | 9 |
| 10. X-contact relief relay, Onboard supply control unit, Front interior light, Front passenger reading light, Driver side reading light | 10 |
| 11. Onboard supply control unit | 11 |
| 12. Rear lid lock unit, Wiper motor control unit, Onboard supply control unit, Rear lid central locking motor | 12 |
| 13. Reversing light switch, Heater control unit, Onboard supply control unit, High-level brake light bulb | 13 |
| 14. Light switch, Front and rear fog light switch, Onboard supply control unit | 14 |
| 15. Onboard supply control unit, Light switch illumination bulb, Heated rear window | 15 |
| 16. Onboard supply control unit, Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb | 16 |
| 17. Onboard supply control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb | 17 |
| 18. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Onboard supply control unit | 18 |
| 19. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit, Windscreen and rear window washer pump | 19 |
| 20. Rear lid handle release button, Treble horn, Onboard supply control unit | 20 |
| 21. Onboard supply control unit | 21 |
| 22. Centre switch module 2 in dash panel, Hazard warning lights button, Heated rear window button, Hazard warning lights switch illumination bulb, Heated rear window switch illumination bulb, 12 V socket, Number plate light | 22 |
| 23. Brake light switch, Clutch pedal switch, Radiator fan relay, Radiator fan, Rear window wiper motor | 23 |
| 24. Dipped beam relay, Terminal 15 relief relay, Voltage supply relay 1 | 24 |
| 25. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp | 25 |
| 26. Immobiliser reader coil, Oil pressure switch, Brake fluid level warning contact, Oil pressure switch for reduced oil pressure, Ambient temperature sensor, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 26 |
| 27. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Fuel pump relay, Control unit in dash panel insert, Dash panel insert | 27 |
| 28. Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert, Coolant temperature warning lamp (too cold) | 28 |
| 29. Fresh air blower switch, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert, Handbrake warning lamp, Fresh air blower series resistor with overheating fuse, Fresh air blower | 29 |
| 002 - 1.0l engine , CSEA | 30-48 |
| 1. 1.0l engine , CSEA | 30 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 31 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 32 |
| 4. Onboard supply control unit, Radiator fan | 33 |
| 5. Ignition/starter switch, Onboard supply control unit | 34 |
| 6. Onboard supply control unit | 35 |
| 7. Onboard supply control unit | 36 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine control unit | 37 |
| 9. High-pressure sender, Air conditioning system control unit, Engine control unit | 38 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine control unit, Radiator fan series resistor, Radiator fan | 39 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine control unit | 40 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle. Engine control unit | 41 |

| | |
|--|-------|
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit | 42 |
| 14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 43 |
| 15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 44 |
| 16. Glow plug relay, Glow plug activation control unit, Engine control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3 | 45 |
| 17. X-contact relief relay | 46 |
| 18. Oil pressure switch, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 47 |
| 19. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Handbrake warning lamp, Earth connection 4, in front wiring harness | 48 |
| 003 - 1.0l engine , CWRA | 49-66 |
| 1. 1.0l engine , CWRA | 49 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 50 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 51 |
| 4. Onboard supply control unit, Radiator fan | 52 |
| 5. Ignition/starter switch, Onboard supply control unit | 53 |
| 6. Onboard supply control unit | 54 |
| 7. Onboard supply control unit | 55 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine control unit | 56 |
| 9. High-pressure sender, Air conditioning system control unit, Engine control unit | 57 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine control unit, Radiator fan series resistor, Radiator fan | 58 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine control unit | 59 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit | 60 |
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit | 61 |
| 14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 62 |
| 15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 63 |
| 16. X-contact relief relay | 64 |
| 17. Oil pressure switch, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 65 |
| 18. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Coolant temperature gauge, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Brake fluid level warning lamp | 66 |
| 004 - Radio | 67-75 |
| 1. Radio | 67 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 68 |
| 3. X-contact relief relay, Onboard supply control unit | 69 |
| 4. Ignition/starter switch, Onboard supply control unit | 70 |
| 5. Radio, Rear left loudspeaker, Rear right loudspeaker | 71 |
| 6. Radio, Front left loudspeaker, Front right loudspeaker, Aerial, Front left treble loudspeaker, Front right treble loudspeaker, Aerial amplifier | 72 |
| 7. Portable navigation and infotainment system, Interface for portable navigation and infotainment system, Radio | 73 |
| 8. Terminal 15 relief relay | 74 |
| 9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 75 |
| 005 - Anti-lock brake system (ABS) | 76-84 |
| 1. Anti-lock brake system (ABS) | 76 |
| 2. Battery, Starter, Alternator, Voltage regulator | 77 |
| 3. Ignition/starter switch, X-contact relief relay | 78 |
| 4. Rear right speed sensor, ABS solenoid valve relay, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve | 79 |

| | |
|---|---------|
| 5. Front right ABS inlet valve, Rear right ABS inlet valve, Rear left ABS inlet valve | 80 |
| 6. Front right speed sensor, Front left speed sensor, ABS return flow pump relay, Rear right ABS outlet valve, Rear left ABS outlet valve, ABS return flow pump | 81 |
| 7. | 82 |
| 8. Onboard supply control unit | 83 |
| 9. Brake fluid level warning contact, Parking brake contact switch, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake system warning lamp, Handbrake warning lamp | 84 |
| 006 - Air conditioning system | 85-93 |
| 1. Air conditioning system | 85 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 86 |
| 3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay, Onboard supply control unit | 87 |
| 4. Onboard supply control unit | 88 |
| 5. High-pressure sender, Air conditioning system relay, Air conditioning system control unit, Air conditioner compressor | 89 |
| 6. Fresh air blower switch, Air conditioning system control unit, Engine control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower | 90 |
| 7. Radiator fan control unit, Radiator fan series resistor, Radiator fan | 91 |
| 8. Engine control unit, Radiator fan | 92 |
| 9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 93 |
| 007 - Automated manual gearbox , CSEA,CWRA | 94-101 |
| 1. Automated manual gearbox , CSEA,CWRA | 94 |
| 2. Battery, Starter, Alternator, Voltage regulator | 95 |
| 3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay | 96 |
| 4. Starter inhibitor relay, Onboard supply control unit | 97 |
| 5. Selector lever, Automated manual gearbox control unit, Parking lock solenoid | 98 |
| 6. Gearbox input speed sender, Automated manual gearbox control unit, Clutch actuator, Clutch actuator motor | 99 |
| 7. Automated manual gearbox control unit, Gear actuator, Gear actuator motor 1, Gear actuator motor 2 | 100 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake prompt warning lamp | 101 |
| 008 - Electromechanical power steering (Servotronic) | 102-109 |
| 1. Electromechanical power steering (Servotronic) | 102 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 103 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 104 |
| 4. Ignition/starter switch, Onboard supply control unit | 105 |
| 5. Onboard supply control unit | 106 |
| 6. X-contact relief relay | 107 |
| 7. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Electromechanical power steering motor | 108 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Electrohydraulic power steering warning lamp | 109 |
| 009 - Airbag systems | 110-117 |
| 1. Airbag systems | 110 |
| 2. Battery, Starter, Alternator, Voltage regulator | 111 |
| 3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay | 112 |
| 4. Airbag control unit | 113 |
| 5. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1 | 114 |
| 6. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag igniter 1 | 115 |
| 7. | 116 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp | 117 |
| 010 - Central locking | 118-130 |
| 1. Central locking | 118 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 119 |
| 3. Anti-theft alarm ultrasonic sensor, Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 120 |
| 4. Driver side interior locking button for central locking system, Driver side central locking lock unit, Onboard supply control unit | 121 |
| 5. Driver side central locking lock unit. Onboard supply control unit. Driver door central locking | 122 |

| | |
|--|---------|
| motor | |
| 6. Ignition/starter switch, Onboard supply control unit | 123 |
| 7. Onboard supply control unit, Fuse 39 in fuse holder A | 124 |
| 8. Centre switch module 2 in dash panel, Onboard supply control unit, Deactivation of interior monitoring system switch illumination bulb | 125 |
| 9. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door central locking motor | 126 |
| 10. Front passenger side central locking lock unit, Rear left central locking lock unit, Onboard supply control unit, Front passenger door central locking motor, Rear left door central locking motor | 127 |
| 11. Rear right central locking lock unit, Onboard supply control unit, Rear right door central locking motor | 128 |
| 12. Anti-theft alarm system horn, X-contact relief relay | 129 |
| 13. Rev. counter, Speedometer, Control unit in dash panel insert, Alarm horn relay, Dash panel insert, Alternator warning lamp | 130 |
| 011 - Electric windows, rear vent windows | 131-138 |
| 1. Electric windows, rear vent windows | 131 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 132 |
| 3. X-contact relief relay, Onboard supply control unit | 133 |
| 4. Ignition/starter switch, Onboard supply control unit | 134 |
| 5. Front right window regulator switch, Right window regulator motor | 135 |
| 6. Front left window regulator switch, Left window regulator motor | 136 |
| 7. Terminal 15 relief relay | 137 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 138 |
| 012 - Electrically adjustable exterior mirror | 139-147 |
| 1. Electrically adjustable exterior mirror | 139 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 140 |
| 3. X-contact relief relay, Onboard supply control unit | 141 |
| 4. Ignition/starter switch, Onboard supply control unit | 142 |
| 5. Front passenger side turn signal repeater bulb, Front passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor | 143 |
| 6. Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor | 144 |
| 7. Mirror adjustment switch | 145 |
| 8. Terminal 15 relief relay | 146 |
| 9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 147 |
| 013 - Parking aid (PDC) | 148-154 |
| 1. Parking aid (PDC) | 148 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 149 |
| 3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit | 150 |
| 4. Terminal 15 relief relay | 151 |
| 5. Rear parking aid warning buzzer, Parking aid control unit | 152 |
| 6. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Parking aid control unit | 153 |
| 7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 154 |
| 014 - Fog light and rear fog light | 155-166 |
| 1. Fog light and rear fog light | 155 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 156 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 157 |
| 4. Ignition/starter switch, Onboard supply control unit | 158 |
| 5. Onboard supply control unit | 159 |
| 6. Onboard supply control unit | 160 |
| 7. Light switch, Front and rear fog light switch, Onboard supply control unit | 161 |
| 8. Onboard supply control unit, Light switch illumination bulb | 162 |
| 9. Onboard supply control unit, Rear left fog light bulb, Left tail light | 163 |
| 10. Onboard supply control unit, Left fog light bulb | 164 |
| 11. X-contact relief relay, Right fog light bulb | 165 |
| 12. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Rear fog light warning lamp | 166 |
| 015 - Preparation for radio | 167-174 |
| 1. Preparation for radio | 167 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 168 |
| 3. X-contact relief relay, Onboard supply control unit | 169 |

| | |
|--|---------|
| 4. Ignition/starter switch, Onboard supply control unit | 170 |
| 5. Radio, Rear left loudspeaker, Rear right loudspeaker | 171 |
| 6. Radio, Front left loudspeaker, Front right loudspeaker, Aerial, Front left treble loudspeaker, Front right treble loudspeaker, Aerial amplifier | 172 |
| 7. Terminal 15 relief relay | 173 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 174 |
| 016 - Onboard supply control unit , (BFM) | 175-189 |
| 1. Onboard supply control unit , (BFM) | 175 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 176 |
| 3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit | 177 |
| 4. Onboard supply control unit | 178 |
| 5. Onboard supply control unit | 179 |
| 6. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 180 |
| 7. Wiper motor control unit, Onboard supply control unit | 181 |
| 8. Onboard supply control unit | 182 |
| 9. Rear lid handle release button, Onboard supply control unit | 183 |
| 10. Bonnet contact switch, Onboard supply control unit | 184 |
| 11. Reversing light switch, Onboard supply control unit | 185 |
| 12. Onboard supply control unit | 186 |
| 13. Onboard supply control unit | 187 |
| 14. Onboard supply control unit | 188 |
| 15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 189 |
| 017 - Onboard supply control unit , (BCM) | 190-205 |
| 1. Onboard supply control unit , (BCM) | 190 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 191 |
| 3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit | 192 |
| 4. Onboard supply control unit | 193 |
| 5. Onboard supply control unit | 194 |
| 6. Onboard supply control unit | 195 |
| 7. Wiper motor control unit, Onboard supply control unit | 196 |
| 8. Reversing light switch, Onboard supply control unit | 197 |
| 9. Onboard supply control unit | 198 |
| 10. Onboard supply control unit | 199 |
| 11. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 200 |
| 12. Onboard supply control unit | 201 |
| 13. Onboard supply control unit | 202 |
| 14. Rear lid handle release button, Bonnet contact switch, Onboard supply control unit | 203 |
| 15. Onboard supply control unit | 204 |
| 16. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp | 205 |
| 018 - 1.0l engine , CYTA | 206-228 |
| 1. 1.0l engine , CYTA | 206 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 207 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 208 |
| 4. Onboard supply control unit, Radiator fan | 209 |
| 5. Ignition/starter switch, Onboard supply control unit | 210 |
| 6. Onboard supply control unit | 211 |
| 7. Onboard supply control unit | 212 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine control unit | 213 |
| 9. High-pressure sender, Engine control unit | 214 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit | 215 |
| 11. Brake light switch, Clutch pedal switch, Brake servo pressure sensor, Engine control unit | 216 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit | 217 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Engine control unit | 218 |
| 14. Hall sender, Hall sender 2, Fuel pressure sender, Engine control unit | 219 |
| 15. Intake manifold sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine control unit, Charge pressure positioner | 220 |
| 16. Ethanol concentration sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1 | 221 |
| 17. Engine control unit. Ignition coil 1 with output stage. Ignition coil 2 with output stage. | 222 |

| | |
|---|---------|
| Ignition coil 3 with output stage, Spark plugs | |
| 18. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve | 223 |
| 19. Lambda probe after catalytic converter, Engine control unit, Coolant pump for low-temperature circuit | 224 |
| 20. Radiator outlet coolant temperature sender, Engine control unit | 225 |
| 21. X-contact relief relay | 226 |
| 22. Oil pressure switch for reduced oil pressure, Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 227 |
| 23. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 228 |
| 019 - Basic equipment | 229-258 |
| 1. Basic equipment | 229 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 230 |
| 3. Ignition/starter switch, Onboard supply control unit | 231 |
| 4. Onboard supply control unit | 232 |
| 5. Onboard supply control unit | 233 |
| 6. Onboard supply control unit | 234 |
| 7. Onboard supply control unit | 235 |
| 8. Bonnet contact switch, Onboard supply control unit | 236 |
| 9. Onboard supply control unit, Rear left fog light bulb, Right tail light bulb, Left tail light, Right tail light, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb | 237 |
| 10. X-contact relief relay, Onboard supply control unit, Front interior light, Front passenger reading light, Driver side reading light | 238 |
| 11. Onboard supply control unit | 239 |
| 12. Rear lid handle release button, Rear lid lock unit, Wiper motor control unit, Onboard supply control unit, Rear lid central locking motor | 240 |
| 13. Reversing light switch, Heater control unit, Onboard supply control unit, High-level brake light bulb | 241 |
| 14. Light switch, Front and rear fog light switch, Onboard supply control unit | 242 |
| 15. Onboard supply control unit, Light switch illumination bulb, Left number plate light, Right number plate light | 243 |
| 16. Onboard supply control unit, Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb | 244 |
| 17. Onboard supply control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb | 245 |
| 18. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Onboard supply control unit | 246 |
| 19. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Onboard supply control unit, Windscreen and rear window washer pump | 247 |
| 20. Treble horn, Onboard supply control unit | 248 |
| 21. Onboard supply control unit | 249 |
| 22. Centre switch module 2 in dash panel, Hazard warning lights button, Heated rear window button, Hazard warning lights switch illumination bulb, Heated rear window switch illumination bulb, 12 V socket | 250 |
| 23. Rear window wiper motor, Heated rear window | 251 |
| 24. Dipped beam relay, Terminal 15 relief relay, Voltage supply relay 1 | 252 |
| 25. Brake light switch, Clutch pedal switch, Radiator fan relay, Radiator fan | 253 |
| 26. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp | 254 |
| 27. Oil pressure switch, Brake fluid level warning contact, Oil pressure switch for reduced oil pressure, Ambient temperature sensor, Control unit in dash panel insert, Dash panel insert | 255 |
| 28. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Fuel pump relay, Control unit in dash panel insert, Dash panel insert, Seat belt warning system warning lamp | 256 |
| 29. Immobiliser reader coil, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Coolant temperature warning lamp (too cold) | 257 |
| 30. Fresh air blower switch, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert, Handbrake warning lamp, Fresh air blower series resistor with overheating fuse, Fresh air blower | 258 |
| 020 - 1.0l engine , CSEA | 259-278 |
| 1. 1.0l engine , CSEA | 259 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 260 |
| 3. Onboard supply control unit, Voltage supply relay 1 | 261 |

| | |
|---|---------|
| 4. Terminal 15 relief relay, Onboard supply control unit, Radiator fan | 262 |
| 5. Ignition/starter switch, Onboard supply control unit | 263 |
| 6. Onboard supply control unit | 264 |
| 7. Onboard supply control unit | 265 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine control unit | 266 |
| 9. High-pressure sender, Engine control unit | 267 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine control unit, Radiator fan series resistor, Radiator fan | 268 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine control unit | 269 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit | 270 |
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit | 271 |
| 14. Oil pressure switch, Engine control unit | 272 |
| 15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 273 |
| 16. Glow plug relay, Glow plug activation control unit, Engine control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3 | 274 |
| 17. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 275 |
| 18. X-contact relief relay | 276 |
| 19. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 277 |
| 20. Immobiliser reader coil, Parking brake contact switch, Ambient temperature sensor, Control unit in dash panel insert, Dash panel insert | 278 |
| 021 - 1.0l engine , CWRA | 279-297 |
| 1. 1.0l engine , CWRA | 279 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 280 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 281 |
| 4. Onboard supply control unit, Radiator fan | 282 |
| 5. Ignition/starter switch, Onboard supply control unit | 283 |
| 6. Onboard supply control unit | 284 |
| 7. Onboard supply control unit | 285 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine control unit | 286 |
| 9. High-pressure sender, Engine control unit | 287 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine control unit, Radiator fan series resistor, Radiator fan | 288 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine control unit | 289 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit | 290 |
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine control unit | 291 |
| 14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 292 |
| 15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 293 |
| 16. Oil pressure switch, Engine control unit | 294 |
| 17. X-contact relief relay | 295 |
| 18. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 296 |
| 19. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 297 |
| 022 - Radio | 298-307 |
| 1. Radio | 298 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 299 |
| 3. X-contact relief relay, Onboard supply control unit | 300 |
| 4. Ignition/starter switch, Onboard supply control unit | 301 |
| 5. Radio, Rear left loudspeaker, Rear right loudspeaker | 302 |
| 6. Radio. Front left loudspeaker. Front left treble loudspeaker | 303 |

| | |
|---|---------|
| 7. Radio, Front right loudspeaker, Aerial, Front right treble loudspeaker, Aerial amplifier | 304 |
| 8. Portable navigation and infotainment system, Interface for portable navigation and infotainment system, Radio | 305 |
| 9. Terminal 15 relief relay | 306 |
| 10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 307 |
| 023 - Anti-lock brake system (ABS) | 308-316 |
| 1. Anti-lock brake system (ABS) | 308 |
| 2. Battery, Starter, Alternator, Voltage regulator | 309 |
| 3. X-contact relief relay, Terminal 15 relief relay | 310 |
| 4. Rear right speed sensor, Rear left speed sensor, ABS control unit, ABS solenoid valve relay, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve | 311 |
| 5. ABS control unit, Front right ABS inlet valve, Rear right ABS inlet valve, Rear left ABS inlet valve | 312 |
| 6. Front right speed sensor, Front left speed sensor, ABS control unit, ABS return flow pump relay, Rear right ABS outlet valve, Rear left ABS outlet valve, ABS return flow pump | 313 |
| 7. Ignition/starter switch, Onboard supply control unit | 314 |
| 8. Onboard supply control unit | 315 |
| 9. Brake fluid level warning contact, Parking brake contact switch, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake system warning lamp, Handbrake warning lamp | 316 |
| 024 - Air conditioning system | 317-327 |
| 1. Air conditioning system | 317 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 318 |
| 3. X-contact relief relay, Terminal 15 relief relay, Onboard supply control unit | 319 |
| 4. Onboard supply control unit, Air conditioner compressor | 320 |
| 5. High-pressure sender, Air conditioning system relay, Air conditioning system control unit | 321 |
| 6. Fresh air blower switch, Air conditioning system control unit, Engine control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower | 322 |
| 7. Radiator fan control unit, Radiator fan series resistor, Radiator fan | 323 |
| 8. Engine control unit, Radiator fan | 324 |
| 9. Ignition/starter switch, Onboard supply control unit | 325 |
| 10. | 326 |
| 11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 327 |
| 025 - Automated manual gearbox , CSEA,CWRA | 328-336 |
| 1. Automated manual gearbox , CSEA,CWRA | 328 |
| 2. Battery, Starter, Alternator, Voltage regulator | 329 |
| 3. Ignition/starter switch, X-contact relief relay, Terminal 15 relief relay | 330 |
| 4. Onboard supply control unit | 331 |
| 5. Selector lever, Automated manual gearbox control unit, Parking lock solenoid | 332 |
| 6. Gearbox input speed sender, Automated manual gearbox control unit, Clutch actuator, Clutch actuator motor | 333 |
| 7. Automated manual gearbox control unit, Gear actuator, Gear actuator motor 1, Gear actuator motor 2 | 334 |
| 8. | 335 |
| 9. Rev. counter, Speedometer, Starter inhibitor relay, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Brake prompt warning lamp | 336 |
| 026 - Electromechanical power steering (Servotronic) | 337-344 |
| 1. Electromechanical power steering (Servotronic) | 337 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 338 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 339 |
| 4. Ignition/starter switch, Onboard supply control unit | 340 |
| 5. Onboard supply control unit | 341 |
| 6. X-contact relief relay | 342 |
| 7. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Electromechanical power steering motor | 343 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Electrohydraulic power steering warning lamp | 344 |
| 027 - Airbag systems | 345-353 |
| 1. Airbag systems | 345 |
| 2. Battery, Starter, Alternator, Voltage regulator | 346 |
| 3. X-contact relief relay, Terminal 15 relief relay | 347 |
| 4. Ignition/starter switch | 348 |
| 5. Airbag control unit | 349 |
| 6. Airbag coil connector and return ring with slip ring. Airbag control unit. Driver side airbag | 350 |

| | |
|---|---------|
| igniter, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1 | |
| 7. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag igniter 1 | 351 |
| 8. | 352 |
| 9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp | 353 |
| 028 - Central locking | 354-367 |
| 1. Central locking | 354 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 355 |
| 3. Anti-theft alarm ultrasonic sensor, Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 356 |
| 4. Driver side interior locking button for central locking system, Driver side central locking lock unit, Onboard supply control unit | 357 |
| 5. Driver side central locking lock unit, Onboard supply control unit, Driver door central locking motor | 358 |
| 6. Onboard supply control unit | 359 |
| 7. Onboard supply control unit | 360 |
| 8. Centre switch module 2 in dash panel, Onboard supply control unit, Deactivation of interior monitoring system switch illumination bulb | 361 |
| 9. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door central locking motor | 362 |
| 10. Front passenger side central locking lock unit, Rear left central locking lock unit, Onboard supply control unit, Front passenger door central locking motor, Rear left door central locking motor | 363 |
| 11. Rear right central locking lock unit, Onboard supply control unit, Rear right door central locking motor | 364 |
| 12. Ignition/starter switch, Onboard supply control unit | 365 |
| 13. Anti-theft alarm system horn, X-contact relief relay | 366 |
| 14. Rev. counter, Speedometer, Control unit in dash panel insert, Alarm horn relay, Dash panel insert, Alternator warning lamp | 367 |
| 029 - Electric windows, rear vent windows | 368-375 |
| 1. Electric windows, rear vent windows | 368 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 369 |
| 3. X-contact relief relay, Onboard supply control unit | 370 |
| 4. Ignition/starter switch, Onboard supply control unit | 371 |
| 5. Front right window regulator switch, Right window regulator motor | 372 |
| 6. Front left window regulator switch, Left window regulator motor | 373 |
| 7. Terminal 15 relief relay | 374 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 375 |
| 030 - Electrically adjustable exterior mirror | 376-384 |
| 1. Electrically adjustable exterior mirror | 376 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 377 |
| 3. X-contact relief relay, Onboard supply control unit | 378 |
| 4. Ignition/starter switch, Onboard supply control unit | 379 |
| 5. Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor | 380 |
| 6. Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor | 381 |
| 7. Mirror adjustment switch | 382 |
| 8. Terminal 15 relief relay | 383 |
| 9. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 384 |
| 031 - Parking aid (PDC) | 385-392 |
| 1. Parking aid (PDC) | 385 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 386 |
| 3. X-contact relief relay, Onboard supply control unit | 387 |
| 4. Ignition/starter switch, Onboard supply control unit | 388 |
| 5. Rear parking aid warning buzzer, Parking aid control unit | 389 |
| 6. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Parking aid control unit | 390 |
| 7. Terminal 15 relief relay | 391 |
| 8. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 392 |
| 032 - Foa light and rear foa light | 393-403 |

| | |
|---|---------|
| 1. Fog light and rear fog light | 393 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 394 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 395 |
| 4. Ignition/starter switch, Onboard supply control unit | 396 |
| 5. Onboard supply control unit | 397 |
| 6. Onboard supply control unit | 398 |
| 7. Light switch, Front and rear fog light switch, Onboard supply control unit | 399 |
| 8. Onboard supply control unit, Light switch illumination bulb | 400 |
| 9. Onboard supply control unit, Left fog light bulb, Rear left fog light bulb, Left tail light | 401 |
| 10. X-contact relief relay, Right fog light bulb | 402 |
| 11. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Rear fog light warning lamp | 403 |
| 033 - Preparation for radio | 404-413 |
| 1. Preparation for radio | 404 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 405 |
| 3. X-contact relief relay, Onboard supply control unit | 406 |
| 4. Ignition/starter switch, Onboard supply control unit | 407 |
| 5. Radio, Rear left loudspeaker, Rear right loudspeaker | 408 |
| 6. Radio, Front left loudspeaker, Front left treble loudspeaker | 409 |
| 7. Radio, Front right loudspeaker, Aerial, Front right treble loudspeaker, Aerial amplifier | 410 |
| 8. | 411 |
| 9. Terminal 15 relief relay | 412 |
| 10. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 413 |
| 034 - Onboard supply control unit , (BFM) | 414-428 |
| 1. Onboard supply control unit , (BFM) | 414 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 415 |
| 3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit | 416 |
| 4. Onboard supply control unit | 417 |
| 5. Onboard supply control unit | 418 |
| 6. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 419 |
| 7. Wiper motor control unit, Onboard supply control unit | 420 |
| 8. Intermittent wiper switch, Onboard supply control unit | 421 |
| 9. Onboard supply control unit | 422 |
| 10. Bonnet contact switch, Onboard supply control unit | 423 |
| 11. Reversing light switch, Onboard supply control unit | 424 |
| 12. Onboard supply control unit | 425 |
| 13. Onboard supply control unit | 426 |
| 14. Rear lid handle release button, Onboard supply control unit | 427 |
| 15. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 428 |
| 035 - Onboard supply control unit , (BCM) | 429-446 |
| 1. Onboard supply control unit , (BCM) | 429 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 430 |
| 3. Ignition/starter switch, X-contact relief relay, Onboard supply control unit | 431 |
| 4. Onboard supply control unit | 432 |
| 5. Onboard supply control unit | 433 |
| 6. Onboard supply control unit | 434 |
| 7. Wiper motor control unit, Onboard supply control unit | 435 |
| 8. Reversing light switch, Onboard supply control unit | 436 |
| 9. Onboard supply control unit | 437 |
| 10. Onboard supply control unit | 438 |
| 11. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 439 |
| 12. Onboard supply control unit | 440 |
| 13. Onboard supply control unit | 441 |
| 14. Rear lid handle release button, Bonnet contact switch, Onboard supply control unit | 442 |
| 15. Onboard supply control unit | 443 |
| 16. Onboard supply control unit | 444 |
| 17. Onboard supply control unit | 445 |
| 18. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Rear fog light warning lamp | 446 |
| 036 - 1.0l engine , CYTA | 447-469 |
| 1. 1.0l engine , CYTA | 447 |
| 2. Battery, Starter, Alternator, Voltage regulator | 448 |
| 3. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 449 |
| 4. X-contact relief relay | 450 |

| | |
|---|---------|
| 5. Ignition/starter switch, Onboard supply control unit | 451 |
| 6. Onboard supply control unit | 452 |
| 7. Onboard supply control unit | 453 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine control unit | 454 |
| 9. High-pressure sender, Engine control unit | 455 |
| 10. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit | 456 |
| 11. Brake light switch, Clutch pedal switch, Engine control unit | 457 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine control unit | 458 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Engine control unit | 459 |
| 14. Hall sender, Hall sender 2, Fuel pressure sender, Engine control unit | 460 |
| 15. Intake manifold sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine control unit, Charge pressure positioner | 461 |
| 16. Ethanol concentration sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1 | 462 |
| 17. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 463 |
| 18. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve | 464 |
| 19. Lambda probe after catalytic converter, Engine control unit, Coolant pump for low-temperature circuit | 465 |
| 20. Radiator outlet coolant temperature sender, Engine control unit, Radiator fan | 466 |
| 21. Oil pressure switch for reduced oil pressure, Engine control unit | 467 |
| 22. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 468 |
| 23. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 469 |
| 037 - Fuse assignment | 470-498 |
| 1. Fuse assignment | 470 |
| 2. Battery, Starter, Alternator, Voltage regulator, Onboard supply control unit | 471 |
| 3. Onboard supply control unit | 472 |
| 4. Onboard supply control unit | 473 |
| 5. Onboard supply control unit | 474 |
| 6. Onboard supply control unit | 475 |
| 7. Onboard supply control unit, Radio | 476 |
| 8. Onboard supply control unit | 477 |
| 9. Front left window regulator switch, Onboard supply control unit | 478 |
| 10. Airbag control unit, Onboard supply control unit | 479 |
| 11. Onboard supply control unit | 480 |
| 12. ABS control unit, Onboard supply control unit | 481 |
| 13. Onboard supply control unit, Front interior light, Front passenger reading light, Driver side reading light | 482 |
| 14. X-contact relief relay, Onboard supply control unit | 483 |
| 15. Onboard supply control unit | 484 |
| 16. Onboard supply control unit, Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb | 485 |
| 17. Onboard supply control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight | 486 |
| 18. Headlight dipper and flasher switch, Intermittent wiper switch, Onboard supply control unit | 487 |
| 19. Light switch, Onboard supply control unit | 488 |
| 20. Onboard supply control unit | 489 |
| 21. Reversing light switch, Heater control unit, Onboard supply control unit | 490 |
| 22. Onboard supply control unit | 491 |
| 23. Rear left fog light bulb, Left tail light, Left tail light bulb | 492 |
| 24. Clutch pedal switch, Radiator fan relay, Terminal 15 relief relay, Voltage supply relay 1 | 493 |
| 25. Centre switch module 2 in dash panel, Air conditioning system control unit, Heated rear window switch illumination bulb, Right tail light bulb, Right tail light, 12 V socket | 494 |
| 26. Rear window wiper motor | 495 |
| 27. Ignition/starter switch | 496 |
| 28. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp. Alternator warning lamp | 497 |

| | |
|--|---------|
| 29. Fuel pump relay, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert, Rear fog light warning lamp, Seat belt warning system warning lamp | 498 |
| 038 - Basic equipment | 499-524 |
| 1. Basic equipment | 499 |
| 2. Onboard supply control unit, Engine/motor control unit | 500 |
| 3. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Right tail light cluster, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb | 501 |
| 4. X-contact relief relay, Onboard supply control unit, Front interior light, Front passenger reading light, Driver side reading light | 502 |
| 5. Onboard supply control unit | 503 |
| 6. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor | 504 |
| 7. Reversing light switch, Heater control unit, Onboard supply control unit | 505 |
| 8. Onboard supply control unit, Light conductor for front centre console background lighting, Light conductor for front passenger side background lighting, Light conductor for driver side background lighting | 506 |
| 9. Bonnet contact switch, Wiper motor control unit, Onboard supply control unit, Luggage compartment light, Number plate light | 507 |
| 10. Onboard supply control unit, Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb | 508 |
| 11. Onboard supply control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb | 509 |
| 12. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Steering column combination switch, Onboard supply control unit | 510 |
| 13. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Multifunction display call-up button, Steering column combination switch, Onboard supply control unit, Windscreen and rear window washer pump | 511 |
| 14. Treble horn, Onboard supply control unit | 512 |
| 15. Centre switch module 2 in dash panel, Hazard warning lights button, Heated rear window button, Hazard warning lights switch illumination bulb, Heated rear window switch illumination bulb, 12 V socket | 513 |
| 16. Rear window wiper motor, Heated rear window | 514 |
| 17. Dipped beam relay, Terminal 15 relief relay | 515 |
| 18. Brake light switch, Clutch pedal switch, Radiator fan relay, Fuses in fuse holder, Radiator fan | 516 |
| 19. Rev. counter, Speedometer, Multifunction indicator, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp | 517 |
| 20. Oil pressure switch, Brake fluid level warning contact, Oil pressure switch for reduced oil pressure, Ambient temperature sensor, Control unit in dash panel insert, Voltage supply relay 1, Dash panel insert | 518 |
| 21. Fuel gauge sender, Fuel gauge, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert | 519 |
| 22. Immobiliser reader coil, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert, Coolant temperature warning lamp (too cold) | 520 |
| 23. Fresh air blower switch, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert, Handbrake warning lamp, Fresh air blower series resistor with overheating fuse, Fresh air blower | 521 |
| 24. Fuse holder A | 522 |
| 25. Light switch, Rotary light switch, Fuse holder A | 523 |
| 26. Fuse holder A | 524 |
| 039 - 1.0l engine , CSEA,(MI5),(TJ9) | 525-544 |
| 1. 1.0l engine , CSEA,(MI5),(TJ9) | 525 |
| 2. Battery, Starter, Alternator with voltage regulator, Onboard supply control unit, Fuses in fuse holder | 526 |
| 3. Onboard supply control unit, Voltage supply relay 1 | 527 |
| 4. Terminal 15 relief relay, Onboard supply control unit, Radiator fan | 528 |
| 5. Ignition/starter switch, Onboard supply control unit | 529 |
| 6. Fuse holder A | 530 |
| 7. Fuse holder A | 531 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine/motor control unit | 532 |
| 9. High-pressure sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1 | 533 |
| 10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine/motor control unit, Radiator fan series resistor, Radiator fan | 534 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine/motor control unit | 535 |
| 12. Throttle valve module. Knock sensor 1. Throttle valve drive for electric throttle. Throttle | 536 |

| | |
|--|---------|
| valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit | |
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit | 537 |
| 14. Oil pressure switch, Engine/motor control unit | 538 |
| 15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 539 |
| 16. Glow plug relay, Glow plug activation control unit, Engine/motor control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3 | 540 |
| 17. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Camshaft control valve 1 | 541 |
| 18. X-contact relief relay | 542 |
| 19. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 543 |
| 20. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert | 544 |
| 040 - 1.0l engine , CWRA,(DG2),(TW9) | 545-563 |
| 1. 1.0l engine , CWRA,(DG2),(TW9) | 545 |
| 2. Battery, Starter, Alternator with voltage regulator, Onboard supply control unit, Fuses in fuse holder | 546 |
| 3. Onboard supply control unit, Voltage supply relay 1 | 547 |
| 4. Terminal 15 relief relay, Onboard supply control unit, Radiator fan | 548 |
| 5. Ignition/starter switch, Onboard supply control unit | 549 |
| 6. Fuse holder A | 550 |
| 7. Fuse holder A | 551 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine/motor control unit | 552 |
| 9. High-pressure sender, Engine/motor control unit | 553 |
| 10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump relay, Radiator fan control unit, Engine/motor control unit, Radiator fan series resistor, Radiator fan | 554 |
| 11. Brake light switch, Clutch pedal switch, Radiator fan relay, Engine/motor control unit, Activated charcoal filter solenoid valve 1 | 555 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit | 556 |
| 13. Engine speed sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit | 557 |
| 14. Oil pressure switch, Engine/motor control unit | 558 |
| 15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 559 |
| 16. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Camshaft control valve 1 | 560 |
| 17. X-contact relief relay | 561 |
| 18. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 562 |
| 19. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert | 563 |
| 041 - 1.0l engine , CYTA,(DG9),(T26) | 564-586 |
| 1. 1.0l engine , CYTA,(DG9),(T26) | 564 |
| 2. Battery, Starter, Alternator with voltage regulator, Fuses in fuse holder | 565 |
| 3. X-contact relief relay | 566 |
| 4. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 567 |
| 5. Ignition/starter switch, Onboard supply control unit | 568 |
| 6. Fuse holder A | 569 |
| 7. Fuse holder A | 570 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 571 |
| 9. High-pressure sender, Engine/motor control unit | 572 |
| 10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit | 573 |

| | |
|---|---------|
| 11. Brake light switch, Clutch pedal switch, Engine/motor control unit | 574 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit | 575 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Engine/motor control unit | 576 |
| 14. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit | 577 |
| 15. Steering column combination switch, Intake manifold sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit | 578 |
| 16. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Charge pressure positioner | 579 |
| 17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 580 |
| 18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve | 581 |
| 19. Lambda probe after catalytic converter, Engine/motor control unit, Coolant pump for low-temperature circuit | 582 |
| 20. Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan | 583 |
| 21. Oil pressure switch for reduced oil pressure, Engine/motor control unit | 584 |
| 22. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 585 |
| 23. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 586 |
| 042 - 1.0l engine , DNBA,(DG7),(T26) | 587-610 |
| 1. 1.0l engine , DNBA,(DG7),(T26) | 587 |
| 2. Battery, Starter, Alternator with voltage regulator, Fuses in fuse holder | 588 |
| 3. X-contact relief relay | 589 |
| 4. Terminal 15 relief relay, Onboard supply control unit, Voltage supply relay 1 | 590 |
| 5. Ignition/starter switch, Onboard supply control unit | 591 |
| 6. Fuse holder A | 592 |
| 7. Fuse holder A | 593 |
| 8. Accelerator pedal module, Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 594 |
| 9. High-pressure sender, Engine/motor control unit | 595 |
| 10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit | 596 |
| 11. Brake light switch, Clutch pedal switch, Engine/motor control unit | 597 |
| 12. Throttle valve module, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit | 598 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Engine/motor control unit | 599 |
| 14. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit | 600 |
| 15. Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Intake manifold sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit | 601 |
| 16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Vacuum pump for brakes, Charge pressure positioner | 602 |
| 17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plugs | 603 |
| 18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve | 604 |
| 19. Lambda probe after catalytic converter, Engine/motor control unit, Coolant pump for low-temperature circuit | 605 |
| 20. Brake servo pressure sensor, Engine/motor control unit, Radiator fan | 606 |
| 21. Oil pressure switch for reduced oil pressure, Engine/motor control unit | 607 |
| 22. Radiator outlet coolant temperature sender, Engine/motor control unit | 608 |
| 23. Fuel gauge, Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Malfunction warning lamp, Electrohydraulic power steering warning lamp | 609 |
| 24. Immobiliser reader coil, Brake fluid level warning contact, Parking brake contact switch, Ambient temperature sensor, Coolant shortage indicator sender, Control unit in dash panel insert, Immobiliser control unit, Dash panel insert | 610 |
| 043 - Radio . (8YJ).(8YK) | 611-617 |

| | |
|--|---------|
| 1. Radio , (8YJ),(8YK) | 611 |
| 2. Onboard supply control unit, Fuse holder A | 612 |
| 3. Radio | 613 |
| 4. Radio, Front left loudspeaker, Front left treble loudspeaker | 614 |
| 5. Radio, Front right loudspeaker, Roof aerial, Aerial, Front right treble loudspeaker | 615 |
| 6. Telephone bracket, USB connection 1, USB connection 2 | 616 |
| 7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 617 |
| 044 - Radio , (I6V) | 618-624 |
| 1. Radio , (I6V) | 618 |
| 2. Radio | 619 |
| 3. Radio, Front left loudspeaker, Front left treble loudspeaker | 620 |
| 4. Radio, Front right loudspeaker, Front right treble loudspeaker, Telephone microphone | 621 |
| 5. Radio, Roof aerial, Aerial, Telephone bracket, USB connection 1 | 622 |
| 6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 623 |
| 7. Onboard supply control unit, Fuse holder A | 624 |
| 045 - Anti-lock brake system (ABS) , (1AC) | 625-629 |
| 1. Anti-lock brake system (ABS) , (1AC) | 625 |
| 2. ABS control unit, ABS solenoid valve relay, Fuses in fuse holder, Fuse holder A | 626 |
| 3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Rear right ABS inlet valve | 627 |
| 4. ABS control unit, ABS return flow pump relay, Onboard supply control unit, Front left ABS outlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve, ABS return flow pump | 628 |
| 5. Brake fluid level warning contact, Control unit in dash panel insert, Dash panel insert, ABS warning lamp, Brake system warning lamp | 629 |
| 046 - Air conditioning system , (9AB) | 630-635 |
| 1. Air conditioning system , (9AB) | 630 |
| 2. Fuse holder A, Air conditioner compressor | 631 |
| 3. High-pressure sender, Air conditioning system relay, Air conditioning system control unit | 632 |
| 4. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower | 633 |
| 5. Radiator fan control unit, Radiator fan series resistor, Fuses in fuse holder, Radiator fan | 634 |
| 6. Engine/motor control unit, Radiator fan | 635 |
| 047 - Automated manual gearbox , CSEA,CWRA | 636-641 |
| 1. Automated manual gearbox , CSEA,CWRA | 636 |
| 2. Automated manual gearbox control unit, Fuses in fuse holder, Fuse holder A | 637 |
| 3. Gearbox input speed sender, Automated manual gearbox control unit, Clutch actuator, Clutch actuator motor | 638 |
| 4. Automated manual gearbox control unit, Gear actuator, Gear actuator motor 1, Gear actuator motor 2 | 639 |
| 5. Selector lever, Automated manual gearbox control unit, Parking lock solenoid | 640 |
| 6. Starter inhibitor relay, Onboard supply control unit | 641 |
| 048 - Electromechanical power steering (Servotronic) , (1N3) | 642-643 |
| 1. Electromechanical power steering (Servotronic) , (1N3) | 642 |
| 2. Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Onboard supply control unit, Fuses in fuse holder, Fuse holder A, Electromechanical power steering motor | 643 |
| 049 - Airbag systems , (4UE) | 644-650 |
| 1. Airbag systems , (4UE) | 644 |
| 2. Airbag control unit, Driver seat belt tensioner igniter 1, Diagnostic connection | 645 |
| 3. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Front passenger seat belt tensioner igniter 1 | 646 |
| 4. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor, front passenger side, Front airbag crash sensor for driver side, Airbag control unit | 647 |
| 5. Airbag control unit, Airbag igniter 1 on front passenger side, Fuse holder A | 648 |
| 6. Onboard supply control unit | 649 |
| 7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp, Airbag warning lamp | 650 |
| 050 - Central locking , (4I1),(4I2) | 651-659 |
| 1. Central locking , (4I1),(4I2) | 651 |
| 2. Driver side interior locking button for central locking system, Driver side central locking lock unit, Onboard supply control unit, Driver door central locking motor | 652 |
| 3. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door central locking motor | 653 |

| | |
|---|---------|
| 4. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door central locking motor | 654 |
| 5. Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor | 655 |
| 6. Rear right central locking lock unit, Onboard supply control unit, Rear right door central locking motor | 656 |
| 7. Centre switch module 2 in dash panel, Anti-theft alarm ultrasonic sensor, Onboard supply control unit, Deactivation of interior monitoring system switch illumination bulb | 657 |
| 8. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert | 658 |
| 9. Anti-theft alarm system horn, Alarm horn relay, Fuse holder A | 659 |
| 051 - Electric windows, rear vent windows , (4R1) | 660-662 |
| 1. Electric windows, rear vent windows , (4R1) | 660 |
| 2. Front right window regulator switch, Fuse holder A, Right window regulator motor | 661 |
| 3. Front left window regulator switch, Left window regulator motor | 662 |
| 052 - Electrically adjustable exterior mirror , (6XC) | 663-668 |
| 1. Electrically adjustable exterior mirror , (6XC) | 663 |
| 2. Onboard supply control unit | 664 |
| 3. Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor | 665 |
| 4. Driver side turn signal repeater bulb, Fuse holder A, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor | 666 |
| 5. Mirror adjustment switch | 667 |
| 6. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 668 |
| 053 - System for lowering passenger side mirror , (6YA) | 669-675 |
| 1. System for lowering passenger side mirror , (6YA) | 669 |
| 2. Onboard supply control unit | 670 |
| 3. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor | 671 |
| 4. Driver side turn signal repeater bulb, Fuse holder A, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor | 672 |
| 5. Mirror adjustment switch | 673 |
| 6. Control unit for lowering passenger side mirror | 674 |
| 7. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Alternator warning lamp | 675 |
| 054 - Parking aid (PDC) , (7X1) | 676-678 |
| 1. Parking aid (PDC) , (7X1) | 676 |
| 2. Rear parking aid warning buzzer, Parking aid control unit, Onboard supply control unit, Fuse holder A | 677 |
| 3. Rear left parking aid sender, Rear right parking aid sender, Rear centre parking aid sender, Parking aid control unit | 678 |
| 055 - Fog light , (8WE),(8WH) | 679-683 |
| 1. Fog light , (8WE),(8WH) | 679 |
| 2. Light switch, Rotary light switch, Front and rear fog light switch, Onboard supply control unit, Light switch illumination bulb | 680 |
| 3. Rotary light switch, Light switch, Onboard supply control unit | 681 |
| 4. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Fuse holder A | 682 |
| 5. Fuse holder A | 683 |
| 056 - Preparation for radio , (8UB) | 684-688 |
| 1. Preparation for radio , (8UB) | 684 |
| 2. Onboard supply control unit, Radio, Roof aerial, Aerial | 685 |
| 3. Radio, Rear left loudspeaker, Rear right loudspeaker | 686 |
| 4. Radio, Front right loudspeaker, Front right treble loudspeaker | 687 |
| 5. Radio, Front left loudspeaker, Front left treble loudspeaker, Fuse holder A | 688 |
| 057 - Onboard supply control unit , (VH0) | 689-700 |
| 1. Onboard supply control unit , (VH0) | 689 |
| 2. Wiper motor control unit, Onboard supply control unit | 690 |
| 3. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Rear wiper switch, Steering column combination switch, Onboard supply control unit, Diagnostic connection | 691 |
| 4. Onboard supply control unit, Engine/motor control unit | 692 |
| 5. Ignition/starter switch, Rear lid lock unit, Onboard supply control unit | 693 |
| 6. Onboard supply control unit | 694 |
| 7. Centre switch module 2 in dash panel, Hazard warning lights button, Heated rear window button, Onboard supply control unit, Hazard warning lights switch illumination bulb, Left tail light cluster, Right tail light cluster | 695 |

| | |
|--|---------|
| 8. Driver side central locking lock unit, Onboard supply control unit, Driver door central locking motor | 696 |
| 9. Anti-theft alarm ultrasonic sensor, Onboard supply control unit | 697 |
| 10. Onboard supply control unit | 698 |
| 11. Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door central locking motor | 699 |
| 12. Fuse holder A | 700 |
| 058 - Onboard supply control unit , (VH1) | 701-718 |
| 1. Onboard supply control unit , (VH1) | 701 |
| 2. Bonnet contact switch, Anti-theft alarm ultrasonic sensor, Rain and light sensor, Onboard supply control unit | 702 |
| 3. Ignition/starter switch, Onboard supply control unit, Dash panel insert | 703 |
| 4. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left headlight, Front right headlight, Front left turn signal bulb | 704 |
| 5. Driver side central locking lock unit, Onboard supply control unit, Diagnostic connection, Driver door central locking motor | 705 |
| 6. Centre switch module 2 in dash panel, Hazard warning lights button, Heated rear window button, Onboard supply control unit, Hazard warning lights switch illumination bulb, Heated rear window switch illumination bulb, Radio | 706 |
| 7. Wiper motor control unit, Onboard supply control unit | 707 |
| 8. Reversing light switch, Onboard supply control unit | 708 |
| 9. Onboard supply control unit, Engine/motor control unit | 709 |
| 10. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb | 710 |
| 11. Onboard supply control unit, Front interior light | 711 |
| 12. Light switch, Onboard supply control unit | 712 |
| 13. Rear left central locking lock unit, Rear right central locking lock unit, Onboard supply control unit, Rear right door central locking motor, Rear left door central locking motor | 713 |
| 14. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit | 714 |
| 15. Airbag coil connector and return ring with slip ring, Onboard supply control unit | 715 |
| 16. Front passenger side central locking lock unit, Onboard supply control unit, Passenger side exterior mirror, Front passenger door central locking motor | 716 |
| 17. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Rear wiper switch, Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Onboard supply control unit, Fuses in fuse holder | 717 |
| 18. Fuse holder A | 718 |
| 059 - Fuse assignment | 719-747 |
| 1. Fuse assignment | 719 |
| 2. Battery, Starter, Alternator with voltage regulator, Fuses in fuse holder | 720 |
| 3. Radiator fan relay, Fuses in fuse holder | 721 |
| 4. Lambda probe, Fuse holder A | 722 |
| 5. Fuse holder A | 723 |
| 6. Radio, Fuse holder A | 724 |
| 7. Fuse holder A | 725 |
| 8. Airbag control unit, Fuse holder A | 726 |
| 9. Front left window regulator switch, Fuse holder A | 727 |
| 10. Telephone bracket, Fuse holder A | 728 |
| 11. ABS control unit, Fuse holder A | 729 |
| 12. Fuse holder A, Diagnostic connection | 730 |
| 13. Onboard supply control unit, Front interior light, Front passenger reading light, Driver side reading light | 731 |
| 14. X-contact relief relay, Onboard supply control unit | 732 |
| 15. Onboard supply control unit | 733 |
| 16. Onboard supply control unit, Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb | 734 |
| 17. Onboard supply control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight | 735 |
| 18. Headlight dipper and flasher switch, Intermittent wiper switch, Steering column combination switch, Onboard supply control unit | 736 |
| 19. Light switch, Rotary light switch, Onboard supply control unit | 737 |
| 20. Onboard supply control unit | 738 |
| 21. Reversing light switch, Heater control unit, Onboard supply control unit | 739 |
| 22. Onboard supply control unit, Activated charcoal filter solenoid valve 1, Coolant pump for low-temperature circuit | 740 |
| 23. Left tail light cluster. Left tail light bulb. Camshaft control valve 1 | 741 |

| | |
|---|---------|
| 24. Clutch pedal switch, Terminal 15 relief relay, Power steering control unit, Engine/motor control unit, Voltage supply relay 1 | 742 |
| 25. Centre switch module 2 in dash panel, Air conditioning system control unit, Heated rear window switch illumination bulb, Deactivation of interior monitoring system switch illumination bulb, Right tail light bulb, Right tail light cluster, 12 V socket | 743 |
| 26. Rear window wiper motor | 744 |
| 27. Ignition/starter switch | 745 |
| 28. Rev. counter, Speedometer, Control unit in dash panel insert, Dash panel insert, Main beam warning lamp, Alternator warning lamp, Seat belt warning system warning lamp | 746 |
| 29. Fuel pump relay, Fuel pump control unit | 747 |
| 060 - Coming Home , (8K3),(8K8) | 748-753 |
| 1. Coming Home , (8K3),(8K8) | 748 |
| 2. Light switch, Front and rear fog light switch, Light switch illumination bulb, Fuse holder A | 749 |
| 3. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Steering column combination switch, Onboard supply control unit | 750 |
| 4. Onboard supply control unit, Left headlight twin filament bulb, Left fog light bulb, Left daytime running light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb | 751 |
| 5. Onboard supply control unit, Right headlight twin filament bulb, Right fog light bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb | 752 |
| 6. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Right tail light cluster, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb | 753 |
| 061 - Multifunction steering wheel , (1XA),(2ZH) | 754-757 |
| 1. Multifunction steering wheel , (1XA),(2ZH) | 754 |
| 2. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit | 755 |
| 3. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Airbag igniter on driver side | 756 |
| 4. Onboard supply control unit, Fuse holder A | 757 |
| 062 - Data bus network | 758-762 |
| 1. Data bus network | 758 |
| 2. Onboard supply control unit, Diagnostic connection | 759 |
| 3. Onboard supply control unit, Radio | 760 |
| 4. ABS control unit, Airbag control unit, Power steering control unit, Automated manual gearbox control unit, Dash panel insert | 761 |
| 5. Selector lever, Airbag coil connector and return ring with slip ring, Anti-theft alarm ultrasonic sensor, Rain and light sensor, Parking aid control unit, Engine/motor control unit | 762 |
| 063 - Earthing concept | 763-772 |
| 1. Earthing concept | 763 |
| 2. Right headlight twin filament bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb, Earth point, on right in engine compartment | 764 |
| 3. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Radio, Earth point, on cylinder head, Earth point (audio), front below centre console | 765 |
| 4. Radiator fan | 766 |
| 5. Engine/motor control unit, Left headlight twin filament bulb, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, Earth point 1, on front of left longitudinal member | 767 |
| 6. Front left window regulator switch, Driver side central locking lock unit, ABS control unit, Earth point, on lower left of engine block, Earth point 2, on front of left longitudinal member, Earth point, in front left wheel housing | 768 |
| 7. Onboard supply control unit, Earth point, lower part of left A-pillar, Earth point, on top end of steering column, Earth point, left A-pillar | 769 |
| 8. Light switch | 770 |
| 9. Front passenger side central locking lock unit, Diagnostic connection, Passenger side exterior mirror, Earth point, lower part of right A-pillar | 771 |
| 10. Steering column combination switch, Earth point, on left rear wheel housing | 772 |
| 801 - Fitting Locations - Earth points - 3 | 773-775 |
| 1. Earth points | 773-775 |
| 1.1 Engine compartment earth points | 773 |
| 1.2 Vehicle interior earth points | 774 |
| 1.3 Luggage compartment earth points | 775 |
| 802 - Fitting Locations <i>f</i> Fuses - 3 | 776-790 |
| 1. Fuse Locations | 776-790 |
| 1.1 Battery fuse holder -S-, as of February 2014 | 776-778 |
| 1.1.1 Battery fuse holder -S- | 777-778 |

| | |
|---|---------|
| 1.2 SA Fuse holder, as of February 2014- | 779-783 |
| 1.2.1 SA fuse holder, as of April 2014 | 780-783 |
| 1.3 SA fuse holder, as of April 2016- | 784-790 |
| 1.3.1 SA fuse holder, as of April 2016 | 785-790 |
| 803 - Fitting Locations <i>f</i> Relays - 3 | 791-794 |
| 1. Relays | 791-794 |
| 1.1 Relay on the left in the engine compartment, as of February 2014 | 792 |
| 1.1.1 Relay description, as of February 2014: | 792 |
| 1.2 Relay to the left, behind the dashboard | 793-794 |
| 1.2.1 Relay descriptions, as of February 2014: | 793 |
| 1.2.2 Relay descriptions, as of January 2017: | 794 |
| 804 - Fitting Locations - Front vehicle area control units - 3 | 795-806 |
| 1. Control units | 795-806 |
| 1.1 Glow plug activation control unit -J370- | 796-797 |
| 1.1.1 Fitting Location: | 796 |
| 1.1.2 Connector description: Glow plug activation control unit -J370- | 797 |
| 1.2 Engine control unit -J623- | 798 |
| 1.2.1 Fitting Location: | 798 |
| 1.3 Automated manual gearbox control unit -J514- | 799-801 |
| 1.3.1 Fitting Location: | 799 |
| 1.3.2 Connector Description: Automated manual gearbox control unit -J514- | 800-801 |
| 1.4 Engine control unit -J623- | 802 |
| 1.4.1 Fitting Location: | 802 |
| 1.5 ABS control unit -J104- | 803-806 |
| 1.5.1 Fitting locations: | 803 |
| 1.5.2 Connector description: ABS control unit -J104- | 804-806 |
| 805 - Fitting Locations - Central vehicle area control units - 3 | 807-833 |
| 1. Control units | 807-833 |
| 1.1 Air conditioning control unit -J301- | 808-809 |
| 1.1.1 Fitting Location: | 808 |
| 1.1.2 Connector description: Air conditioning control unit -J301- | 809 |
| 1.2 Heating system control unit -J162- | 810-811 |
| 1.2.1 Fitting Location: | 810 |
| 1.2.2 Connector description: Heating system control unit -J162- | 811 |
| 1.3 Selector lever -E313- | 812-813 |
| 1.3.1 Fitting Location: | 812 |
| 1.3.2 Description of the connectors:Selector lever -E313- | 813 |
| 1.4 Instrument cluster indicator control unit -J285- | 814-816 |
| 1.4.1 Fitting Location: | 814 |
| 1.4.2 Connector description: Instrument cluster indicator control unit -J285- | 815-816 |
| 1.5 Fuel pump control unit -J538- | 817 |
| 1.5.1 Fitting Location: | 817 |
| 1.5.2 Description of the connectors:Fuel pump control unit -J538- | 817 |
| 1.6 Parking assist control unit -J446- | 818-819 |
| 1.6.1 Fitting Location: | 818 |
| 1.6.2 Connector description: Parking aid control unit -J446- | 819 |
| 1.7 Control unit for lowering passenger side mirror -J1110- | 820-821 |
| 1.7.1 Fitting Location: | 820 |
| 1.7.2 Connector description: Front passenger exterior mirror lowering function control unit -J1110- | 821 |
| 1.8 Onboard network control unit: BFM -J519- | 822-825 |
| 1.8.1 Fitting Location: | 822 |
| 1.8.2 Connector description: Onboard network control unit: BFM -J519- | 823-825 |
| 1.9 Onboard network control unit: BCM -J519- | 826-829 |
| 1.9.1 Fitting Location: | 826 |
| 1.9.2 Connector description: Onboard network control unit: BCM -J519- | 827-829 |
| 1.10 Airbag control unit -J234- | 830 |
| 1.10.1 Fitting Location: | 830 |
| 1.11 Power steering control unit -J500- | 831-833 |
| 1.11.1 Fitting Location: | 831 |
| 1.11.2 Connector description: Power steering control unit -J500- | 832-833 |
| 849 - --Overview-- - 3 | 834-848 |
| 1. Current flow diagram - overview | 834-848 |
| 1.1 Signal name | 834-842 |
| 1.1.1 Signal name as of 2017 | 834-837 |
| 1.1.2 Signal name - DIN 72552 standard | 838-841 |
| 1.1.3 signal name - adjunct | 842 |

| | |
|--------------------------|---------|
| 1.2 wires | 843-844 |
| 1.2.1 Wire cross section | 843 |
| 1.2.2 Wire colour | 843 |
| 1.2.3 Coaxial line | 844 |
| 1.3 Fuse colours | 845-848 |