



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	3
3.1 Technical data for brakes	3
4 Brake test	5
4.1 General information	5
4.2 Checking vehicles with front-wheel drive	5
45 - Anti-lock brake system	6
1 General information	6
1.1 Repair instructions for repair work on ABS	7
2 Overview of fitting locations	8
2.1 ABS	8
2.2 ABS/ESP	9
3 Control unit and hydraulic unit	11
3.1 Assembly overview - control unit and hydraulic unit	11
3.2 Removing and installing control unit and hydraulic unit	13
3.3 Connecting brake lines to hydraulic unit	21
4 Sensors	23
4.1 Assembly overview - speed sensor on front axle	23
4.2 Removing and installing speed sensor on front axle	24
4.3 Assembly overview - speed sensor on rear axle	24
4.4 Removing and installing speed sensor on rear axle	26
4.5 Removing and installing steering angle sender G85	26
4.6 Removing and installing yaw rate sender and lateral acceleration sender	27
46 - Brakes - mechanism	28
1 Front brake	28
1.1 Assembly overview - front brake	28
1.2 Removing and installing brake pads	31
1.3 Removing and installing brake caliper	36
2 Rear brake	41
2.1 Assembly overview - rear brakes	41
2.2 Resetting drum brakes	42
2.3 Removing and installing brake shoes	42
3 Parking brake	46
3.1 Assembly overview - parking brake	46
3.2 Removing and installing rear brake cable	47
3.3 Adjusting parking brake	50
4 Brake pedal	51
4.1 Assembly overview - brake pedal	51
4.2 Separating brake pedal from brake servo	53
4.3 Connecting brake pedal to brake servo	54
4.4 Removing and installing brake pedal	54
4.5 Removing and installing mounting bracket	55
47 - Brakes - hydraulics	57
1 Front brake caliper	57



1.1	Assembly overview – front brake caliper	57
1.2	Removing and installing brake caliper piston	59
2	Brake servo and brake master cylinder	63
2.1	Assembly overview - brake servo/brake master cylinder	63
2.2	Removing and installing brake light switch	66
2.3	Removing and installing brake master cylinder	69
2.4	Removing and installing brake servo	74
3	Vacuum system	81
3.1	Assembly overview – vacuum pump	81
3.2	Checking non-return valve	82
3.3	Removing and installing brake servo pressure sensor	83
3.4	Removing and installing electrical vacuum pump for brakes	83
3.5	Checking vacuum system	84
4	Brake lines	89
4.1	Repairing brake lines	89
5	Hydraulic system	94
5.1	General notes on brake fluid	94
5.2	Bleeding hydraulic system following standard procedure	94
5.3	Subsequent bleeding of hydraulic system	95
5.4	Leakage test:	97