



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Contact corrosion	2
2.2 Routing and attachment of lines	2
3 Battery	3
3.1 Battery - general notes	3
3.2 Types of battery	3
27 - Starter, current supply, CCS	4
1 Battery	4
1.1 Assembly overview - battery	4
1.2 Removing and installing battery	6
1.3 Disconnecting and connecting battery	7
1.4 Removing and installing battery tray	9
1.5 Checking battery	10
1.6 Charging battery	10
1.7 Removing and installing earth wire with battery monitor control unit J367	11
1.8 Adapting battery monitor control unit J367	11
2 Alternator	12
2.1 Assembly overview - alternator	12
2.2 Removing and installing alternator	13
2.3 Checking alternator	16
2.4 Removing and installing poly V-belt pulley	16
2.5 Removing and installing voltage regulator	24
3 Starter motor	29
3.1 Assembly overview - starter	29
3.2 Removing and installing starter	29
4 Cruise control system (CCS)	32
5 Start/stop system	33
5.1 General description - start/stop system	33
5.2 Removing and installing voltage stabiliser	34
90 - Gauges, instruments	35
1 Dash panel insert	35
1.1 Assembly overview - dash panel insert	35
1.2 Removing and installing dash panel insert KX2	39
2 Horn	42
2.1 Assembly overview - horn	42
2.2 Removing and installing treble horn H2 and bass horn H7	43
92 - Windscreen wash/wipe system	44
1 Windscreen wiper system	44
1.1 Assembly overview - windscreen wiper system	44
1.2 Moving wipers to service position	45
1.3 Removing and installing wiper blade	45
1.4 Removing and installing wiper arms	46
1.5 Adjusting wiper arms	48
1.6 Removing and installing wiper motor V	49
1.7 Renewing wiper motor	50



1.8	Deactivating APP function of wiper motor	53
1.9	Removing and installing rain and light sensor	53
2	Windscreen washer system	57
2.1	Assembly overview - windscreen washer system	57
2.2	Removing and installing washer fluid reservoir	58
2.3	Removing and installing windscreen washer pump	59
2.4	Removing and installing washer jets	60
2.5	Adjusting spray jets	61
3	Rear window wiper system	62
3.1	Assembly overview - rear window wiper system	62
3.2	Removing and installing wiper blade	63
3.3	Removing and installing wiper arm	63
3.4	Adjusting wiper arm	64
3.5	Removing and installing rear window wiper motor V12	65
4	Rear window washer system	67
4.1	Assembly overview - rear window washer system	67
4.2	Removing and installing spray jet	67
4.3	Adjusting spray jet	68
5	Washer fluid lines	69
5.1	Repairing washer fluid lines	69
94	Lights, bulbs, switches - exterior	70
1	Headlights	70
1.1	Assembly overview - headlight	70
1.2	Removing and installing headlight	71
1.3	Adjusting headlights	73
1.4	Adjusting headlight installation position	73
1.5	Removing and installing front turn signal bulb M5 / M7	74
1.6	Installing repair kit for headlight housing	76
1.7	Converting headlights from driving on right to driving on left	79
1.8	Converting headlights from driving on left to driving on right	79
1.9	Removing and installing headlight range control motor V48 / V49	79
1.10	Removing and installing dipped beam bulb	80
1.11	Removing and installing LED modules for daytime running light and side light L176 / L177	82
1.12	Removing and installing control unit for daytime running light and side light J860 / J861	82
2	Fog lights	84
2.1	Assembly overview - fog lights	84
2.2	Removing and installing fog light	84
2.3	Removing and installing fog light bulb L22 / L23	85
2.4	Adjusting fog lights	86
3	Lights in exterior mirror	87
3.1	Removing and installing turn signal	87
3.2	Removing and installing turn signal repeater bulb L131 / L132	87
4	Tail lights	88
4.1	Assembly overview - tail lights in body	88
4.2	Removing and installing bulb carrier	89
4.3	Removing and installing tail light cluster	89
4.4	Removing and installing tail light bulb M2 / M4	90
4.5	Removing and installing rear fog light	91
4.6	Removing and installing rear fog light bulb L46 / L47	91
4.7	Removing and installing brake and tail light bulb M21 / M22	92
4.8	Removing and installing reversing light bulb	92
4.9	Removing and installing turn signal bulb	93



5	High-level brake light	94
5.1	Assembly overview - high-level brake light	94
5.2	Removing and installing high-level brake light	94
6	Number plate light	97
6.1	Removing and installing number plate light X4 / X5	97
6.2	Removing and installing bulb for number plate light X4 / X5	97
7	Steering column switch module	98
7.1	Assembly overview - steering column switch module	98
7.2	Removing and installing steering column switch module	99
7.3	Removing and installing steering column electronics control unit J527	101
7.4	Removing and installing base for steering column combination switch	103
7.5	Removing and installing turn signal switch E2	103
7.6	Removing and installing cruise control system switch E45	103
7.7	Removing and installing intermittent wiper switch E22	103
7.8	Removing and installing ignition/starter switch	104
7.9	Removing and installing lock cylinder	105
7.10	Removing and installing steering lock housing	106
7.11	Removing and installing ignition key withdrawal lock solenoid N376	108
8	Parking aid	109
8.1	Assembly overview – parking aid	109
8.2	Removing and installing parking aid control unit J446	109
8.3	Removing and installing rear parking aid warning buzzer H15	110
8.4	Removing and installing rear parking aid senders	111
9	Emergency braking function	113
9.1	Removing and installing City Emergency Braking System	113
96	Lights, bulbs, switches - interior	115
1	Lights	115
1.1	Removing and installing Central locking SAFELOCK function warning lamp K133	115
1.2	Renewing front interior light bulb W1	115
1.3	Removing and installing bulb for front reading light W13 / W19	117
2	Controls	119
2.1	Removing and installing rotary light switch EX1	119
2.2	Removing and installing headlight range control regulator E102	120
2.3	Removing and installing switch module in middle of dash panel	120
2.4	Removing and installing Start/Stop operation button E693	122
2.5	Removing and installing hazard warning light button E229	122
2.6	Removing and installing heated rear window button	122
2.7	Removing and installing button for driver assist systems E617	122
2.8	Removing and installing buttons for seat heating E653 / E654	123
2.9	Removing and installing mirror adjustment switch E43 / E168	123
2.10	Removing and installing operating unit for window regulator in driver door E512	123
2.11	Removing and installing front window regulator switch	125
2.12	Removing and installing driver side interior locking button for central locking system E308	126
2.13	Removing and installing centre console switch module	126
2.14	Removing and installing button for emergency braking function	127
2.15	Removing and installing sliding sunroof adjustment regulator	128
2.16	Removing and installing front interior light/reading light	128
2.17	Removing and installing front passenger airbag deactivated warning lamp K145	132
3	Immobiliser	133
3.1	Removing and installing immobiliser control unit	133
3.2	Removing and installing immobiliser reader coil	133
4	Front camera for assist systems	134
4.1	Assembly overview - front camera for assist systems	134



4.2	Removing and installing front camera for driver assist systems R242	134
4.3	Calibrating front camera for driver assist systems R242	136
5	Cigarette lighter, socket	143
5.1	Removing and installing cigarette lighter U1	143
5.2	Removing and installing electric socket U	143
5.3	Removing and installing bulb for illuminating cigarette lighter	143
97 - Wiring		144
1	Relay carriers, fuse holders, electronics boxes	144
1.1	Removing and installing electronics box (E-box)	144
1.2	Removing and installing relay and fuse holder in electronics box	146
1.3	Removing and installing relay and fuse holder behind dash panel on driver side	148
2	Control units	154
2.1	Removing and installing onboard supply control unit J519	154
2.2	Removing and installing data bus diagnostic interface J533	155
3	Connectors	156
3.1	Repairing electrical wiring harnesses and plug-in connections	156
4	Releasing and dismantling connector housings	157
5	Repairing aerial wires	158
6	Vehicle diagnosis, testing and information systems	159