



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Assembly overview – lock carrier	1
1.2 Moving to and back from service position	1
1.3 Removing and installing lock carrier	5
2 Wings	8
2.1 Assembly overview – wing	8
2.2 Removing and installing wing	8
3 Bulkhead	14
3.1 Assembly overview – bulkhead	14
3.2 Assembly overview – plenum chamber cover	14
3.3 Removing and installing plenum chamber cover	15
55 - Bonnet, rear lid	19
1 Bonnet	19
1.1 Assembly overview – bonnet	19
1.2 Removing and installing bonnet	22
1.3 Adjusting bonnet	26
1.4 Removing and installing hinges	31
1.5 Removing and installing bonnet stay	33
1.6 Removing and installing bonnet seals	35
1.7 Removing and installing rear lid lock	36
1.8 Removing and installing bonnet lock operating lever	39
2 Rear lid	42
2.1 Assembly overview – rear lid	42
2.2 Removing and installing rear lid	44
2.3 Adjusting rear lid	47
2.4 Removing and installing hinges	54
2.5 Removing and installing gas strut	57
2.6 Removing and installing operating mechanism	60
2.7 Removing and installing rear lid lock	62
2.8 Removing and installing rear lid seal	65
3 Tank flap unit	68
3.1 Assembly overview – tank flap unit	68
3.2 Removing and installing tank flap unit	68
4 Charging flap unit	71
4.1 Assembly overview – charging flap unit	71
4.2 Removing and installing charging flap unit	72
57 - Front doors, door components, central locking	76
1 Door	76
1.1 Assembly overview – door	76
1.2 Removing and installing door	78
1.3 Adjusting door	82
1.4 Adjusting striker pin	86
2 Door components	89
2.1 Assembly overview - components	89
2.2 Assembly overview – door handle and door lock	92
2.3 Removing and installing components	94
2.4 Removing and installing door handle	100
2.5 Removing and installing door lock	113
2.6 Removing and installing door seal	116



3	Central locking	119
3.1	Assembly overview - central locking	119
3.2	Removing and installing ignition key battery	122
58	Rear doors, door components	125
1	Door	125
1.1	Assembly overview – door	125
1.2	Removing and installing door	127
1.3	Adjusting door	131
1.4	Adjusting striker pin	133
2	Door components	137
2.1	Assembly overview - components	137
2.2	Assembly overview – door handle and door lock	138
2.3	Removing and installing components	139
2.4	Removing and installing door handle	146
2.5	Removing and installing door lock	152
2.6	Removing and installing door seal	155
60	Sunroof	158
1	Sliding sunroof	158
1.1	Assembly overview – sliding sunroof	158
1.2	Assembly overview – sunroof roller blind	161
1.3	Assembly overview - sliding sunroof frame	162
1.4	Assembly overview - front trim	163
1.5	Removing sunroof panel	164
1.6	Adjusting sunroof panel	171
1.7	Removing and installing sliding sunroof adjustment control unit J245	172
1.8	Adapting sliding sunroof adjustment control unit J245	177
1.9	Removing and installing cover	178
1.10	Removing and installing wind deflector	179
1.11	Removing and installing sunroof roller blind	181
1.12	Removing and installing slotted guide	188
1.13	Removing and installing sliding sunroof seals	192
1.14	Removing and installing sliding sunroof frame	195
1.15	Removing and installing front trim for sliding sunroof	205
2	Water drain hoses	215
2.1	Assembly overview - water drain hoses	215
2.2	Cleaning water drain hoses	215
63	Bumpers	218
1	Bumper, front	218
1.1	Assembly overview – bumper cover	218
1.2	Removing and installing bumper cover	224
1.3	Repairing bumper cover	227
2	Bumper, rear	228
2.1	Assembly overview – bumper cover	228
2.2	Removing and installing bumper cover	234
2.3	Installing holder for parking aid sender	237
2.4	Repairing bumper cover	242
64	Glazing	243
1	Repair notes	243
1.1	Minimum drying times for bonded windows	243
1.2	Window repair	244
1.3	Installation instructions for bonded windows	244



1.4	Preparing old undamaged windows for installing	246
1.5	Preparing new windows for installing	247
1.6	Preparing body flange for installing	247
1.7	Cleaning off excess adhesive	249
2	Windscreen	250
2.1	Assembly overview – windscreen	250
2.2	Removing and installing windscreen	250
3	Rear windscreen	257
3.1	Assembly overview – rear window	257
3.2	Removing and installing rear window	257
4	Side windows	262
4.1	Assembly overview - rear side windows	262
4.2	Removing and installing rear side window	262
5	Door windows	266
5.1	Assembly overview - front door window	266
5.2	Assembly overview - rear door window	266
5.3	Removing and installing front door window	267
5.4	Removing and installing rear door window	271
6	Window regulator	275
6.1	Removing and installing front window regulator	275
6.2	Removing and installing front window regulator motor	277
6.3	Removing and installing front window regulator drive	280
6.4	Removing and installing front window crank	282
6.5	Removing and installing rear window regulator	283
7	Window channels and seals	286
7.1	Removing and installing front window channel	286
7.2	Guide rail	289
7.3	Removing and installing rear window channel	293
7.4	Removing and installing front window slot seal	295
7.5	Removing and installing rear window slot strip	299
7.6	Removing and installing window seal	301
66	- Exterior equipment	302
1	Radiator grille and front trim	302
1.1	Assembly overview – radiator grille	302
1.2	Removing and installing radiator grille	302
2	Spoiler	305
2.1	Assembly overview - spoiler, GTI	305
2.2	Removing and installing spoiler, GTI	305
3	Mouldings, trims, extensions	311
3.1	Assembly overview – side member trim	311
3.2	Assembly overview - A-pillar trim	312
3.3	Removing and installing side member trim	313
3.4	Removing and installing B-pillar trim	325
3.5	Removing and installing wheel arch covers	328
3.6	Removing and installing trim strips	332
3.7	Removing and installing step moulding	336
3.8	Removing and installing trim strip	339
4	Underbody cladding	341
4.1	Assembly overview - gas tank cover	341
4.2	Overview of fitting locations – trims	341
4.3	Assembly overview - bracing on underbody	344
4.4	Removing and installing underbody cladding	345
5	Roof moulding and roof railing	348



5.1	Assembly overview - roof railing	348
5.2	Removing and installing roof railing	348
6	Exterior mirror	350
6.1	Assembly overview – exterior mirror	350
6.2	Removing and installing mirror glass	354
6.3	Removing and installing mirror cover	356
6.4	Removing and installing mirror frame	362
6.5	Removing and installing mirror adjustment unit	364
6.6	Removing and installing exterior mirror	369
7	Wheel housing liner	375
7.1	Assembly overview – front wheel housing liner	375
7.2	Assembly overview – rear wheel housing liner	375
7.3	Removing and installing front wheel housing liner	376
7.4	Removing and installing rear wheel housing liner	379
8	Lettering and badges	384
8.1	Dimensions - lettering and badges on rear	384
8.2	Renewing lettering and badges on sides	387
8.3	Removing and installing lettering and emblems for radiator grille	391
8.4	Renewing lettering and badges at rear	395
9	Protective films/decorative films	399
9.1	Renewing protective films/decorative films	399
10	Special add-on parts	405
10.1	Assembly overview – special add-on parts	405
11	Heat shields	408
11.1	Removing and installing underbody heat shield	408