



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Repair notes	2
2.1 General repair instructions	2
3 Technical data	5
3.1 Allocation gearbox - engine	5
3.2 Calculation of gear ratios	5
4 Electrical components	6
30 - Clutch	7
1 Clutch operation	7
1.1 Assembly overview - clutch release mechanism	7
1.2 Repairing clutch release mechanism	9
2 Clutch	11
2.1 Checking ball-head pin for wear and renewing it	11
2.2 Assembly overview - clutch	12
2.3 Removing and installing clutch	13
34 - Controls, housing	17
1 Selector mechanism	17
1.1 Removing and installing gear actuator VX65	17
2 Removing and installing gearbox	22
3 Transporting gearbox	23
4 Dismantling and assembling gearbox	25
4.1 Schematic overview - gearbox	25
4.2 Assembly overview - gearbox	26
4.3 Assembly overview - clutch housing	27
4.4 Assembly overview - shafts, differential, selector mechanism	28
4.5 Renewing selector shaft sleeve	29
4.6 Dismantling and assembling gearbox	30
5 Gearbox housing, clutch housing	36
5.1 Assembly overview - gearbox housing and clutch housing	36
6 Installing to engine and gearbox support	38
7 Gear oil	39
35 - Gears, shafts	40
1 Input shaft	40
1.1 Assembly overview - input shaft	40
1.2 Dismantling and assembling input shaft	42
1.3 Adjusting input shaft	48
1.4 Renewing input shaft seal	53
2 Output shaft	55
2.1 Assembly overview - output shaft	55
2.2 Dismantling and assembling output shaft	58
2.3 Adjusting output shaft	67
3 Reverse shaft	72
3.1 Removing and installing reverse shaft	72
39 - Final drive - differential	73
1 Oil seals	73



2	Differential	74
2.1	Assembly overview - differential	74
2.2	Dismantling and assembling differential	75
2.3	Adjusting differential	81
3	Adjustment overview	85
4	Gearbox control system	86
4.1	Overview of fitting locations - gearbox control	86