



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
2 Marking	4
2.1 Engine number/engine data	4
3 Repair instructions	12
3.1 Rules for cleanliness	12
3.2 General information	12
3.3 General repair instructions	13
3.4 Foreign objects in engine	13
3.5 Contact corrosion	13
3.6 Routing and attachment of lines	14
3.7 Fitting radiator and condensers	14
3.8 Checking vacuum system	14
10 - Removing and installing engine	15
1 Removing and installing motor	15
1.1 Removing motor	15
1.2 Separating engine and gearbox	72
1.3 Securing engine on engine and gearbox support	78
1.4 Installing engine	80
2 Assembly mountings	93
2.1 Assembly overview - assembly mountings	93
2.2 Removing and installing engine mounting	103
2.3 Removing and installing gearbox mountings	107
2.4 Removing and installing pendulum support	112
2.5 Supporting engine in installation position	115
2.6 Adjusting assembly mountings	149
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	152
13 - Crankshaft group	154
1 Cylinder block (pulley end)	154
1.1 Assembly overview - poly V-belt drive	154
1.2 Removing and installing poly-V belt	158
1.3 Removing and installing tensioner for poly V-belt	162
1.4 Removing and installing vibration damper	163
1.5 Removing and installing engine support	167
1.6 Renewing crankshaft oil seal - belt pulley end	171
2 Cylinder block, gearbox end	174
2.1 Assembly overview - cylinder block, gearbox end	174
2.2 Removing and installing flywheel	176
2.3 Removing and installing sealing flange on gearbox side	178
3 Crankshaft	189
3.1 Crankshaft dimensions	189
3.2 Renewing needle bearing in crankshaft	189
4 Pistons and conrods	192
4.1 Assembly overview - pistons and conrods	192



4.2	Removing and installing pistons	195
4.3	Checking pistons and cylinder bores	196
4.4	Separating new conrod	198
4.5	Checking radial clearance of conrods	199
4.6	Removing and installing oil spray jets	199
4.7	Setting piston to TDC position	201
15	- Cylinder head, valve gear	205
1	Cylinder head	205
1.1	Assembly overview - cylinder head	205
1.2	Assembly overview - camshaft housing	207
1.3	Removing and installing cylinder head	210
1.4	Removing and installing camshaft housing	213
1.5	Checking compression	218
2	Toothed belt drive	221
2.1	Assembly overview - toothed belt cover	221
2.2	Assembly overview - toothed belt	221
2.3	Removing and installing toothed belt	223
2.4	Preassembling and installing test tool VAS 611 007	230
2.5	Checking valve timing	238
2.6	Adjusting valve timing	241
2.7	Removing toothed belt from camshaft	252
3	Valve gear	260
3.1	Assembly overview - valve gear	260
3.2	Measuring axial play of camshaft	262
3.3	Removing and installing camshaft oil seal	263
3.4	Removing and installing camshaft adjuster	270
3.5	Removing and installing camshaft control valve 1 N205	282
3.6	Removing and installing exhaust camshaft control valve 1 N318	283
3.7	Removing and installing valve stem seals	284
4	Inlet and exhaust valves	297
4.1	Checking valve guides	297
4.2	Checking valves	298
4.3	Valve dimensions	298
17	- Lubrication	299
1	Sump, oil pump	299
1.1	Assembly overview - sump/oil pump	299
1.2	Engine oil:	303
1.3	Removing and installing sump	303
1.4	Removing and installing oil pump	308
1.5	Removing and installing oil level and oil temperature sender G266	310
2	Engine oil cooler	312
2.1	Assembly overview - engine oil cooler	312
2.2	Removing and installing engine oil cooler	313
3	Crankcase ventilation	314
3.1	Assembly overview - crankcase breather system	314
3.2	Removing and installing oil separator	315
4	Oil filter, oil pressure switch	319
4.1	Assembly overview - oil filter/oil pressure switch	319
4.2	Removing and installing oil pressure sender G10	320
4.3	Checking oil pressure and oil pressure switch	321
4.4	Removing and installing oil filter housing	321
4.5	Removing and installing oil pressure regulating valve N428	323



19 - Cooling	325
1 Cooling system/coolant	325
1.1 Connection diagram - coolant hoses	325
1.2 Checking cooling system for leaks	326
1.3 Draining and adding coolant	331
2 Coolant pump, regulation of cooling system	359
2.1 Assembly overview - coolant pump, thermostat	359
2.2 Assembly overview - electric coolant pump	362
2.3 Assembly overview - coolant temperature sender	363
2.4 Removing and installing electric coolant pump	364
2.5 Removing and installing coolant pump	367
2.6 Removing and installing thermostat	371
2.7 Removing and installing toothed belt pulley for coolant pump	375
2.8 Removing and installing coolant temperature sender G62	377
2.9 Removing and installing radiator outlet coolant temperature sender G83	380
3 Coolant pipes	385
3.1 Assembly overview - coolant pipes	385
3.2 Removing and installing coolant pipes	385
4 Radiator, radiator fan	388
4.1 Assembly overview - radiator/radiator fan	388
4.2 Assembly overview - radiator cowl and radiator fan	398
4.3 Assembly overview - radiator blind	400
4.4 Removing and installing radiator	403
4.5 Removing and installing water radiator for charge air cooling circuit	428
4.6 Removing and installing radiator cowl	434
4.7 Removing and installing radiator fan V7	441
4.8 Removing and installing radiator blind	443
4.9 Removing and installing radiator blind control motor V544	445
21 - Turbocharging/supercharging	451
1 Turbocharger	451
1.1 Assembly overview - turbocharger	451
1.2 Removing and installing turbocharger	454
1.3 Removing and installing charge pressure positioner V465	461
1.4 Removing and installing connection for turbocharger	463
2 Charge air system	468
2.1 Assembly overview - charge air system	468
2.2 Removing and installing charge air cooler	470
2.3 Removing and installing charge pressure sender GX26	474
2.4 Checking charge air system for leaks	475
2.5 Removing and installing air pipe	477
24 - Mixture preparation - injection	480
1 Injection system	480
1.1 Overview of fitting locations - injection system	480
2 Injectors	493
2.1 Assembly overview - fuel rail with injectors	493
2.2 Removing and installing fuel rail	496
2.3 Removing and installing injectors	497
2.4 Cleaning injectors	512
3 Air filter	514
3.1 Assembly overview - air filter housing	514
3.2 Removing and installing air filter housing	522
3.3 Removing air duct on lock carrier	525



4	Intake manifold	528
4.1	Assembly overview - intake manifold	528
4.2	Removing and installing intake manifold	530
4.3	Removing and installing throttle valve module GX3	537
4.4	Cleaning throttle valve module GX3	539
5	Senders and sensors	541
5.1	Assembly overview - actuator for structure-borne sound R214 and control unit for structure-borne sound J869	541
5.2	Removing and installing fuel pressure sender G247	543
5.3	Checking fuel pressure sender G247	545
5.4	Removing and installing intake manifold sender GX9	548
5.5	Removing and installing exhaust gas pressure sensor 1 G450	548
6	Engine control unit	551
6.1	Assembly overview - engine control unit	551
6.2	Removing and installing engine control unit J623	554
7	High-pressure pump	565
7.1	Assembly overview - high-pressure pump	565
7.2	Removing and installing high-pressure pump	566
7.3	Removing and installing high-pressure pipe	568
8	Lambda probe	570
8.1	Assembly overview - Lambda probe	570
8.2	Removing and installing Lambda probe	571
26	- Exhaust system	574
1	Exhaust pipes and silencers	574
1.1	Assembly overview - silencers	574
1.2	Separating exhaust pipes from silencers	583
1.3	Removing and installing silencer	587
1.4	Aligning exhaust system free of stress	599
1.5	Checking exhaust system for leaks	600
1.6	Installation position of clamp	600
2	Emission control	604
2.1	Assembly overview - emission control	604
2.2	Removing and installing catalytic converter	612
2.3	Removing and installing particulate filter	616
28	- Ignition system	617
1	Ignition system	617
1.1	Assembly overview - ignition system	617
1.2	Removing and installing ignition coils with output stage	619
1.3	Removing and installing knock sensor 1 G61	622
1.4	Removing and installing Hall sender	624
1.5	Removing and installing engine speed sender G28	625