



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on high-voltage vehicles	1
1.2 Safety measures when working with pyrotechnic components	2
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	4
1.4 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	4
1.5 Checking airbag securing parts after an accident	5
1.6 Accident without airbag triggering	6
1.7 Checking seat belts	6
1.8 Check belt webbing	6
1.9 Checking inertia reel (locking mechanism)	6
1.10 Visually checking belt buckle	7
1.11 Check operation of belt buckle	7
1.12 Checking belt relays, and buckle tongues	7
1.13 Checking securing parts and anchorage points after an accident	7
<b>2 Repair notes</b>	<b>9</b>
2.1 Contact corrosion	9
2.2 Routing and attachment of lines	9
2.3 Safety notes for reworking CFRP components	9
<b>68 - Interior equipment</b>	<b>10</b>
<b>1 Compartments/covers</b>	<b>10</b>
1.1 Overview of fitting locations - storage compartments/covers	10
1.2 Assembly overview - driver side footwell cover	11
1.3 Assembly overview - front passenger side footwell cover	12
1.4 Assembly overview - steering column trim	13
1.5 Removing and installing driver side footwell cover	13
1.6 Removing and installing front passenger side footwell cover	15
1.7 Removing and installing steering column trim	16
<b>2 Centre console</b>	<b>19</b>
2.1 Assembly overview - centre console	19
2.2 Removing and installing centre console	19
<b>69 - Passenger protection</b>	<b>22</b>
<b>1 Seat belts</b>	<b>22</b>
1.1 Overview of fitting locations - seat belts and anchorage points	22
1.2 Assembly overview - three-point seat belt	23
1.3 Assembly overview - belt buckle	24
1.4 Removing and installing front three-point seat belt	24
1.5 Removing and installing belt buckle	27
<b>2 Airbag system</b>	<b>30</b>
2.1 Overview of fitting locations - airbag system	30
<b>3 Airbag control unit</b>	<b>31</b>
3.1 Assembly overview - airbag control unit	31
3.2 Removing and installing airbag control unit J234	31
<b>4 Emergency exit control unit</b>	<b>34</b>
4.1 Assembly overview - emergency exit control unit	34
4.2 Removing and installing emergency exit control unit	34
4.3 Fault finding for emergency exit control unit	36
<b>5 Driver's airbag</b>	<b>39</b>



5.1	Assembly overview - driver side airbag	39
5.2	Removing and installing driver side airbag igniter N95	39
<b>70</b>	<b>- Trim, insulation</b>	<b>42</b>
<b>1</b>	<b>Door trims</b>	<b>42</b>
1.1	Assembly overview – door trim panel	42
1.2	Removing and installing front door trim	43
1.3	Display unit for digital exterior mirror	47
<b>2</b>	<b>Dash panel</b>	<b>48</b>
2.1	Assembly overview - dash panel	48
2.2	Removing and installing dash panel	48
2.3	Removing and installing dash panel vents	52
<b>3</b>	<b>Dash panel central tube</b>	<b>56</b>
3.1	Assembly overview – central tube for dash panel	56
3.2	Removing and installing central tube for dash panel	57
<b>4</b>	<b>Interior trims</b>	<b>60</b>
4.1	Overview of fitting locations - interior trims	60
4.2	Assembly overview - sill panel moulding	61
4.3	Assembly overview - steering column trim	62
4.4	Assembly overview – right B-pillar trim	63
4.5	Assembly overview - side trim panel	64
4.6	Assembly overview – upper C-pillar trim	65
4.7	Assembly overview – A-pillar trim	66
4.8	Assembly overview – floor covering	68
4.9	Removing and installing sill panel moulding	68
4.10	Removing and installing steering column trim	70
4.11	Removing and installing right B-pillar trim	71
4.12	Removing and installing side trim panel	73
4.13	Removing and installing upper C-pillar trim	74
4.14	Removing and installing back panel trim	76
4.15	Removing and installing floor covering	77
<b>5</b>	<b>Luggage compartment trims</b>	<b>79</b>
5.1	Overview of fitting locations - luggage compartment trims	79
5.2	Assembly overview – lower rear lid trim	80
5.3	Removing and installing rear lid trim	80
5.4	Removing and installing storage compartment in luggage compartment	82
<b>6</b>	<b>Roof trims</b>	<b>84</b>
6.1	Assembly overview - moulded headliner	84
6.2	Removing and installing moulded headlining	85
<b>72</b>	<b>- Seat frames</b>	<b>86</b>
<b>1</b>	<b>Front seats</b>	<b>86</b>
1.1	Assembly overview - front seat	86
1.2	Removing and installing driver seat	87
1.3	Removing and installing front passenger seat	89