



Contents

50 - Body - front	1
1 Front bracket	1
1.1 Assembly overview – brackets at front	1
2 Plenum chamber	2
2.1 Assembly overview – plenum chamber	2
55 - Bonnet, rear lid	3
1 Bonnet (hood)	3
1.1 Assembly overview - bonnet	3
1.2 Removing and installing bonnet	3
2 Rear lid	6
2.1 Assembly overview - rear lid	6
2.2 Assembly overview – rear LED module	8
2.3 Assembly overview - gas strut	9
2.4 Assembly overview – air intake grille, rear lid	10
2.5 Removing and installing rear lid	10
2.6 Adjusting rear lid	12
2.7 Removing and installing bonnet lock	17
2.8 Removing and installing hinge	19
2.9 Removing and installing striker pin	21
2.10 Removing and installing rear lid seal	22
2.11 Removing and installing gas strut	23
2.12 Releasing gas from gas strut	24
3 Tank flap unit	25
3.1 Assembly overview - tank flap unit	25
3.2 Assembly overview – charging socket flap	26
3.3 Removing and installing tank flap unit	26
3.4 Removing and installing charging socket flap	28
57 - Front doors, door components, central locking	30
1 Repair instructions	30
1.1 Minimum curing periods	30
1.2 Fitting instructions	30
1.3 Materials	30
1.4 Preparing new component for installing	31
1.5 Cleaning off excess adhesive	31
2 Door	32
2.1 Assembly overview - door	32
2.2 Assembly overview – door hinge	33
2.3 Assembly overview – door exterior shell with crash reinforcement	35
2.4 Assembly overview – door structure	36
2.5 Removing and installing inner door seal	36
2.6 Removing and installing door	37
2.7 Adjusting door	41
2.8 Adjusting striker pin	43
2.9 Removing and installing door exterior shell with crash reinforcement	44
2.10 Renewing door exterior shell, upper part	46
2.11 Renewing lower part of door exterior shell with crash reinforcement	51
2.12 Removing and installing gas strut	55
3 Door components	57
3.1 Assembly overview - door components	57
3.2 Assembly overview - window regulator	58



3.3	Assembly overview - door handle and door lock	59
3.4	Removing and installing striker pin	60
3.5	Removing and installing driver door lock unit VX21	61
3.6	Removing and installing window regulator	63
4	Central locking	65
4.1	Overview of fitting locations - central locking	65
4.2	Removing and installing ignition key battery	66
63	- Bumpers	67
1	Bumper, front	67
1.1	Assembly overview - front bumper cover	67
1.2	Assembly overview - add-on parts	68
1.3	Assembly overview - front spoiler	69
1.4	Assembly overview - bumper carrier	70
1.5	Removing and installing bumper cover	70
2	Rear panel	73
2.1	Assembly overview - rear cross panel	73
2.2	Assembly overview - rear spoiler	75
2.3	Assembly overview - cross member	76
2.4	Assembly overview - parking aid	77
2.5	Removing and installing rear cross panel	77
2.6	Removing and installing cross member	79
64	- Glazing	81
1	Repair instructions	81
1.1	Minimum curing periods for bonded windows	81
1.2	Installation instructions for bonded windows	82
1.3	Preparing new windows for installing	83
1.4	Preparing body flange for fitting	83
1.5	Cleaning off excess adhesive	84
2	Windscreen	85
2.1	Assembly overview - windscreen	85
2.2	Removing and installing windscreen	85
3	Side window	91
3.1	Assembly overview - side window	91
3.2	Assembly overview - upper fixed door window	92
3.3	Removing and installing side window	92
3.4	Removing and installing upper fixed door window	95
4	Door window	97
4.1	Assembly overview - front door window	97
4.2	Removing and installing front door window	97
66	- Exterior equipment	100
1	Mouldings, trims, extensions	100
1.1	Assembly overview - front wheel arch trim	100
1.2	Assembly overview - rear wheel arch trim	102
1.3	Assembly overview - service flap	102
1.4	Assembly overview - rear side panel	103
1.5	Assembly overview - front side panel	104
1.6	Assembly overview - luggage compartment floor cover	106
1.7	Assembly overview - plenum chamber, luggage compartment floor	107
1.8	Removing and installing front wheel arch trim	108
1.9	Rear wheel arch trim	110
1.10	Removing and installing service flap	113
1.11	Removing and installing rear side panel	115



1.12	Removing and installing front side panel	116
1.13	Removing and installing luggage compartment floor	118
2	Base plate	121
2.1	Assembly overview – base plate	121
3	Underbody cladding	122
3.1	Assembly overview - underbody cladding	122
3.2	Assembly overview – aerodynamic trim at front and centre	123
3.3	Removing and installing front underbody cladding	124
3.4	Removing and installing centre underbody cladding	125
3.5	Removing and installing rear underbody cladding	127
4	Trim film and protective film	130
4.1	Removing and installing protective film	130
5	Exterior mirror	133
5.1	Assembly overview – digital exterior mirror with turn signal	133
6	Wheel housing liner	134
6.1	Assembly overview - front wheel housing liner	134
6.2	Assembly overview - rear wheel housing liner	135
6.3	Removing and installing front wheel housing liner	135
6.4	Removing and installing rear wheel housing liner	137
7	Lettering and emblems	140
7.1	Assembly overview - lettering and emblems	140
7.2	Removing and installing emblem	140
7.3	Removing and installing lettering	141