



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	3
1.3 Vehicle data sticker	4
2 Safety instructions	5
3 Gaps/shut lines	7
3.1 Body - front	7
3.2 Body - centre	8
3.3 Body - rear	9
4 Body dimensions	11
4.1 Body - front	11
4.2 Body - centre	12
4.3 Body - rear	13
5 Measurement and alignment system	14
6 Repair checklist	15
6.1 Introduction, preliminary work	15
6.2 Primary areas of focus at front	18
6.3 Primary areas of focus at centre	23
6.4 Primary areas of focus at rear	24
6.5 Damage to add-on parts at front	26
6.6 Damage to add-on parts at side	29
6.7 Damage to add-on parts at rear	32
6.8 Damage to underbody	35
6.9 Damage to interior components	36
6.10 Indicators	37
50 - Body - front	38
1 Monocoque - front	38
1.1 Notes on corrosion protection at contact points of monocoque, front	39
2 Renewing longitudinal member (crash reinforcement)	41
2.1 Removing	41
2.2 Installing	44
51 - Body - centre	47
1 Monocoque - centre	47
2 Renewing roof	48
2.1 Removing	49
2.2 Installing	51
3 Renewing plenum chamber	56
3.1 Removing	57
3.2 Installing	59
4 Renewing B-pillar end plate	62
4.1 Removing	63
4.2 Installing	64
5 Bonding studs to monocoque	67
5.1 Overview of fitting locations - front	68
5.2 Overview of fitting locations - centre	69
5.3 Overview of fitting locations - rear	71
5.4 Repairing studs	74
6 Threaded inserts on monocoque	77



6.1	Repairing anchor nuts on monocoque	77
6.2	Repairing Time-Sert on monocoque	80
6.3	Repairing Keensert on monocoque	82
6.4	Repairing pop rivet nuts on monocoque	84
6.5	Repairing Helicoil thread insert on monocoque	95
6.6	Repairing Tophead on monocoque	100
6.7	Preparing bonding surfaces for repair	105
53	- Body - rear	107
1	Monocoque - rear	107
1.1	Notes on corrosion protection at contact points of monocoque, rear	108
2	Renewing plenum chamber with luggage compartment floor and cross member	110
2.1	Bonding plenum chamber to luggage compartment floor and cross member	111