



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Notes on safety</b> .....	<b>1</b>
1.1 Safety precautions when handling refrigerants .....	1
1.2 Safety precautions when working on vehicles with high-voltage system .....	2
<b>2 General notes</b> .....	<b>4</b>
2.1 Identification plates .....	4
2.2 Notes concerning odours in air conditioned vehicles .....	4
<b>3 Repair notes</b> .....	<b>5</b>
3.1 Working on refrigerant circuit .....	5
<b>4 Technical data</b> .....	<b>8</b>
4.1 Capacities for refrigerant R134a .....	8
4.2 Refrigerant oil .....	8
4.3 Oil distribution .....	8
<b>87 - Air conditioning system</b> .....	<b>9</b>
<b>1 Overview of fittings locations - air conditioning system</b> .....	<b>9</b>
1.1 Overview of fitting locations - components not located in passenger compartment .....	9
1.2 Overview of fitting locations - components located in front section of passenger compartment .....	10
<b>2 Refrigerant circuit</b> .....	<b>12</b>
2.1 System overview - refrigerant circuit .....	12
2.2 Assembly overview - condenser .....	13
2.3 Removing and installing condenser .....	14
2.4 Removing and installing high-pressure sender G65 .....	14
2.5 Removing and installing refrigerant shut-off valve for heater and air conditioner unit N541 .....	15
2.6 Removing and installing receiver with dryer .....	17
2.7 Removing and installing evacuating and charging valves on low and high-pressure side .....	19
<b>3 Air conditioner compressor</b> .....	<b>22</b>
3.1 Removing and installing air conditioner compressor .....	22
3.2 Checking excess pressure relief valve on air conditioner compressor .....	25
<b>4 Control motors</b> .....	<b>27</b>
4.1 Overview of fitting locations - front control motors .....	27
4.2 Removing and installing temperature flap control motor V68 .....	27
4.3 Removing and installing defroster flap control motor V107 .....	27
4.4 Removing and installing front air distribution flap control motor V426 .....	28
<b>5 Front heater and air conditioning unit</b> .....	<b>29</b>
5.1 Assembly overview - heater and air conditioning unit .....	29
5.2 Removing and installing heater and air conditioning unit .....	30
5.3 Dismantling and assembling heater and air conditioning unit .....	34
5.4 Removing and installing evaporator .....	36
5.5 Removing and installing fresh air blower series resistor with overheating fuse N24 .....	36
5.6 Removing and installing dust and pollen filter .....	36
5.7 Removing and installing fresh air blower V2 .....	37
5.8 Removing and installing heat exchanger .....	38
5.9 Assembly overview - heat exchanger for high-voltage battery .....	38
5.10 Heat exchanger for high-voltage battery VX63 with refrigerant shut-off valve for high-voltage battery heat exchanger N542 .....	39
5.11 Removing and installing evaporator temperature sensor G308 .....	42
5.12 Assembly overview - high-voltage heater (PTC) .....	42
5.13 Removing and installing high-voltage heater (PTC) Z115 / high-voltage heater (PTC) J848 .....	43



<b>6</b>	<b>Air duct</b> .....	<b>46</b>
6.1	Removing and installing exhaust ventilation for passenger compartment .....	46
<b>7</b>	<b>Operating and display unit</b> .....	<b>47</b>
7.1	Overview of operating and display unit .....	47
7.2	Removing and installing operating and display unit .....	48
<b>8</b>	<b>Other controlling and regulating components</b> .....	<b>49</b>
8.1	Removing and installing ambient temperature sensor G17 .....	49
8.2	Removing and installing centre vent temperature sender G191 .....	49
8.3	Removing and installing footwell vent temperature sender G192 .....	50