



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Technical data</b>  | <b>1</b>  |
| 1.1 Allocation of gearbox to engine  | 1         |
| 1.2 Capacities   | 1         |
| <b>2 General notes</b>   | <b>3</b>  |
| 2.1 Rules for cleanliness  | 3         |
| <b>3 Safety instructions</b>   | <b>4</b>  |
| 3.1 General safety regulations   | 4         |
| 3.2 General warning instructions for work on vehicles with high-voltage system         | 4         |
| 3.3 Safety precautions when using testers and measuring instruments during a road test | 5         |
| 3.4 Safety precautions when working on the mechatronic unit                            | 6         |
| 3.5 Notes on tow-starting/towing   | 7         |
| <b>34 - Controls, housing</b>  | <b>8</b>  |
| <b>1 Selector mechanism</b>  | <b>8</b>  |
| 1.1 Assembly overview - selector mechanism   | 8         |
| 1.2 Assembly overview - selector lever handle  | 10        |
| 1.3 Checking and adjusting selector lever cable  | 10        |
| 1.4 Removing and installing selector mechanism   | 14        |
| 1.5 Emergency release from position P  | 16        |
| 1.6 Removing and installing selector lever handle                                      | 16        |
| 1.7 Moving push button to installation position in the handle                          | 19        |
| <b>2 Mechatronic unit</b>  | <b>22</b> |
| 2.1 Assembly overview - mechatronic unit   | 22        |
| 2.2 Removing and installing mechatronic unit for dual clutch gearbox J743              | 23        |
| 2.3 Moving mechatronic unit for dual clutch gearbox J743 into removal position by hand | 35        |
| <b>3 Removing and installing gearbox</b>   | <b>37</b> |
| 3.1 Removing gearbox   | 37        |
| 3.2 Installing gearbox   | 37        |
| 3.3 Specified torques for gearbox  | 37        |
| <b>4 Gear oil</b>  | <b>38</b> |
| 4.1 Draining and filling gear oil  | 38        |
| <b>35 - Gears, shafts</b>  | <b>42</b> |
| <b>1 Parking lock</b>  | <b>42</b> |
| 1.1 Assembly overview – parking lock   | 42        |
| 1.2 Removing and installing parking lock   | 42        |
| <b>39 - Final drive - differential</b>   | <b>46</b> |
| <b>1 Oil seals</b>   | <b>46</b> |
| 1.1 Overview of fitting locations – seals  | 46        |
| 1.2 Renewing left oil seal   | 46        |
| 1.3 Renewing right oil seal  | 49        |